SELF-DIAGNOSTIC FUNCTION

SERVICE MANUAL

FE-1 CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.	MODEL	COMMANDER	DEST	CHASSIS NO.
KV-25K5A	RM-883	Italian	SCC-Q06C-A	KV-29K5A	RM-883	Italian	SCC-Q06B-A
KV-25K5B	RM-883	French	SCC-Q02C-A	KV-29K5B	RM-883	French	SCC-Q02B-A
KV-25K5D	RM-883	AEP	SCC-Q04C-A	KV-29K5D	RM-883	AEP	SCC-Q04B-A
KV-25K5E	RM-883	Spanish	SCC-Q05C-A	KV-29K5E	RM-883	Spanish	SCC-Q05B-A
KV-25K5U	RM-883	UK	SCC-Q01C-A	KV-29K5U	RM-883	UK	SCC-Q01B-A

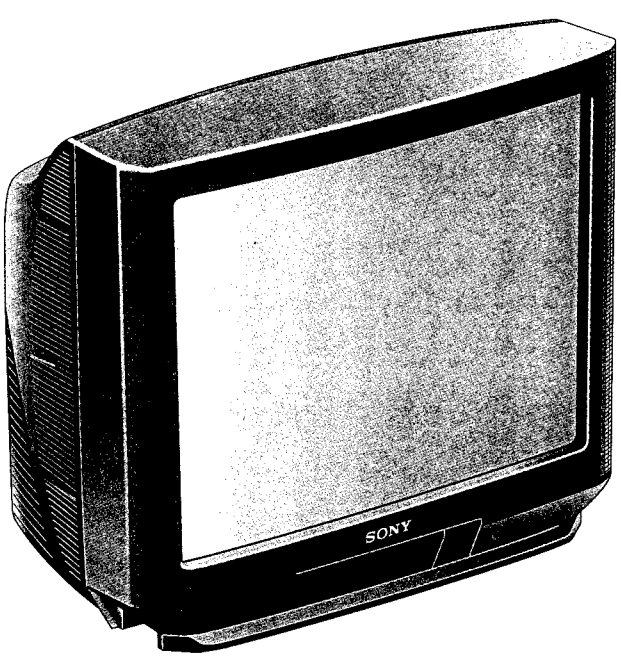



TRINITRON® COLOR TV

SONY®

MICROFILM

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
Italian	B/G/H	GERMAN Stereo	ITALIA VHF : A-H2 (C) UHF : 21-69 PAL B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10	PAL NTSC4.43, NTSC3.58 (VIDEO IN)
French	B/G/H, D/K, L, I	GERMAN/NICAM Stereo	L VHF : F02-F10 UHF : F21-F60 CABLE : B-Q B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 I UHF : B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
AEP	B/G/H, D/K	GERMAN Stereo	PAL B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Spanish	B/G/H, D/K	GERMAN/NICAM Stereo	PAL B/G VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
UK	I	NICAM Stereo	UHF : B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)

MODEL	25K5A	25K5B	25K5D	25K5E	25K5U	29K5A	29K5B	29K5D	29K5E	29K5U
Power Consumption	89 W	97 W	97 W	97 W	139 W	100.1 W	108 W	108 W	108 W	158.5 W

[PICTURE TUBE]

KV-25K5

Super Trinitron
Approx. 63cm (25 inches)
(Approx. 59cm picture measured diagonally)
110 degree deflection

KV-29K5

Super Trinitron
Approx. 72cm (29 inches)
(Approx. 68cm picture measured diagonally)
110 degree deflection

Input/Output Terminals

[REAR]

1/1 21-pin Euro connector (CENELEC standard).
- Inputs for Audio and Video signals.
- Inputs for RGB.
- Outputs of TV Video and Audio signals.

2/S2 21-pin Euro connector.
- inputs for Audio and Video signals.
- inputs for S Video.
- outputs for Audio and Video signals (selectable).

Phono Jack
- Outputs for Audio Signals

[FRONT]

3 Video input - phono jack
3 Audio inputs - phono jacks
S3 S Video input 4 pin DIN
Headphone jacks : stereo minijack

Sound output	2 x 20W (Music Power)
Power requirements	220 - 240V
Dimensions	
KV-25K5	Approx 612x515x485mm
KV-29K5	Approx 679x581x526mm
Weight	
KV-25K5	Approx 37kg
KV-29K5	Approx 49.5kg
Supplied accessories	RM-883 Remote Commander (1) IEC designated R6 battery (1)
Other features	NICAM*, FASTEXT, TOPTEXT *(KV-25K5B/25K5E/25K5U/ 29K5B/29K5E/29K5U only)

[RM-883]

Remote control system	infrared control
Power requirements	1.5V dc 1 battery IEC designation R6 (size AA)
Dimensions	Approx 65x225x21mm (w/h/d)
Weight	Approx 157g (Not including battery)

Item \ Model Name	KV-25K5A KV-29K5A	KV-25K5B KV-29K5B	KV-25K5D KV-29K5D	KV-25K5E KV-29K5E	KV-25K5U KV-29K5U
Pal Comb	OFF	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF	OFF
RGB Priority	OFF	OFF	OFF	ON	OFF
Woofer Box	OFF	OFF	OFF	OFF	OFF
Scart 1	ON	ON	ON	ON	ON
Scart 2	ON	ON	ON	ON	ON
Front in (3)	ON	ON	ON	ON	ON
Scart 4	OFF	OFF	OFF	OFF	OFF
Projector	OFF	OFF	OFF	OFF	OFF
AKB in 16:9 mode	ON	ON	ON	ON	ON
Norm B/G/H	ON	ON	ON	ON	OFF
Norm I	OFF	ON	OFF	OFF	ON
Norm D/K	OFF	ON	ON	ON	OFF
Norm AUS	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF	OFF
Teletext	ON	ON	ON	ON	ON
Nicam Stereo	OFF	ON	OFF	ON	ON
Language Preset	Italian	French	German	Spanish	English

WARNING (KV-25K5U / KV-29K5U only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of **5 AMP** capacity. Should the fuse need to be replaced, use a **5 AMP FUSE** approved by **ASTA** to **BS 1362**, ie one that carries the ASTA mark.

IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE OUTLET SOCKET.

When an alternative type of plug is used it should be fitted with a **5 AMP FUSE**, otherwise the circuit should be protected by a **5 AMP FUSE** at the distribution board.

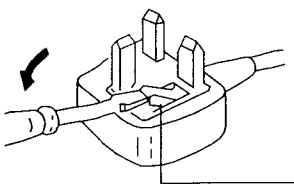

How to replace the fuse.
Open the fuse compartment with a screwdriver blade and replace the fuse.

21 pin connector (1/1 , 2 / 2)

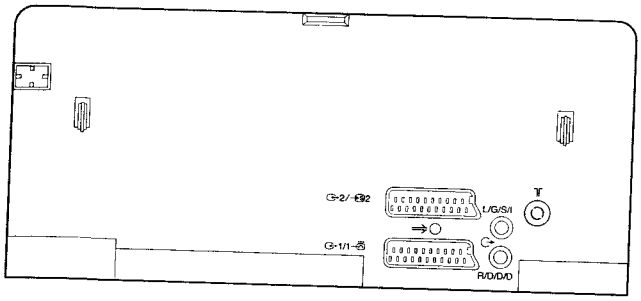

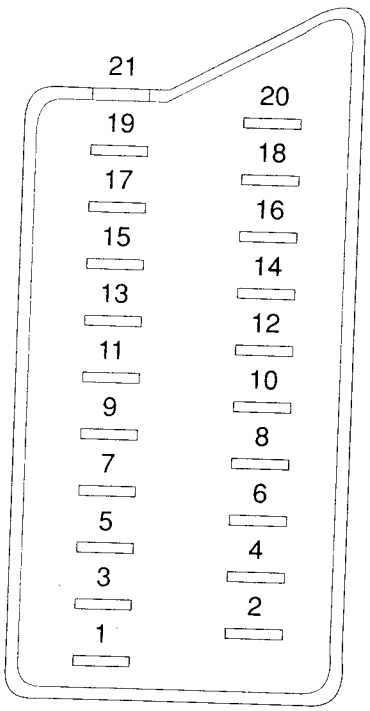

Pin No	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
2	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedence : More than 10kohm*
7	○	●	●	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedence : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground (blanking)	
15	○	–	–	Red input	0.7 +/- 3dB, 75 ohms, positive
	–	○	○	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1-3V) Low state (0.0.4V) Input impedence : 75 ohms
17	○	○	○	Ground (video output)	
18	○	○	○	Ground (video input)	
19	○	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	–	–	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	–	○	○	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Pin No	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V+/- 3dB 75 ohm, positive Sync 0.3V -3/+10dB
4	C (S signal) input	0.3V+/- 3dB 75 ohm, positive Sync

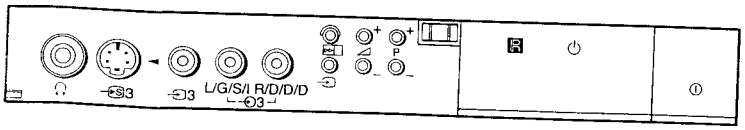

TABLE OF CONTENTS

Section *Title* *Page*

1. GENERAL

Overview of TV buttons 6
Using Select Mode 6
Adjusting the Picture 7
Adjusting the Sound 7
Using the Sleep Timer 8
Viewing Teletext 8
Exchanging Programme Pos 9
Manually Tuning the TV 9
Fine-Tuning Channels 10
Using Optional Equipment 10
Troubleshooting 11
Specifications 11

2. DISASSEMBLY

2-1. Rear Cover Removal 12
2-2. Chassis Assy Removal 12
2-3. Service Position 13
2-4. H1 Board Removal 13
2-5. S1 Board Removal 13
2-6. Picture Tube Removal 14
2-7. Removal and Replacement of the Main - Bracket bottom plates 15

3. SET-UP ADJUSTMENTS

3-1. Beam Landing 16
3-2. Convergence 17
3-3. Screen [G2] White Balance 19
3-4. Focus 19

Section *Title* *Page*

4. CIRCUIT ADJUSTMENTS

4-1. Electrical Adjustments 20
4-2. Test Mode 2 23
4-3. FE-1 Self Diagnostic Software 24

5. DIAGRAMS

5-1. Block Diagram 25
5-2. Circuit Board Location 32
5-3. Schematic Diagrams and Printed Wiring Boards 32
* S1 Board 34
* A Board 41
* VM Board 46
* C Board 49
* H1 Board 51
5-4. Semiconductors 53
5-5. IC Blocks 55

6. EXPLODED VIEWS

6-1. Chassis 56
6-2. Picture Tube 57

7. ELECTRICAL PARTS LIST 58

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP

WARNING !!

AN ISOLATING TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE'LANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENTION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÈ LORS DE TOUT DÈPANNAGE. LE CHÁSSIS DE CE RÈCEPTEUR EST DIRECTMENT RACCORDÈ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS Á LA SÈCURITÈ !!

LES COMPOSANTS IDENTIFIÈS PAR UNE TRAME ET PAR UNE MARQUE ⚠ SUR LES SCHÈMAS DE PRINCIPE, LES VUES EXPLOSÈES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÈCURITÈ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPSANTS SONY DONT LE NUMÈRO DE PIÈCE EST INDIQUÈ DANS LE PRÈSENT MANUEL OU DANS DES SUPPLÈMENTS PUBLIÈS PAR SONY.

SECTION 1 GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

Basic TV Features

Overview of TV Buttons

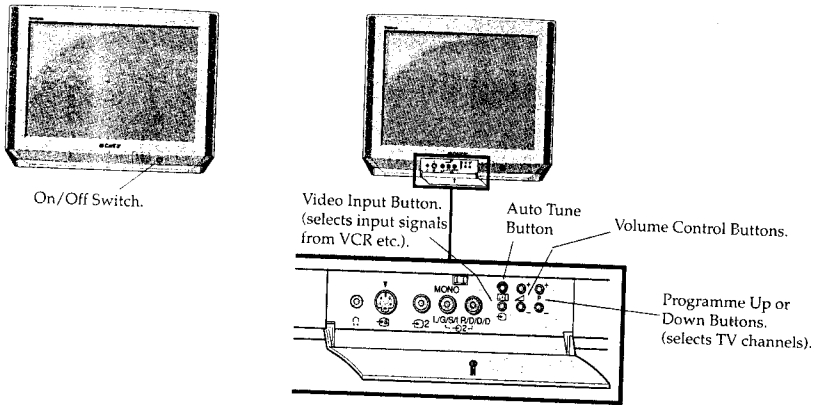
On/Off Switch.
Video Input Button. (selects input signals from VCR etc.).
Auto Tune Button
Volume Control Buttons.
Programme Up or Down Buttons. (selects TV channels).

Overview of Remote Control Buttons

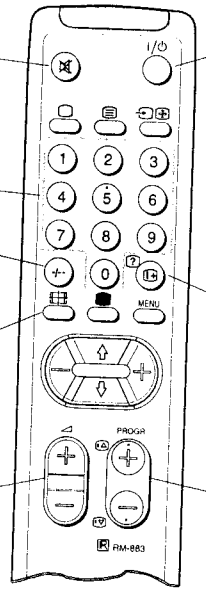

To Mute Sound

Press to mute TV sound. Press again to restore the sound.

To Select Channels

Press to select channels.

For double-digit programme numbers, e.g. 23, press -/-- first, then the buttons 2 and 3.

To Change Screen Format

Press to view programmes in 16:9 mode.
Press again to return to 4:3 mode.

To Adjust TV Volume

Press to adjust the volume of the TV.

To Temporarily Switch Off TV

Press to temporarily switch off TV. Press again to switch on TV from standby mode.
To save energy we recommend switching off completely when TV is not in use.
NOTE: After 15 -30 minutes without a TV signal and without any button being pressed, the TV switches automatically into standby mode.

To Reveal On Screen Information

Press to reveal all on-screen indications. Press again to cancel.

To Select Channels

Press to select channels.

Additional TV Features

Using Select Mode

You can select different preset picture and sound modes.

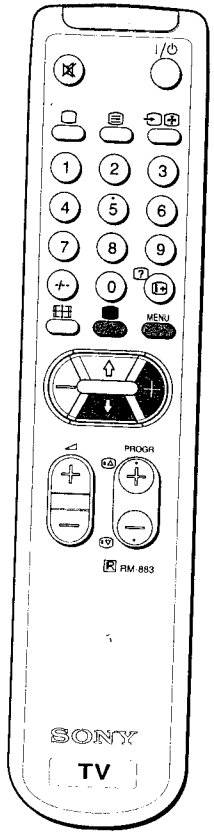

1 Press the MENU button on the remote control to display the menu on the TV screen.



2 With the cursor pointing at the symbol on the TV screen as shown, press the yellow button.

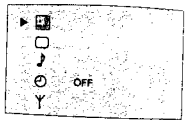

3 Press the blue button to select the desired mode:

- Personal Mode - reverts to settings made in "Adjusting the Picture and Sound" sections of the manual
- Movie Mode - for films
- Live Mode - for live broadcast programmes

4 Press the MENU button to remove the menu display from the TV screen.

Note: The mode selected in step 3 is now stored.

Changing Modes Quickly

1 Press the ■ button on the remote control to display the three different modes.

2 Press the ■ button again to select your desired mode.

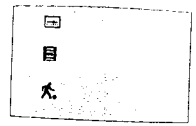

Adjusting the Picture

Although the picture is adjusted at the factory, you can modify it to suit your own requirement.

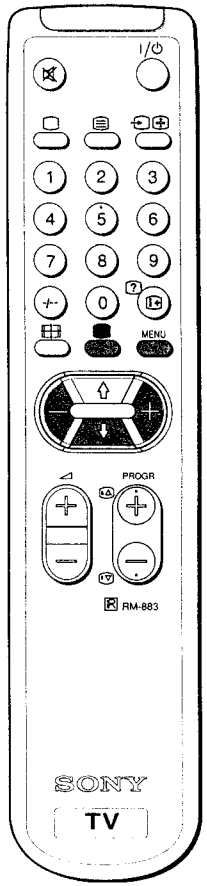

1 Press the ● button on the remote control to display the three different modes on the TV screen.



2 Press the ● button to highlight the personal mode symbol ⊡ as shown.

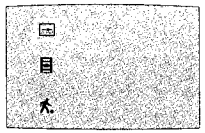

3 Press the MENU button to display the menu on the TV screen.

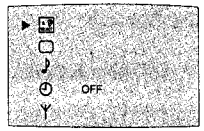

4 Press the blue button on the control to select the ▢ symbol on the TV screen then press the yellow button.

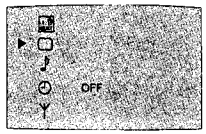

5 Press the blue button to select the item you wish to change (see below).

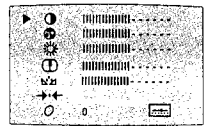

6 Press the red or yellow button to alter the selected item.

7 Press the MENU button to remove the menu display from the TV screen.

Symbol	Item
◑	• Contrast
◒	• Colour
☼	• Brightness
◫	• Sharpness
◹	• Hue control (only for NTSC video signals)
→•←	• Reset - resets to factory preset picture level
0	• Picture rotation - adjusts picture tilt (only for KV-29C5D model)
⊡	• Represents the mode selected in the "Using Select Mode" section.

Adjusting the Sound

Although the sound is adjusted at the factory, you can modify it to suit your own requirement.

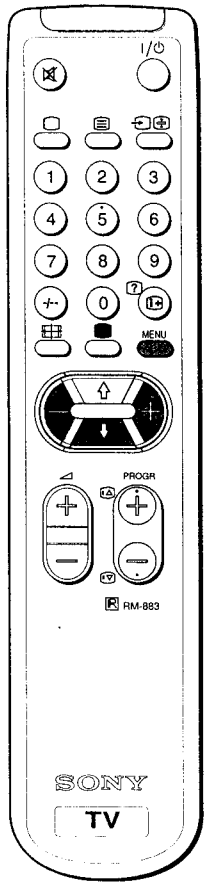

1 Press the ● button on the remote control to display the three different modes on the TV screen.



2 Press the ● button to highlight the personal mode symbol ⊡ as shown.

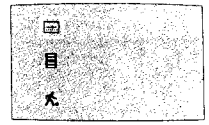

3 Press the MENU button to display the menu on the TV screen.

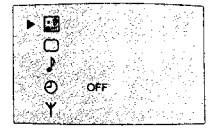

4 Press the blue button to select the ♪ symbol on the TV screen then press the yellow button.

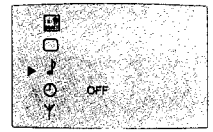

5 Press the blue button to select the item you wish to change (see below).

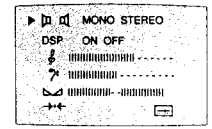

6 Press the red or yellow button to alter the selected item.

7 Press the MENU button to remove the menu display from the TV screen.

Symbol	Item
◘ ◘	• Mono sound/Stereo sound A: Channel 1 sound/B: Channel 2 sound (to select your desired language from a dual sound broadcast)
DSP	• On/Off (digital sound processor)
𝄞	• Treble
𝄢	• Bass
◹	• Balance
→•←	• Reset (resets to factory preset sound level)
⊡	• Represents the mode selected in the "Using Select Mode" section of the manual.

Using the Sleep Timer

The TV may be set to switch automatically to the standby mode after a length of time chosen by you. You may set the time in 15 minute steps up to 4 hours.

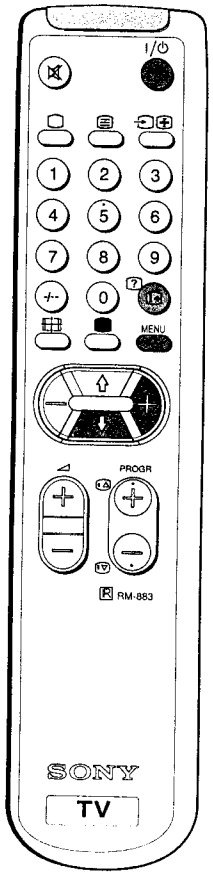

1 Press the MENU button on the remote control to display the menu on the TV screen.

2 Press the blue button on the control to select the ⏲ symbol on the TV screen, then press the yellow button.

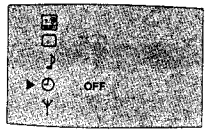

3 Press the yellow button repeatedly until the required amount of time delay appears on the screen.

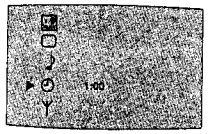

4 Once the time delay has been selected, press the MENU button to remove the on-screen display.

One minute before standby, the display shown appears on the screen.

Notes:

- When watching TV, press the ⓘ button to display time remaining.
- To return to normal operation from standby mode, press the I/⏻ button.

Viewing Teletext

Teletext is an information service transmitted by most TV stations.

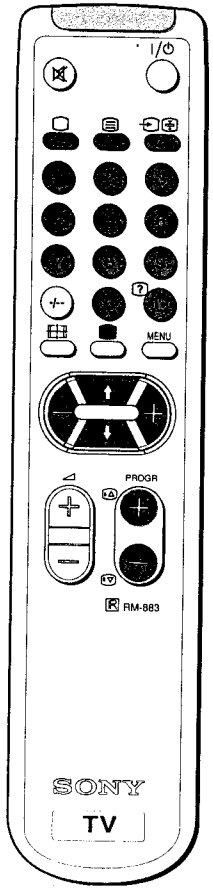

Selecting Teletext

1 Press a number button on the remote control to select the channel which carries the teletext service you wish to receive.

2 Press the ▤ button on the remote control to switch on teletext.

3 Input three digits for the page number using the numbered buttons on the control.

4 Press the ▢ button to switch off teletext.

Note: Teletext errors may occur if the broadcasting signals are weak.

Using Other Teletext Functions

To Superimpose Teletext on to the TV

Press ▤ once in teletext mode or twice in TV mode to superimpose teletext on to the TV screen.
Press ▤ again to cancel teletext mode.

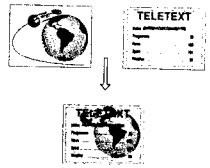

To Move to Next or Preceding Page

Press PROGR +/- on the remote control to select the previous or next page.

To Freeze a Teletext Page

Press ⊕ on the control to freeze the page.
Press ⊕ again to cancel the freeze.

Revealing concealed information (eg: answers to a quiz).

Press ? to reveal information.
Press again to conceal the information.

Using colour buttons to access pages (Fastext)

When the colour coded menu appears at the bottom of a page, press the colour button (green, red, yellow or blue) to access the corresponding page.

Exchanging Programme Positions

After tuning you may wish to change the order in which the channels appear on the TV. You may wish for example to exchange the channel on programme number 8 with the channel on programme number 4.

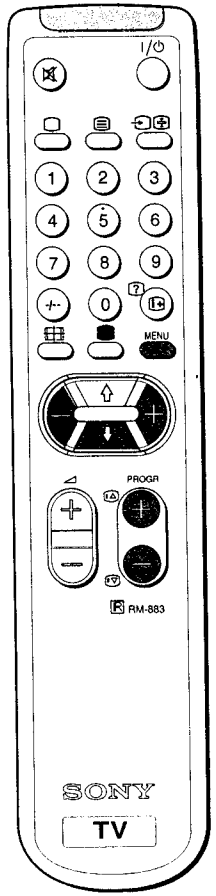

1 Press the MENU button on the remote control.



2 Press the blue button on the control to select ⋎ on the TV screen, then press the yellow button.

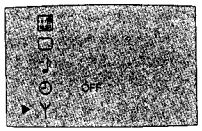

3 Press the blue button to select ⇆ then press the yellow button.

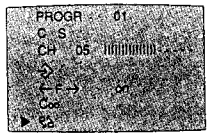

4 With the cursor pointing at PROGR on the TV screen as shown, press PROGR + or - button until the channel you wish to rearrange appears on screen, then press the blue button once.

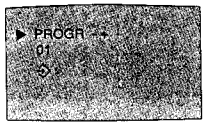

5 Press the red or yellow button to select the new programme number (e.g. PROGR 04) for your selected channel.

6 Press the blue button to select ⇆ then press the yellow button to exchange the channels.

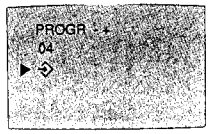

7 Repeat steps 4 to 6 if you wish to change the order of the other channels on your TV, then press MENU to return to normal TV screen.

8 Press the PROGR+/- button to view your selected channels on their new programme numbers.

Manually Tuning the TV

You have already tuned the TV to receive all available channels using the 'Automatically Tuning the TV' procedure at the start of this manual. You can however carry out this operation manually using the following instructions.

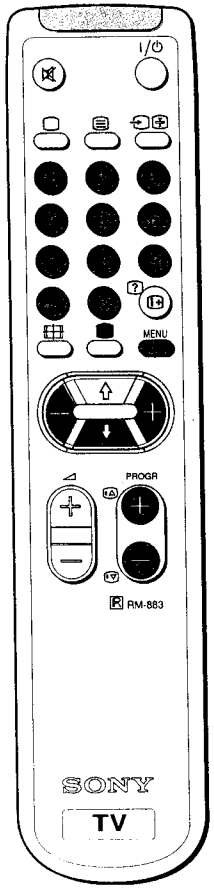

1 Press the MENU button on the remote control to display the menu on the TV screen.



2 Press the blue button to select the ⋎ symbol on the TV screen then press the yellow button.

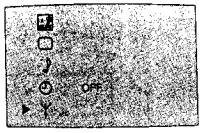

3 With the cursor pointing at PROGR on the TV screen as shown, press PROGR + or - button on the remote control to allocate a programme number to the channel (eg PROGR 01). For double digit numbers e.g. 55, press the -/-- button on the remote control then the corresponding numbered buttons.

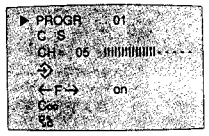

4 Press the blue button to select the channel type (C to preset a regular channel or S to preset a cable channel) then press the yellow button to highlight the desired channel type.

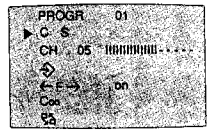

5 Press the blue button to select the tuning bar scale then press the yellow or red button once to start the channel search. (Yellow to search up the scale or red to search down). When a channel is found it appears on the TV screen.

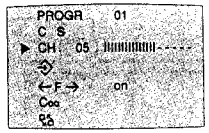

6 If you do not wish to store this channel on the programme number you selected, press the yellow or red button to continue searching for the desired channel.

7 If this is the channel you wish to store, press the blue button to select the ⇆ symbol on the screen then press the yellow button to store.

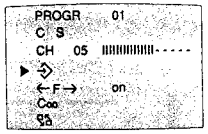

8 Repeat steps 3 to 7 if you wish to store more channels then press the MENU button to remove the menu from the TV screen.

Fine-Tuning Channels

If a channel is slightly off tune, you can use this fine tune procedure to obtain a better picture reception.

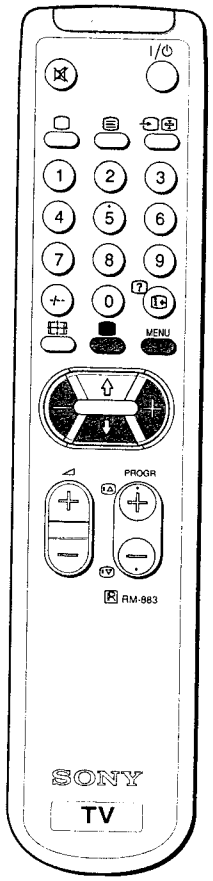

1 With the channel you wish to fine-tune on the screen, press the MENU button on the remote control. The menu display appears on the TV screen.



2 Press the blue button on the remote control to select the Y symbol on the TV screen then press the yellow button.

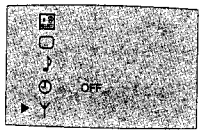

3 Press the blue button to select the ←F→ symbol on the TV screen then press the red or yellow button to adjust the tuning.

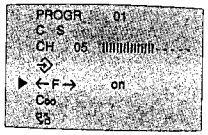

4 Press the blue button to select the ⇨ symbol on the TV screen then press the yellow button to store.

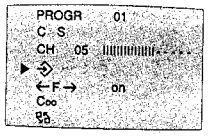

5 Press the MENU button to remove the menu from the TV screen.

Using Optional Equipment

You can connect optional audio or video equipment to your TV, such as a VCR, a camcorder or video games as shown.

Select and View the Input Signal

1 Connect your equipment to the designated TV socket.

2 Press the ⇦ button repeatedly on your remote control until the correct input symbol appears on the TV screen.

Symbol	Input signals
⇦1	• Audio/video input signal through the Euro AV connector **F**
⇦	• RGB input signal through the Euro AV connector **F**
⇦2	• Audio/video input signal through the Euro AV connector **E** or the phono sockets **C** and **D**
⇦S	• S video input signal through the socket **B**.

3 Switch on the connected equipment.

4 To return to normal TV picture, press the ▢ button on the remote control.

Note: To avoid picture distortion, do not connect equipment to the **B**, **C** or **E** connectors at the same time.

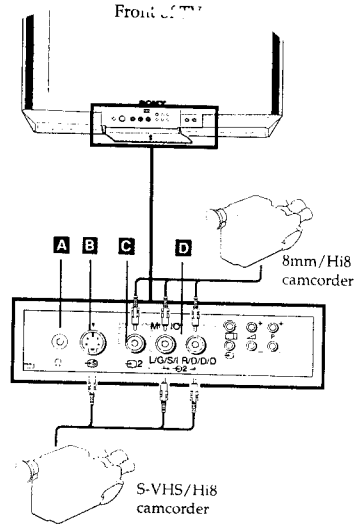

Additional Information

Connecting a VCR

We recommend you tune in the VCR signal to TV programme number '0' using the 'Manually Tuning in the TV' section of this instruction manual.

Connecting Headphones

Plug in your headphones to the socket **A** on the front of the TV set.

Connecting Decoders

Plug in decoders to the socket **F** on the rear of the TV.

Connecting to External Audio Equipment

Plug in your Hi-Fi equipment to the **G** sockets on the rear of the TV if you wish to amplify the audio output from the TV.

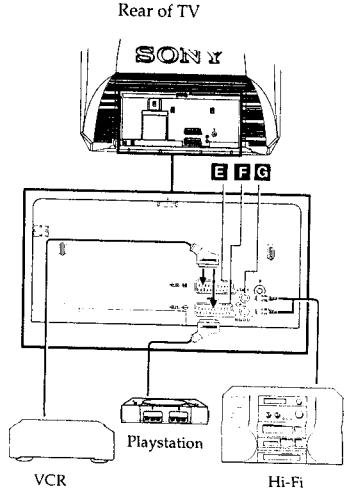

Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.

Problem	Solution
No picture (screen is dark), no sound	• Plug the TV in. • Press the ⏻ button on the front of TV. • If the ⏻ indicator is on press I/⏻ button or a programme number button on the remote control. • Check the aerial connection. • Check that the selected video source is on. • Turn the TV off for 3 or 4 seconds and then turn it on again using the ⏻ button on the front of the TV.
Poor or no picture (screen is dark), but good sound	• Using the MENU system, select the Picture Adjustment display. Adjust the brightness, picture and colour balance levels. • From the Picture Adjustment display select →• ← to return to the factory settings.
Poor picture quality when watching a RGB video source.	• Press the ⇆ button repeatedly on the remote control until the RGB symbol →▭ is displayed on the screen.
Good picture, no sound	• Press the ◿ +/– button on the remote control. • If 🔇 is displayed on the screen, press the 🔇 button on the remote control.
No colour on colour programmes	• Using the MENU system, select the Picture Adjustment display. Adjust the colour balance. • From the Picture Adjustment display select →• ← to return to the factory settings.
Distorted picture when changing programmes or selecting teletext	• Turn off any equipment connected to the 21 pin Euro connector on the rear of the TV.
Remote control does not function	• Replace the batteries.

- **If you continue to have these problems, have your TV serviced by qualified personnel.**
- **NEVER open the casing yourself.**

Specifications

TV system
I

Colour system
PAL
NTSC 3.58, 4.43 (only Video In)

Channel coverage
UHF: B21-B69

Picture tube
KV-25K5U:
Super Trinitron
Approx. 63 cm (25 inches) (Approx. 59 cm picture measured diagonally),
110 deflection
KV-29K5U:
Super Trinitron
Approx. 72 cm (29 inches) (Approx. 68 cm picture measured diagonally),
110 deflection

Inputs
- Rear Terminals
  - ⇆1 /→▭ 21-pin Euro connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output
  - ⇆2 /→S 21-pin Euro connector (CENELEC standard) including audio/video input, S-video input, Monitor audio/video output
- Front Terminals
  - ⇆2 video input - phono jack
  - ⇆2 audio inputs - phono jacks
  - →S S video input - 4 pin DIN

Outputs
- 🎧 Headphones jack - minijack stereo
- ⇆ Audio outputs - phono jacks

Sound output:
2 x 10 W (RMS)

Power consumption
KV-25K5U: 139 W
KV-29K5U: 158.5 W

Standby Power consumption
1 W

Dimensions (wxhxd)
KV-25K5U: Approx. 612 x 515 x 485 mm
KV-295KU: Approx. 679 x 581 x 526 mm

Weight
KV-25K5U: Approx. 37 kg
KV-29K5U: Approx. 49.5 kg

Accessories supplied
RM-883 Remote Control (1)
IEC designated batteries (2)

Other features
TELETEXT, Fastext

Design and specifications are subject to change without notice.

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

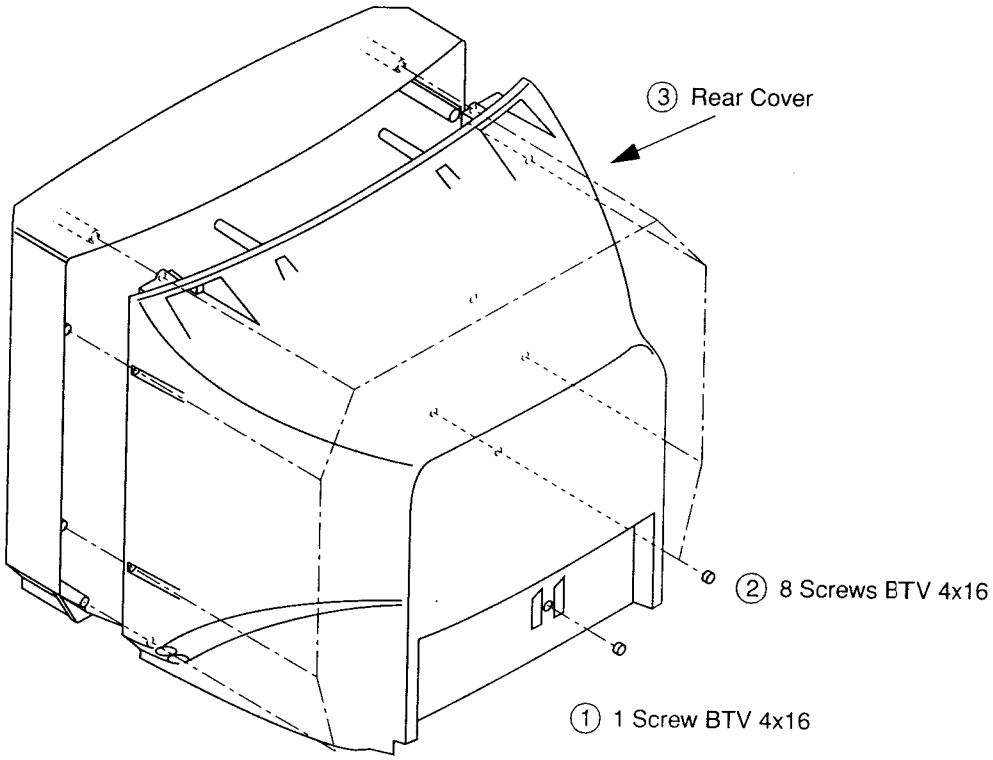

2-2. CHASSIS ASSY REMOVAL

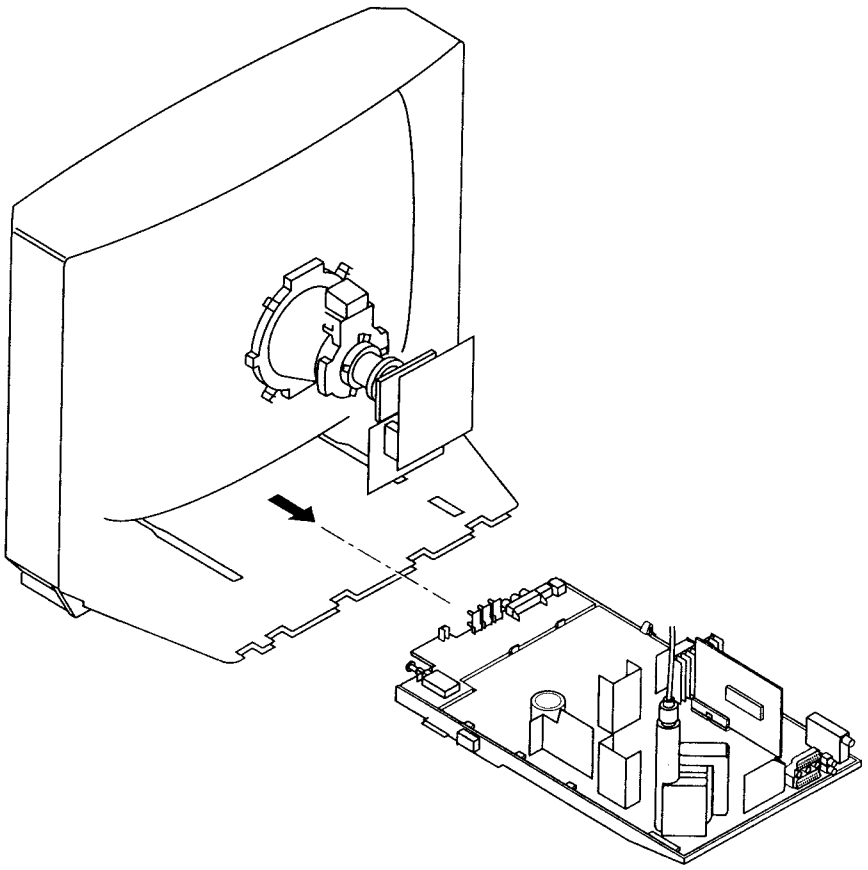

2-3. SERVICE POSITION

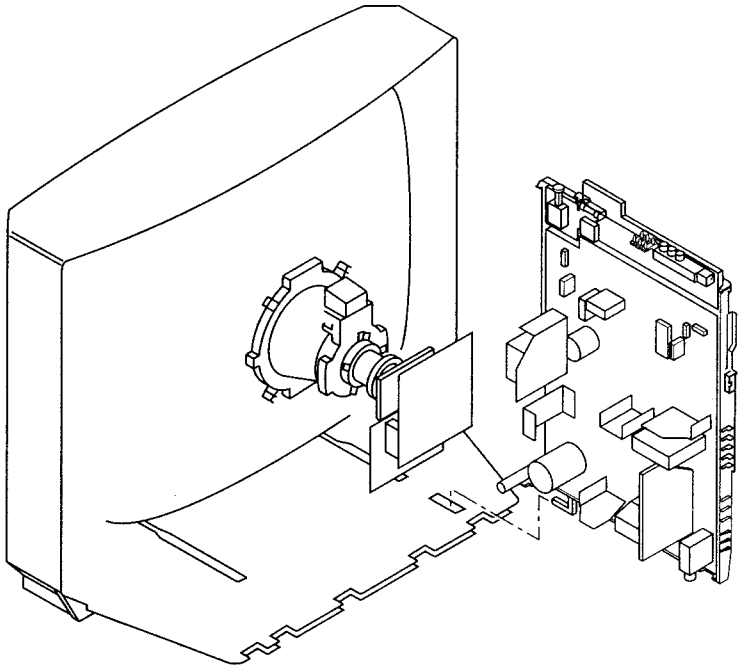

2-4. H1 BOARD REMOVAL

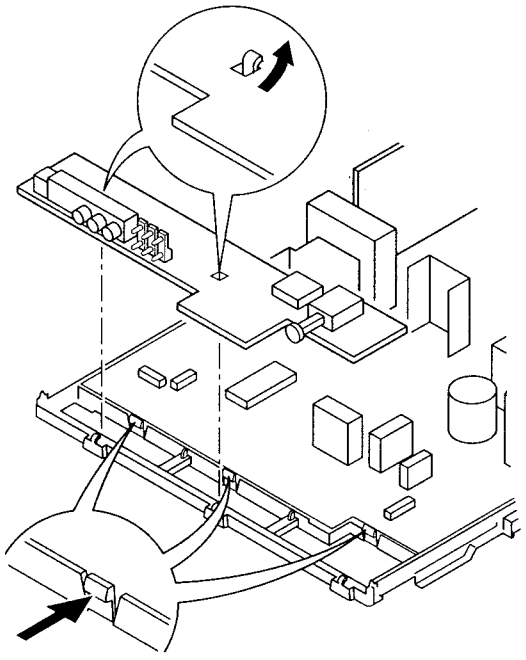

To release, push the claws in the direction of the arrow as indicated.

2-5. S1 BOARD REMOVAL

Release the clip indicated.

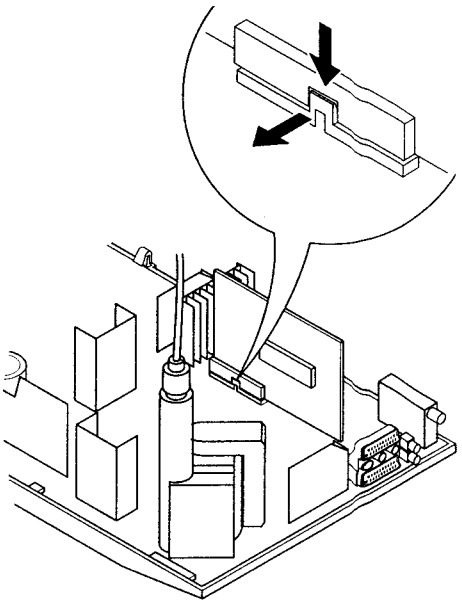

2-6. PICTURE TUBE REMOVAL

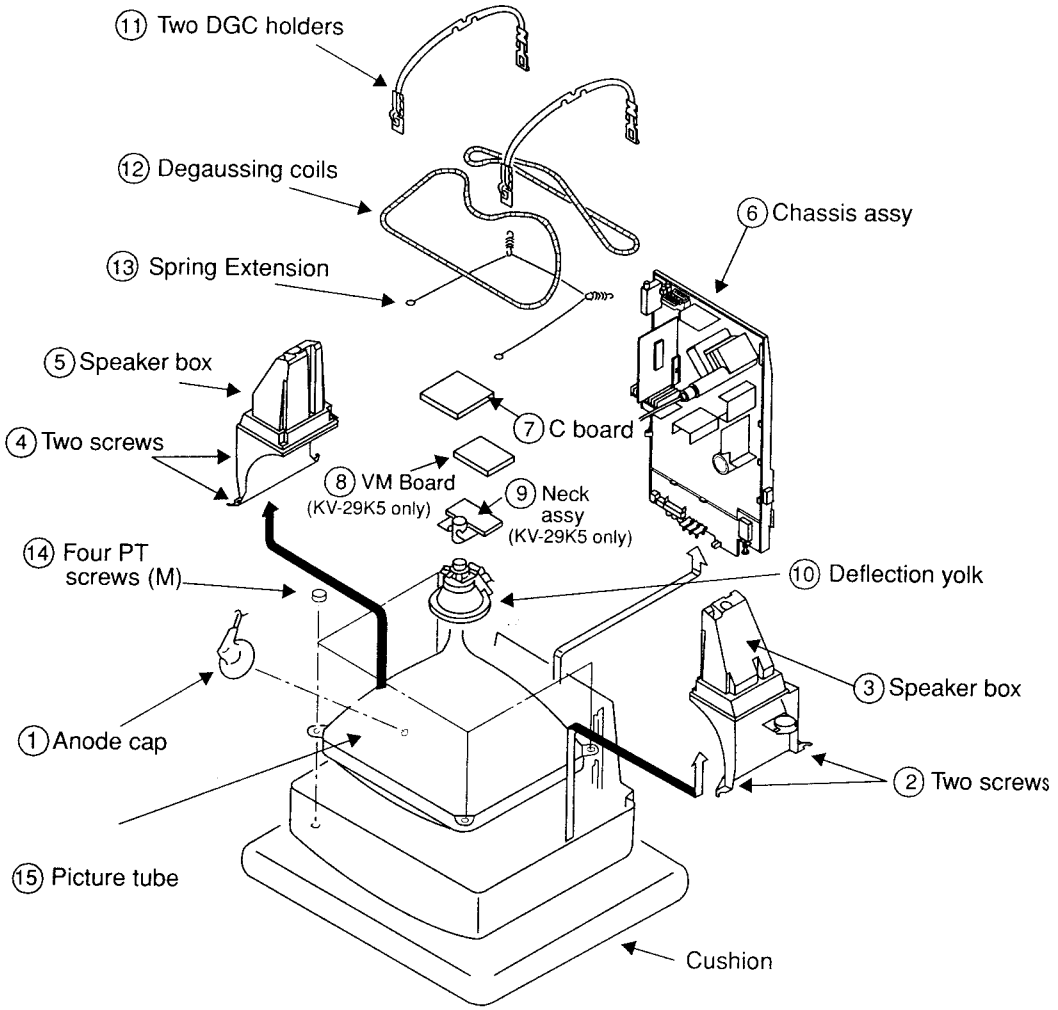

• REMOVAL OF ANODE-CAP

Note : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

* **REMOVING PROCEDURES.**

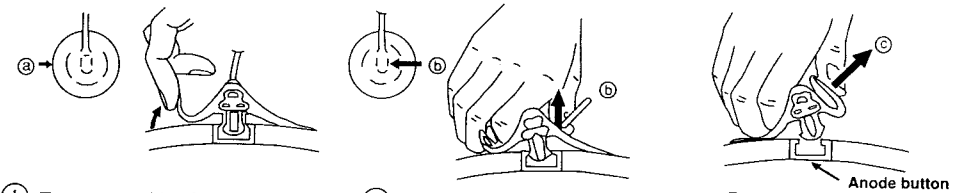

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ

• HOW TO HANDLE THE ANODE-CAP

① To prevent damaging the surface of the anode-cap do not use sharp materials.

② Do not apply too great a pressure on the rubber, as this may cause damage to the anode connector.

③ A metal fitting called a shatter hook terminal is fitted inside the rubber cap. Do not turn the rubber foot over excessively this may cause damage if the shatter hook sticks out.

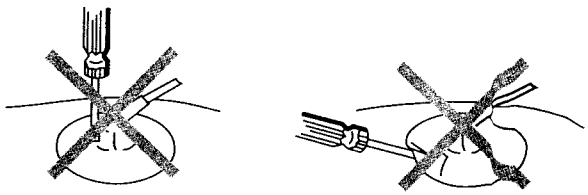

REMOVAL AND REPLACEMENT OF THE MAIN-BRACKET BOTTOM PLATES.

(1) REMOVING THE PLATES

In the event of servicing being required to the solder side of the A Board printed wiring board, the bottom plates fitted to the main chassis bracket require to be removed.
This is performed by cutting the gates with a sharp wire cutter at the locations shown and indicated by arrows.

Note : There are 2 plates fitted to the main bracket and secured by 4 gates.
Only remove the necessary plate to gain access to the printed wiring board.

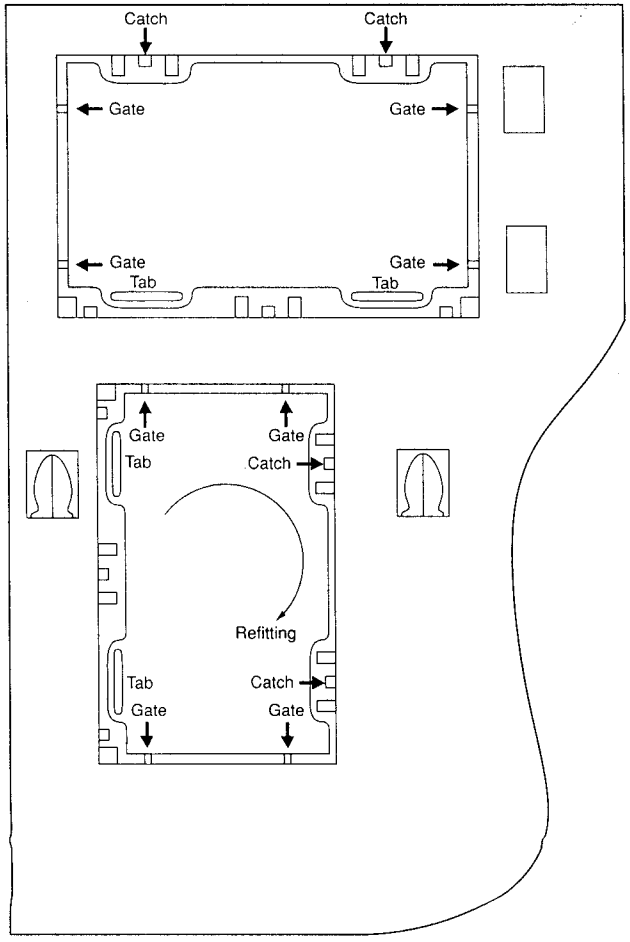

⚠ For safety reasons, on no account should the plates be removed and not refitted after servicing.

(2) REFITTING THE PLATES

Because the plates differ in size it is important that the correct plates are refitted in their original location.

Please note that the plates need to be rotated 180 degrees from the cut position to allow the tabs to be fitted in the catch positions.

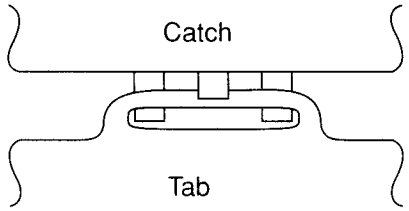

SECTION 3
SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to the following settings :

Contrast ..... 80% [or remote control normal]

Brightness 50%

Carry out the following adjustments in this order :

3-1. Beam Landing
3-2. Convergence
3-4. Focus
3-3. White balance

Note : Test equipment required
1. Color bar/pattern generator.
2. Degausser.
3. Oscilloscope.
4. Digital multimeter.
5. DC Power supply.

Preparation:

1. In order to reduce the influence of geomagnetism on the set's picture tube, face it in an easterly or westerly direction.
2. Switch on the TV set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input an all-white signal from the pattern generator. Set the Contrast and Brightness to normal.
2. Set the pattern generator raster signal to all Red.
3. Move the deflection yolk forward and adjust with the purity control so that the Red is at the centre and the Blue and Green take up equally sized areas on each side of the screen. [See Fig.3-1 - 3-3].
4. Move the deflection yolk forward and adjust so that the entire screen becomes Red. [See Fig.3-1].
5. Switch the raster signal to Blue, then to Green and verify the purity condition.
6. When the position of the deflection yolk has been determined, fasten the deflection yolk with the screws.
7. If the beam does not land correctly in all the corners, use magnets to correct it. [See Fig.3-4].

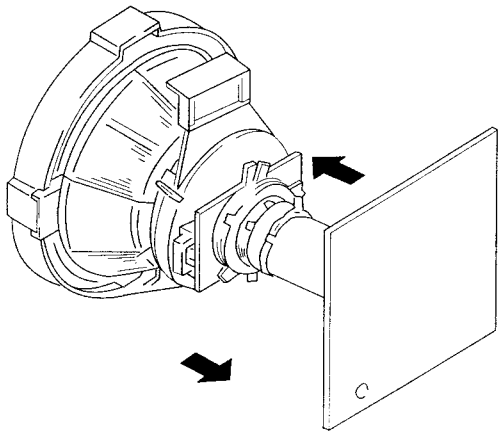

Fig. 3-1

Fig. 3-2

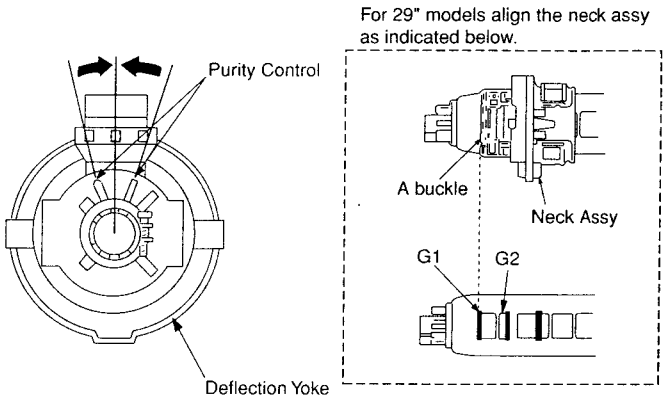

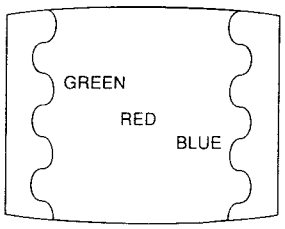

Fig. 3-3

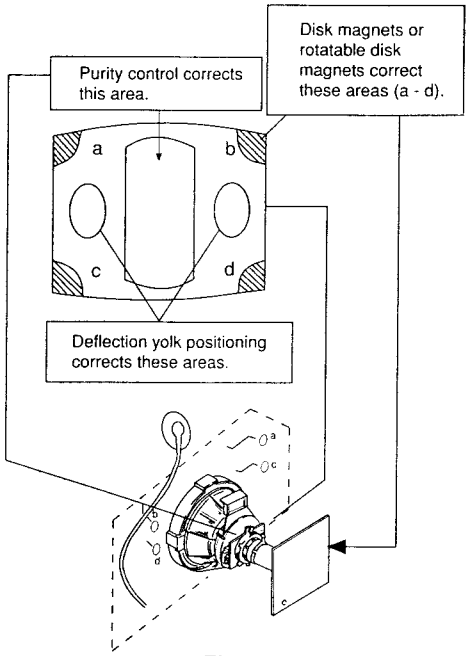

Fig. 3-4

3-2. CONVERGENCE

Preparation:

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the Brightness setting.
- Input a dot pattern from the pattern generator.

(1) Horizontal and vertical static convergence

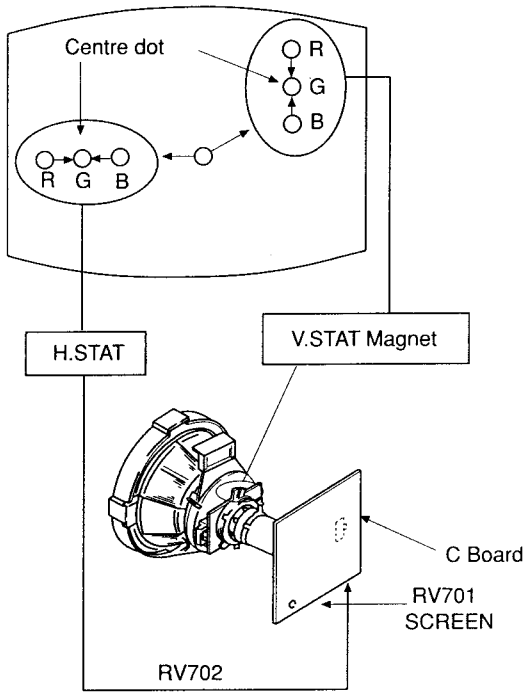

1. [Moving horizontally], adjust the H.STAT control so that the Red, Green and Blue points are on top of each other at the centre of the screen.
2. [Moving vertically], adjust the V.STAT magnet so that the Red, Green and Blue points are on top of each other at the centre of the screen.
3. If the H.STAT variable resistor is unable to bring the Red, Green and Blue points together at the centre of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner indicated below. [In this case, the H.STAT variable resistor and the V.STAT magnet influence each other].

- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

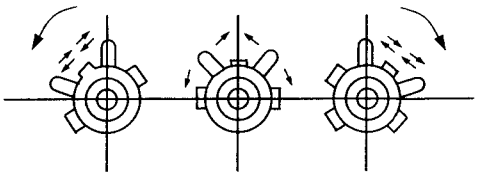

4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the Red, Green and Blue points move as indicated below.

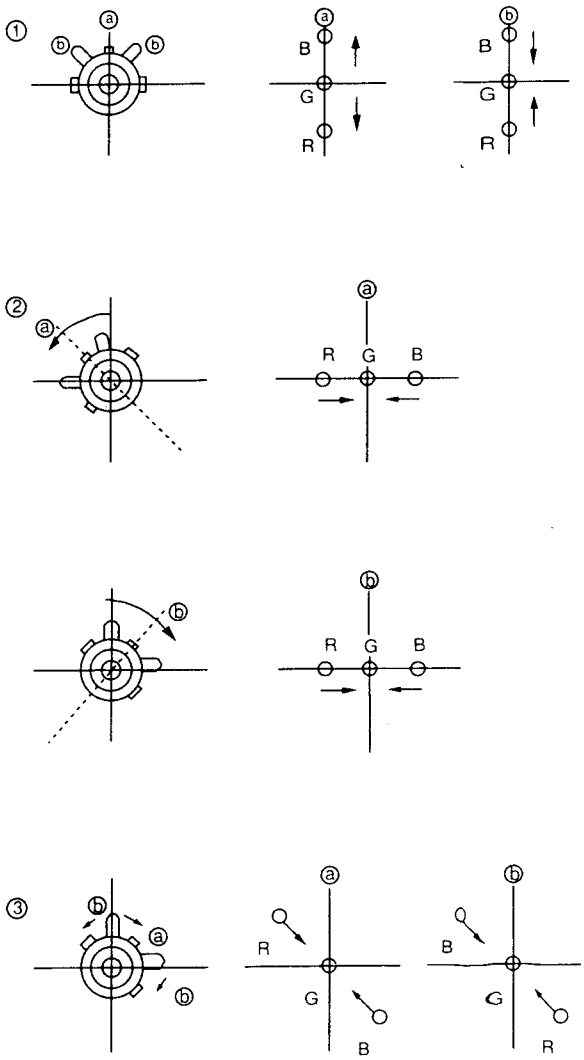

(2) Operation of the BMC (Hexapole) magnet.

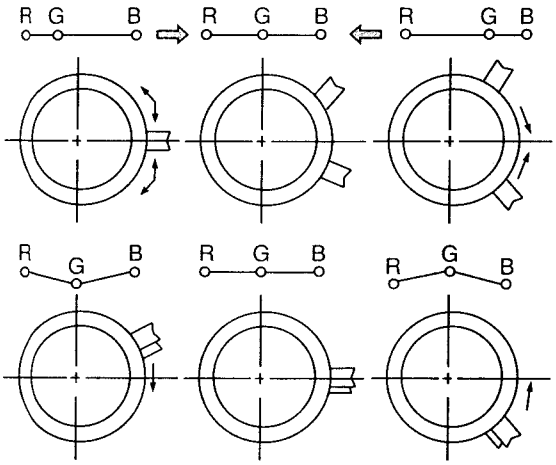

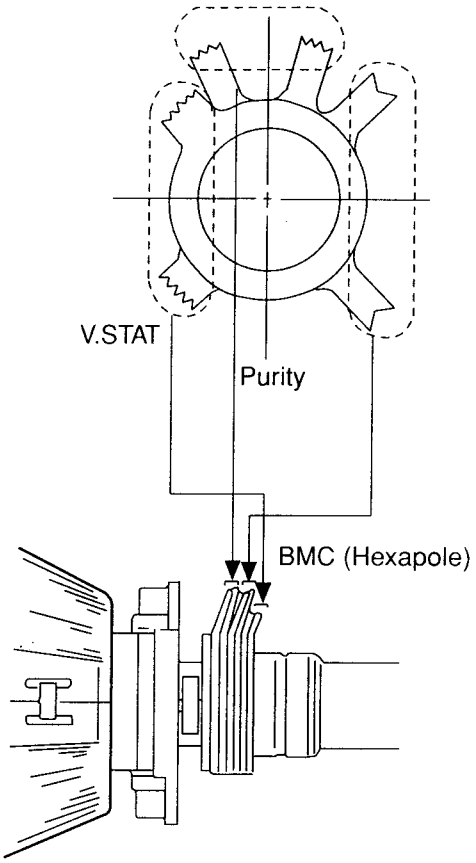

- The respective dot position resulting from moving each magnet interact, so be sure to perform adjustment whilst tracking.
  Use the H.STAT VR to adjust the Red, Green and Blue dots so that they coincide at the centre of the screen [by moving the dots in the horizontal direction].

(3) Dynamic convergence adjustment.

Preparation:

- Before starting this adjustment, adjust the horizontal and vertical static convergence.

1. Slightly loosen the deflection yolk screws.
2. Remove the deflection yolk spacer.
3. Move the deflection yolk as indicated in the figure below and optimize the convergence.
4. Tighten the deflection yolk screws.
5. Re-install the deflection yolk spacer.

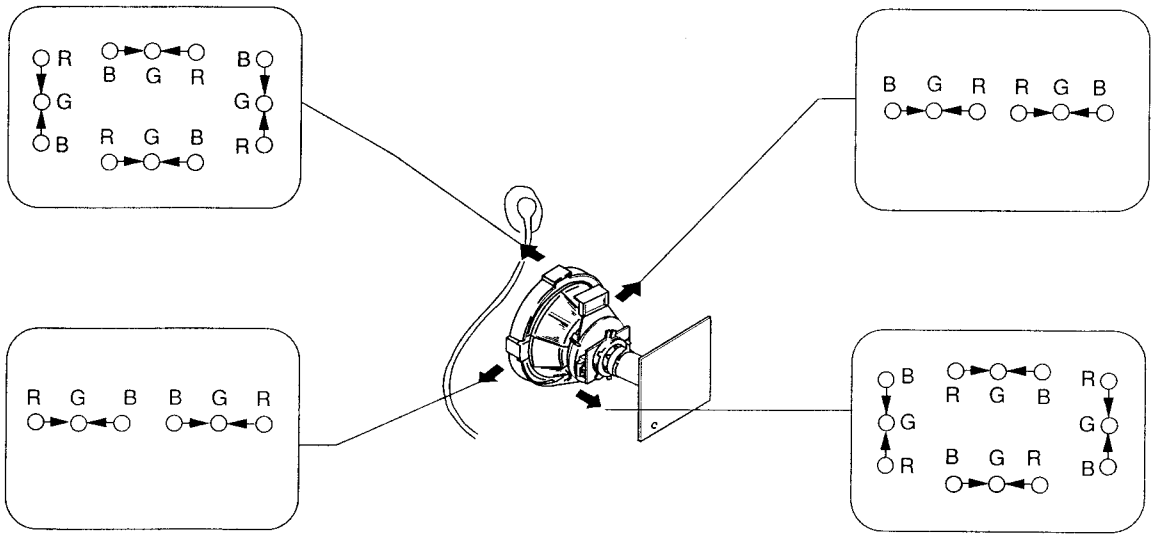

(4) **Screen corner convergence.**

- If you are unable to adjust the corner convergence properly, this can be corrected by the use of permalloy assemblies.

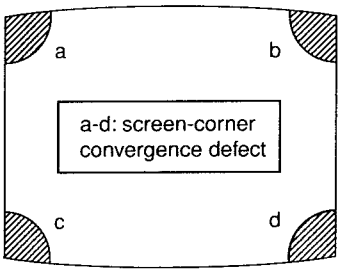

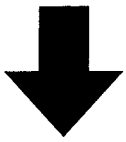

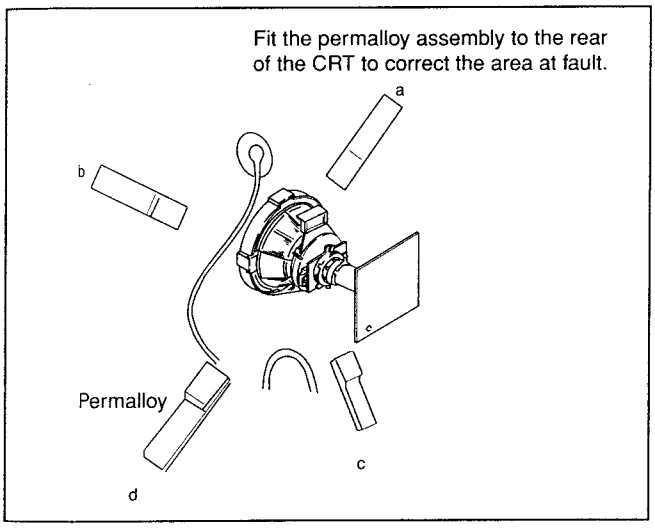

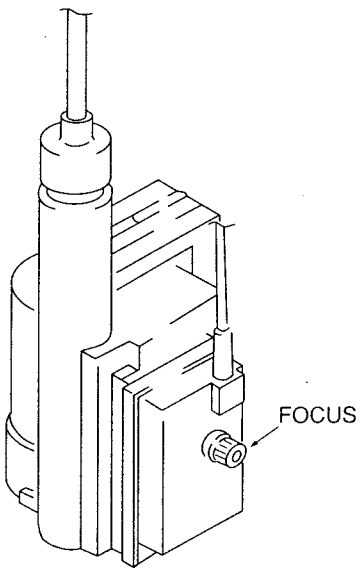

3-3. Screen [G2], White balance

G2 Setting

1. Input a dot signal from the pattern generator.
2. Set the Picture, Brightness and Colour to minimum.
3. Apply 170Vdc from an external power supply to the R, G and B cathodes of the CRT.
4. Whilst watching the picture, adjust the G2 control [RV701 SCREEN] located on the C Board to the point just before the flyback return lines disappear.

White balance adjustment

1. Input a 'PAL' all-white signal from the pattern generator.
2. Enter into the Service Mode.
3. Enter into the 'Picture' service menu.
4. Select the 'Green drive' and adjust so that the White Balance becomes optimum.
5. Select the 'Blue drive' and adjust so that the White Balance becomes optimum.
6. Set the Picture to MIN.
7. Set the 'R-cut-off' to 07.
8. Adjust the 'G-cut-off', and the 'B-cut-off' so that the White Balance becomes optimum.
10. Press the ▢ button to return to TV operation.

PICTURE	
R - Drive	Adj
G - Drive	Adj
B - Drive	Adj
R - cut - off	Adj
G - cut - off	Adj
B - cut - off	Adj
ID - start	02
ID - stop	01
ID - level	01
Bellfo	Adj
Sub Colour	Adj
Sub Brightness	Adj

3-4. FOCUS

1. Input a Phillips colour pattern
2. Set the picture settings to normal.
3. Adjust the focus control located on the Flyback transformer to bring the centre of the screen into focus.

Note :Bring only the centre area of the screen into focus, switch to an all-white pattern and confirm that the magenta ring is hardly noticed. To obtain optimum focus balance the focus setting between optimum screen centre focus and a reduced magenta ring level.

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustments to this model can be performed using the supplied Remote Commander RM-883.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch and enter into the stand-by mode.
2. Press the following sequence of buttons on the Remote Commander.

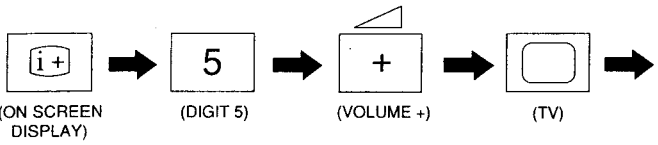

- 'TT--' will appear in the upper right corner of the screen.
  Other status information will also be displayed.

3. Press 'MENU' on the remote commander to obtain the following menu on the screen.

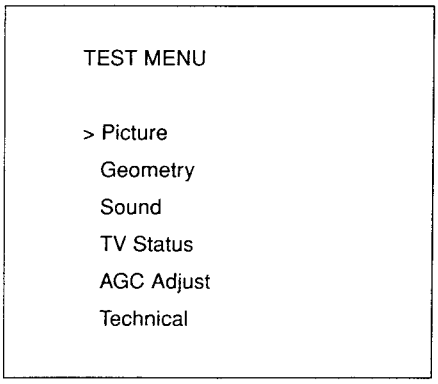

4. Move to the corresponding adjustment item using the 'Green' [up] or 'Blue' [down] buttons on the Remote Commander.
5. Press the 'Yellow' button to enter into the required menu item.
6. Press the 'Menu' button on the Remote Commander to quit the Service Mode when all adjustments have been completed.

Note : The data shown in the 'TV STATUS' table is dependant on destination and country.

PICTURE	
R - Drive	Adj
G - Drive	Adj
B - Drive	Adj
R - cut - off	Adj
G - cut - off	Adj
B - cut - off	Adj
ID - start	02
ID - stop	01
ID - level	01
Bellfo	Adj
Sub Colour	Adj
Sub Brightness	Adj

GEOMETRY	
V centre	Adj
V size	Adj
V Lin	Adj
S Corr	Adj
H Cent	Adj
H Size	Adj
Pin Amp	Adj
Corner Pin	Adj
Pin Phase	Adj
V Bow	Adj
V Angle	Adj
Upper V Lin	Adj
Lower V Lin	Adj
Left HBLK	07
Right HBLK	07
CD Mode (AV)	01

SOUND	
Nicam Error Lower	20
Nicam Error Upper	80
Nicam Error Rate	xx [Status only]
AGC Gain Level	xx [Status only]

TV STATUS	
Destination	A/L/E/U/D/B/K/R
Text Language	East/West

TECHNICAL	
GD - Secam	30
BD - Secam	31
RC - Secam	11
GC - Secam	19
BC - Secam	10
GD - Sports	30
BD - Sports	36
RC - Sports	14
GC - Sports	15
BC - Sports	17
Y - Delay (AV)	07

SUB BRIGHTNESS ADJUSTMENT

1. Input a Phillips colour pattern.
2. Press 'TEST' 'TEST' 13 on the Remote Commander.
3. Adjust the 'Sub-Brightness' data so that there is barely a difference between the 0 IRE and 10 IRE signal levels.

SUB CONTRAST ADJUSTMENT

1. Input a video signal that contains a small 100% white area on a black background
2. Set the picture control to maximum. ['TT01']
3. Connect an oscilloscope to Pin 1 of CN504 [A Board].
4. Enter into the 'Picture' service menu.
5. Adjust the 'R - Drive' data to obtain the following waveform.

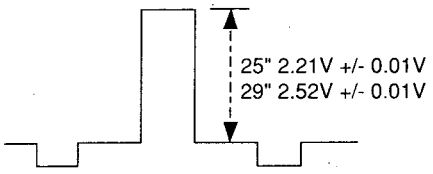

R - out Waveform

SUB COLOUR ADJUSTMENT

1. Receive a PAL colour bar signal.
2. Connect an oscilloscope to Pin 3 of CN504 [A Board].
3. Enter into the 'Picture' service menu.
4. Adjust the 'Sub Colour' data so that the Cyan, Magenta and Blue colour bars are of equal levels as indicated below.

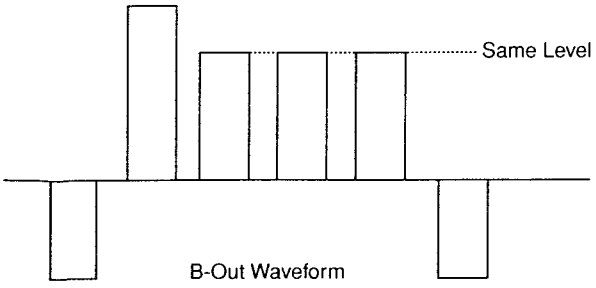

B-Out Waveform

Note: Ensure that no signal is applied to the Antenna socket while carrying out the following IF adjustments.

SYSTEM B/G, D/K, I & L I.F ADJUSTMENT

1. Input a 38.9Mhz carrier signal at 100dBuV to Pin 11 [IF output] of the tuner [TU101].
2. Measure the voltage at Pin 17 of [IC101].
3. Adjust L103 [A Board] to obtain a voltage of 2.5V +/- 0.3V.

SYSTEM L BAND 1 I.F ADJUSTMENT

1. Input a 34.0MHz carrier signal at 100dBuV to Pin 11 [IF output] of the tuner [TU101].
2. Select 'system L' + C00 [channel 00].
3. Measure the voltage at Pin 17 [IC101].
4. Adjust RV101 [A Board] to obtain a voltage of 2.5V +/- 0.3V.

TUNER AGC ADJUSTMENT

1. Receive a signal of 65dBuV / 75 ohm terminated, via the tuner antenna socket.
2. Connect a voltmeter to JW130 [A Board].
3. Enter into the 'Test Menu'.
3. Select the 'AGC Adjust' menu item.
4. Adjust the data using the Yellow and Green buttons on the Remote Commander to obtain a voltage of 3.0V +/- 0.2V.

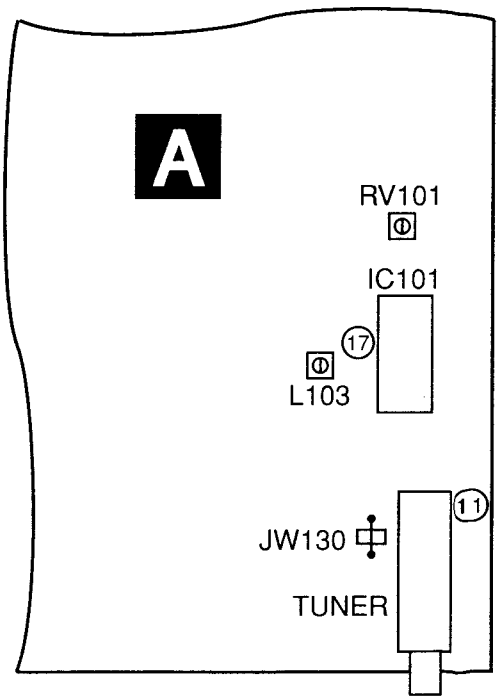

A Board component side

BELL FILTER ADJUSTMENT (Secam models only).

Note : Ensure that the TV set has been powered up for at least 1 minute to allow for drift before carrying out the following adjustment.

1. Input a video SECAM Colour Bar signal via AV1.
2. Connect an oscilloscope to pin 1 of CN504 [R-OUT] on the A board.
3. Enter into the 'Picture' menu and select 'Bell-f0'.
4. Decrease the register of 'Bell-f0' until the following waveform change between RED and BLUE is obtained.

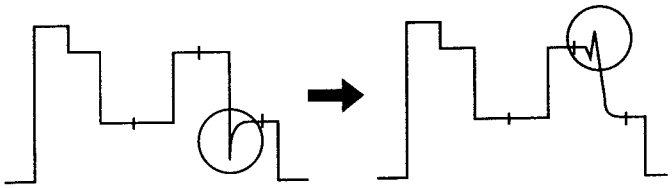

Before adjustment

After adjustment

5. When the correct waveform has been obtained add an additional 7 steps to the register.

DEFLECTION SYSTEM ADJUSTMENT

1. Enter into the 'Geometry' service menu.
2. Select and adjust each item in order to obtain the optimum image.

GEOMETRY	
V centre	Adj
V size	Adj
V Lin	Adj
S Corr	Adj
H Cent	Adj
H Size	Adj
Pin Amp	Adj
Corner Pin	Adj
Pin Phase	Adj
V Bow	Adj
V Angle	Adj
Upper V Lin	Adj
Lower V Lin	Adj
Left HBLK	07
Right HBLK	07
CD Mode (AV)	01

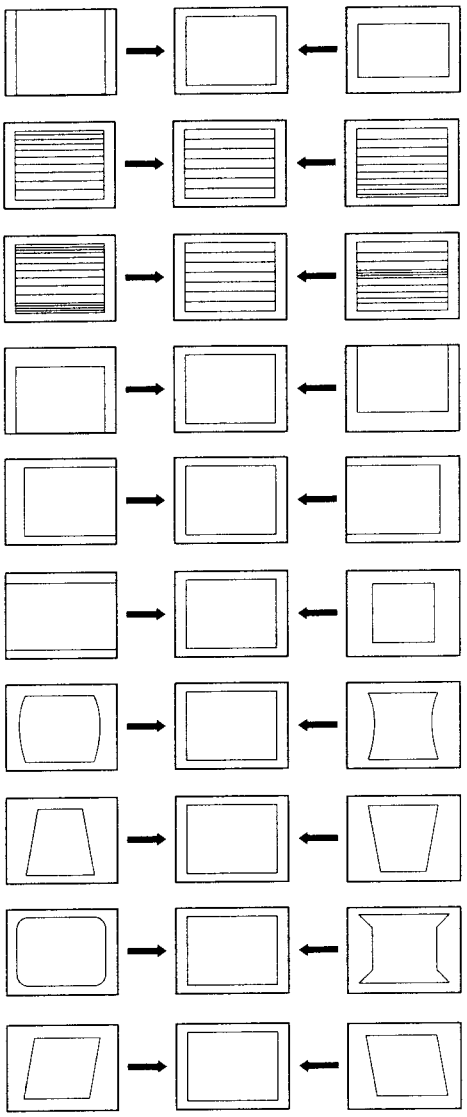

4-2. TEST MODE 2:

Is available by pressing 'TEST' button twice, OSD 'TT' appears. The functions described below are available by pressing the two numbers. To release the Test mode 2, press 0 twice, or switch the TV into stand-by mode, or press the ⏻ TV button on the remote commander.

00	Cancel Test mode
01	Picture maximum
02	Picture minimum
03	Volume 35%
04	Volume 50%
05	Volume 65%
06	Volume 80%
07	Ageing mode On/Off
08	Set shipping conditions
09	Display TV Status
10	No function
11	Sub Picture Adjustment
12	Sub Colour Adjustment
13	Sub Brightness Adjustment
14	Text H position Adjustment
15	Rotation test
16	Picture level 50%
17	Audio mute ON
18	Disable Blanking
19	No function
20	No function
21	Destination A
22	Destination L
23	Destination E
24	Destination U
25	Destination D
26	Destination B
27	Destination K
28	Destination R
29	No function
30	No function
31	Auto shutoff Disable/Enable
32	RGB priority Disable/Enable
33	Rotation On/OFF
34	Text language East/West
35	Wide CRT/4:3 CRT
36	VM ON/OFF test
37	No function
38	No function
39	No function
40	No function
41	Re-initialize the NVM [Only when Prog=59]

42	Re-initialise geometry settings [Only when Prog=59]
43	No function
44	No function
45	No function
46	No function
47	No function
48	Set NVM as NON Virgin [Only when Prog=59]
49	Set NVM as Virgin [Only when Prog=59]
50	No function
51	No function
52	No function
53	No function
54	No function
55	No function
56	No function
57	No function
58	No function
59	No function
60	No function
61	Auto AGC Adjust
62	Alternative Dest B Autotuning
63	Enable/Disable Y/C input
64	Signal Quality Check for Auto Tune
65	Signal Quality NOT Checked for Auto Tune
66	No function
67	Manual AGC Adjust
68 -100	No function

4-3. FE-1 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the FE-1 chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted) See Table 1., non fatal errors are reported using this method.
Each time the software detects an error it is stored within the NVM. See Table 2.

Table 1

ERROR	LED ERROR COUNT
No error	00
Not allowed (may be confused with Sircs response flash!)	01
Protection circuit trip < ANY TIME >	02
Reserved	03
No vertical sync	04
AKB	05
IIC bus clock and/or data lines low at Power ON	06
NVM no IIC bus acknowledge at Power ON	07
Jungle controller no IIC acknowledge at Power ON	08
Tuner no acknowledge at Power ON	09
Sound processor no acknowledge at Power ON	10

Flash Timing Example : e.g. error number 3

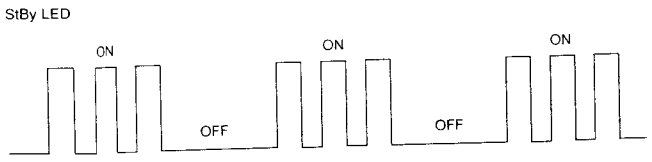

How to enter into Table 2

1. Turn on the main power switch of the TV set and enter into the 'Standby Mode'.
2. Press the following sequence of buttons on the Remote Commander.

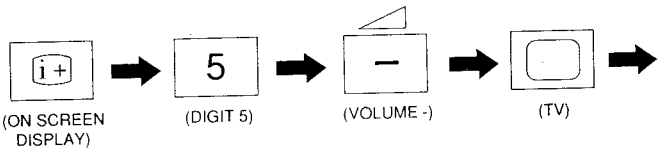

3. The following table will be displayed indicating the error count.

Table 2

Error	Times
2	-
3	-
4	-
5	-
6	-
7	-
8	-
9	-
10	-

Note: To clear the error count data press '80' on the Remote commander.

5-1 BLOCK DIAGRAMS (1)

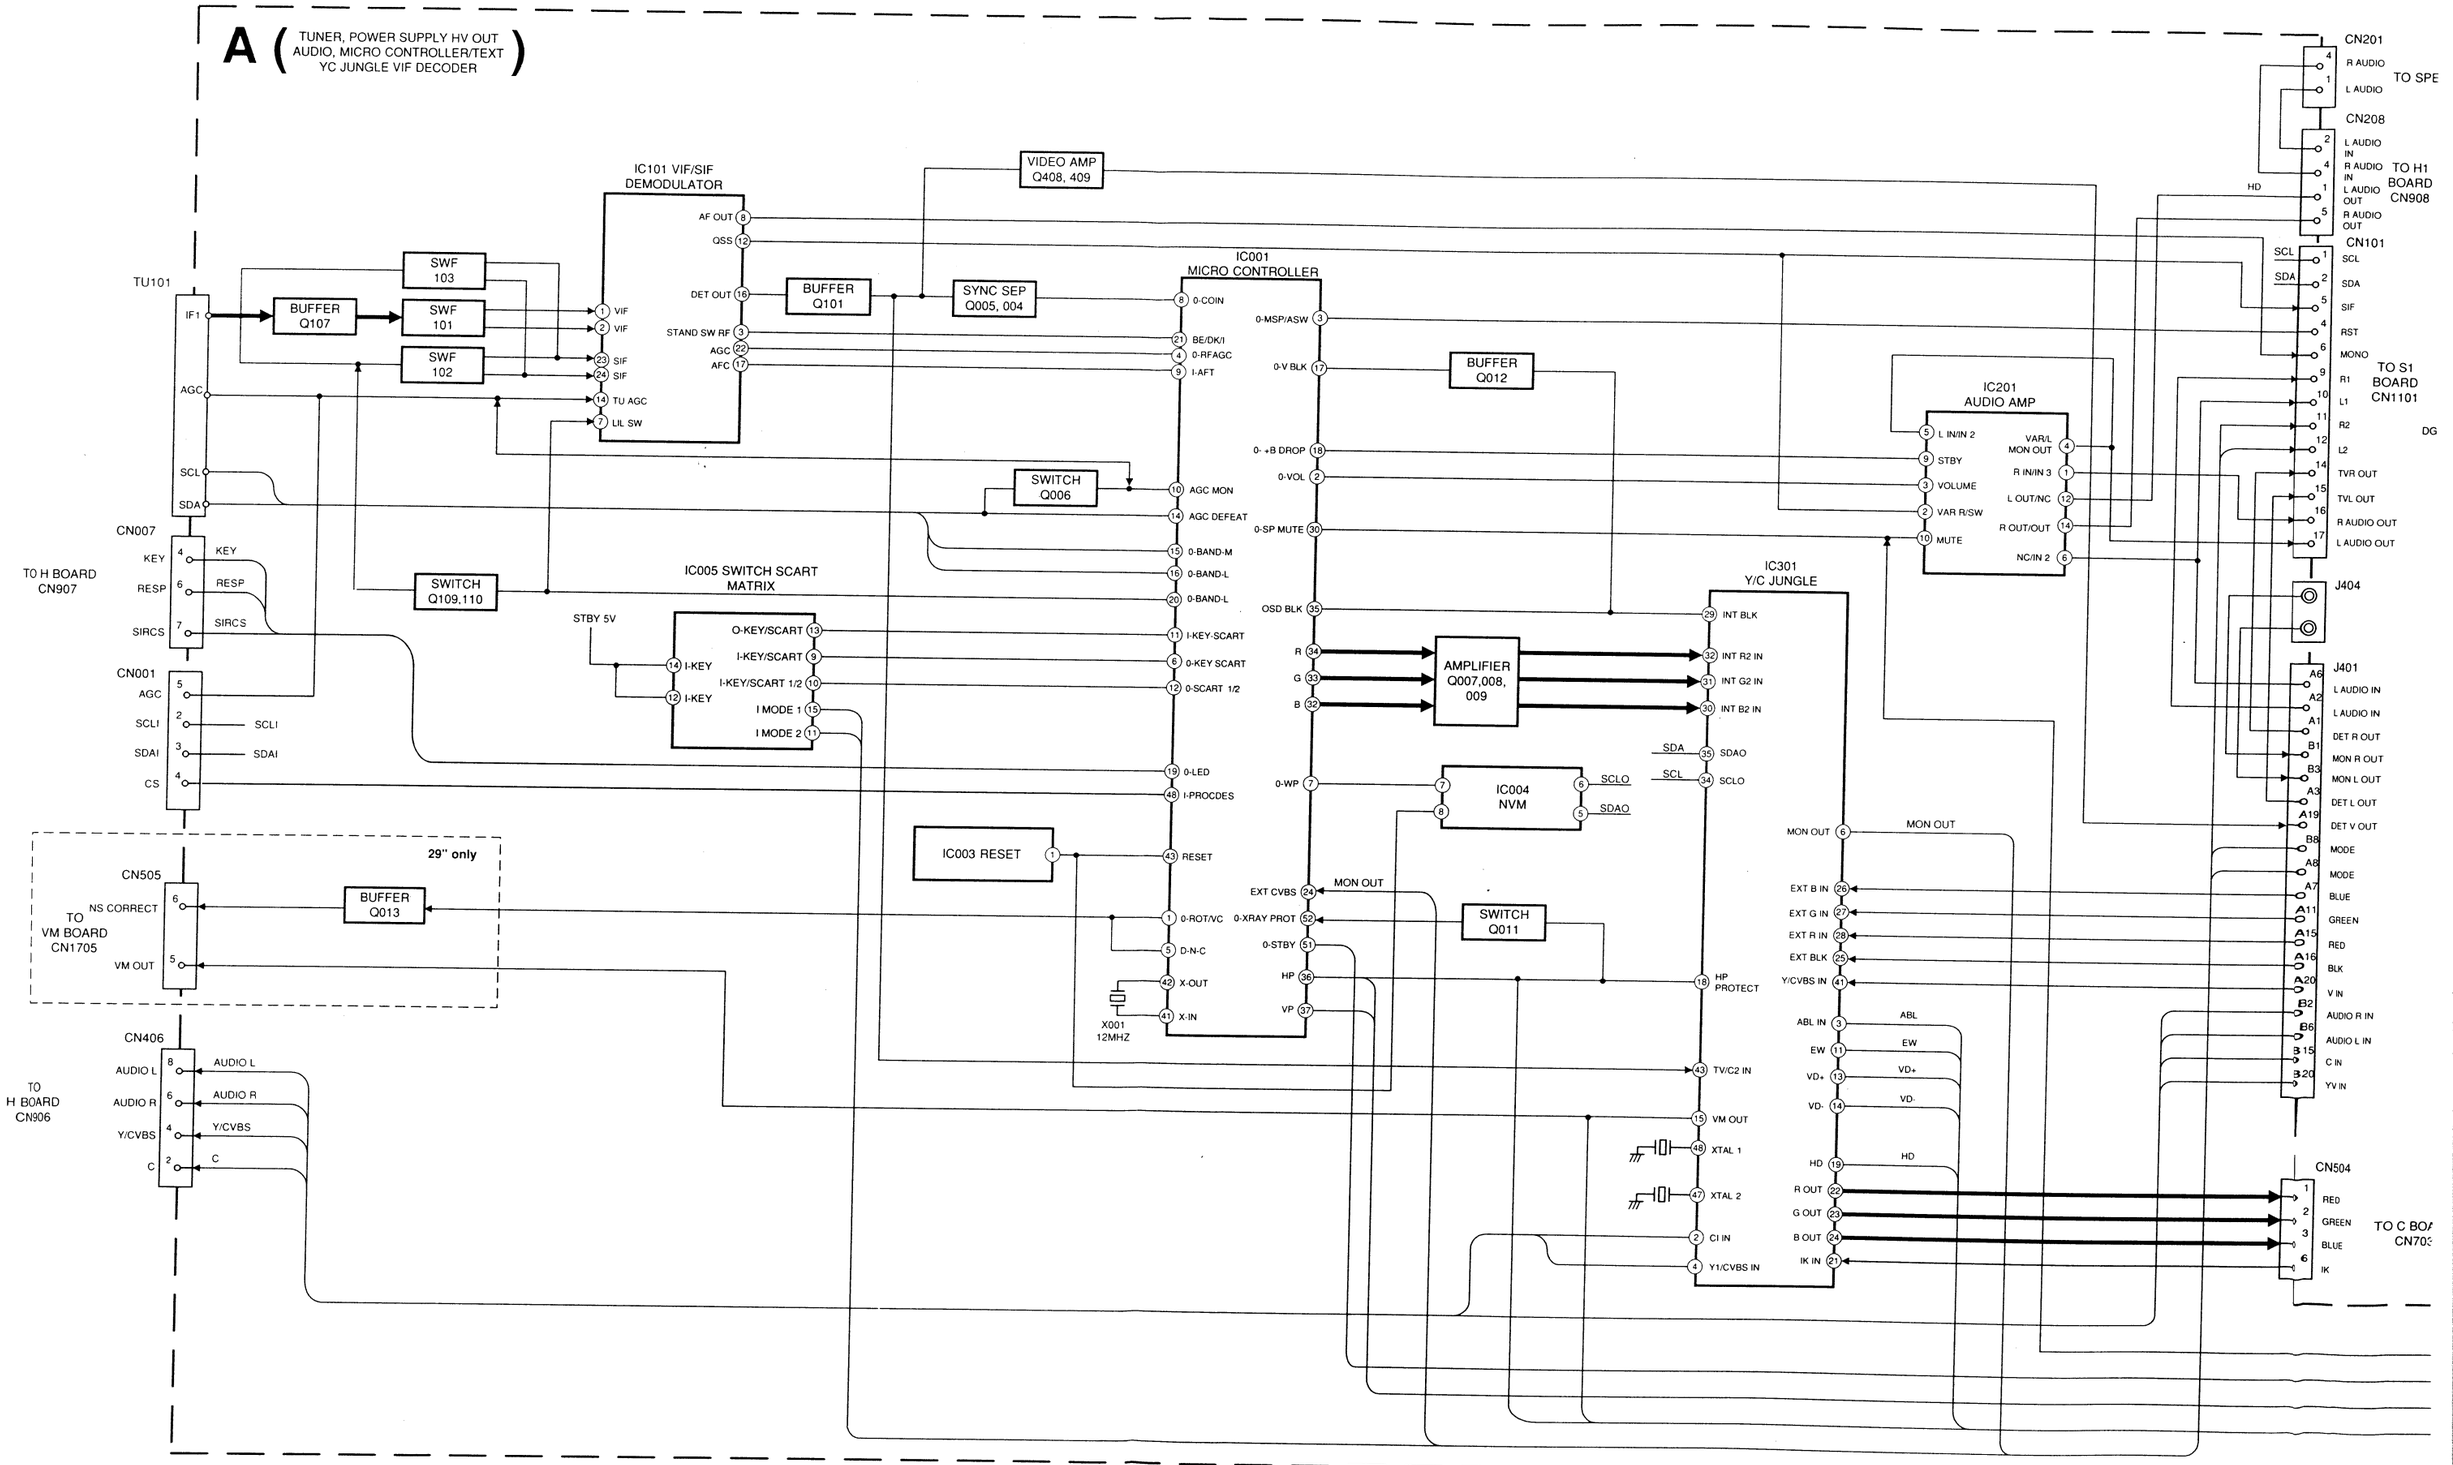

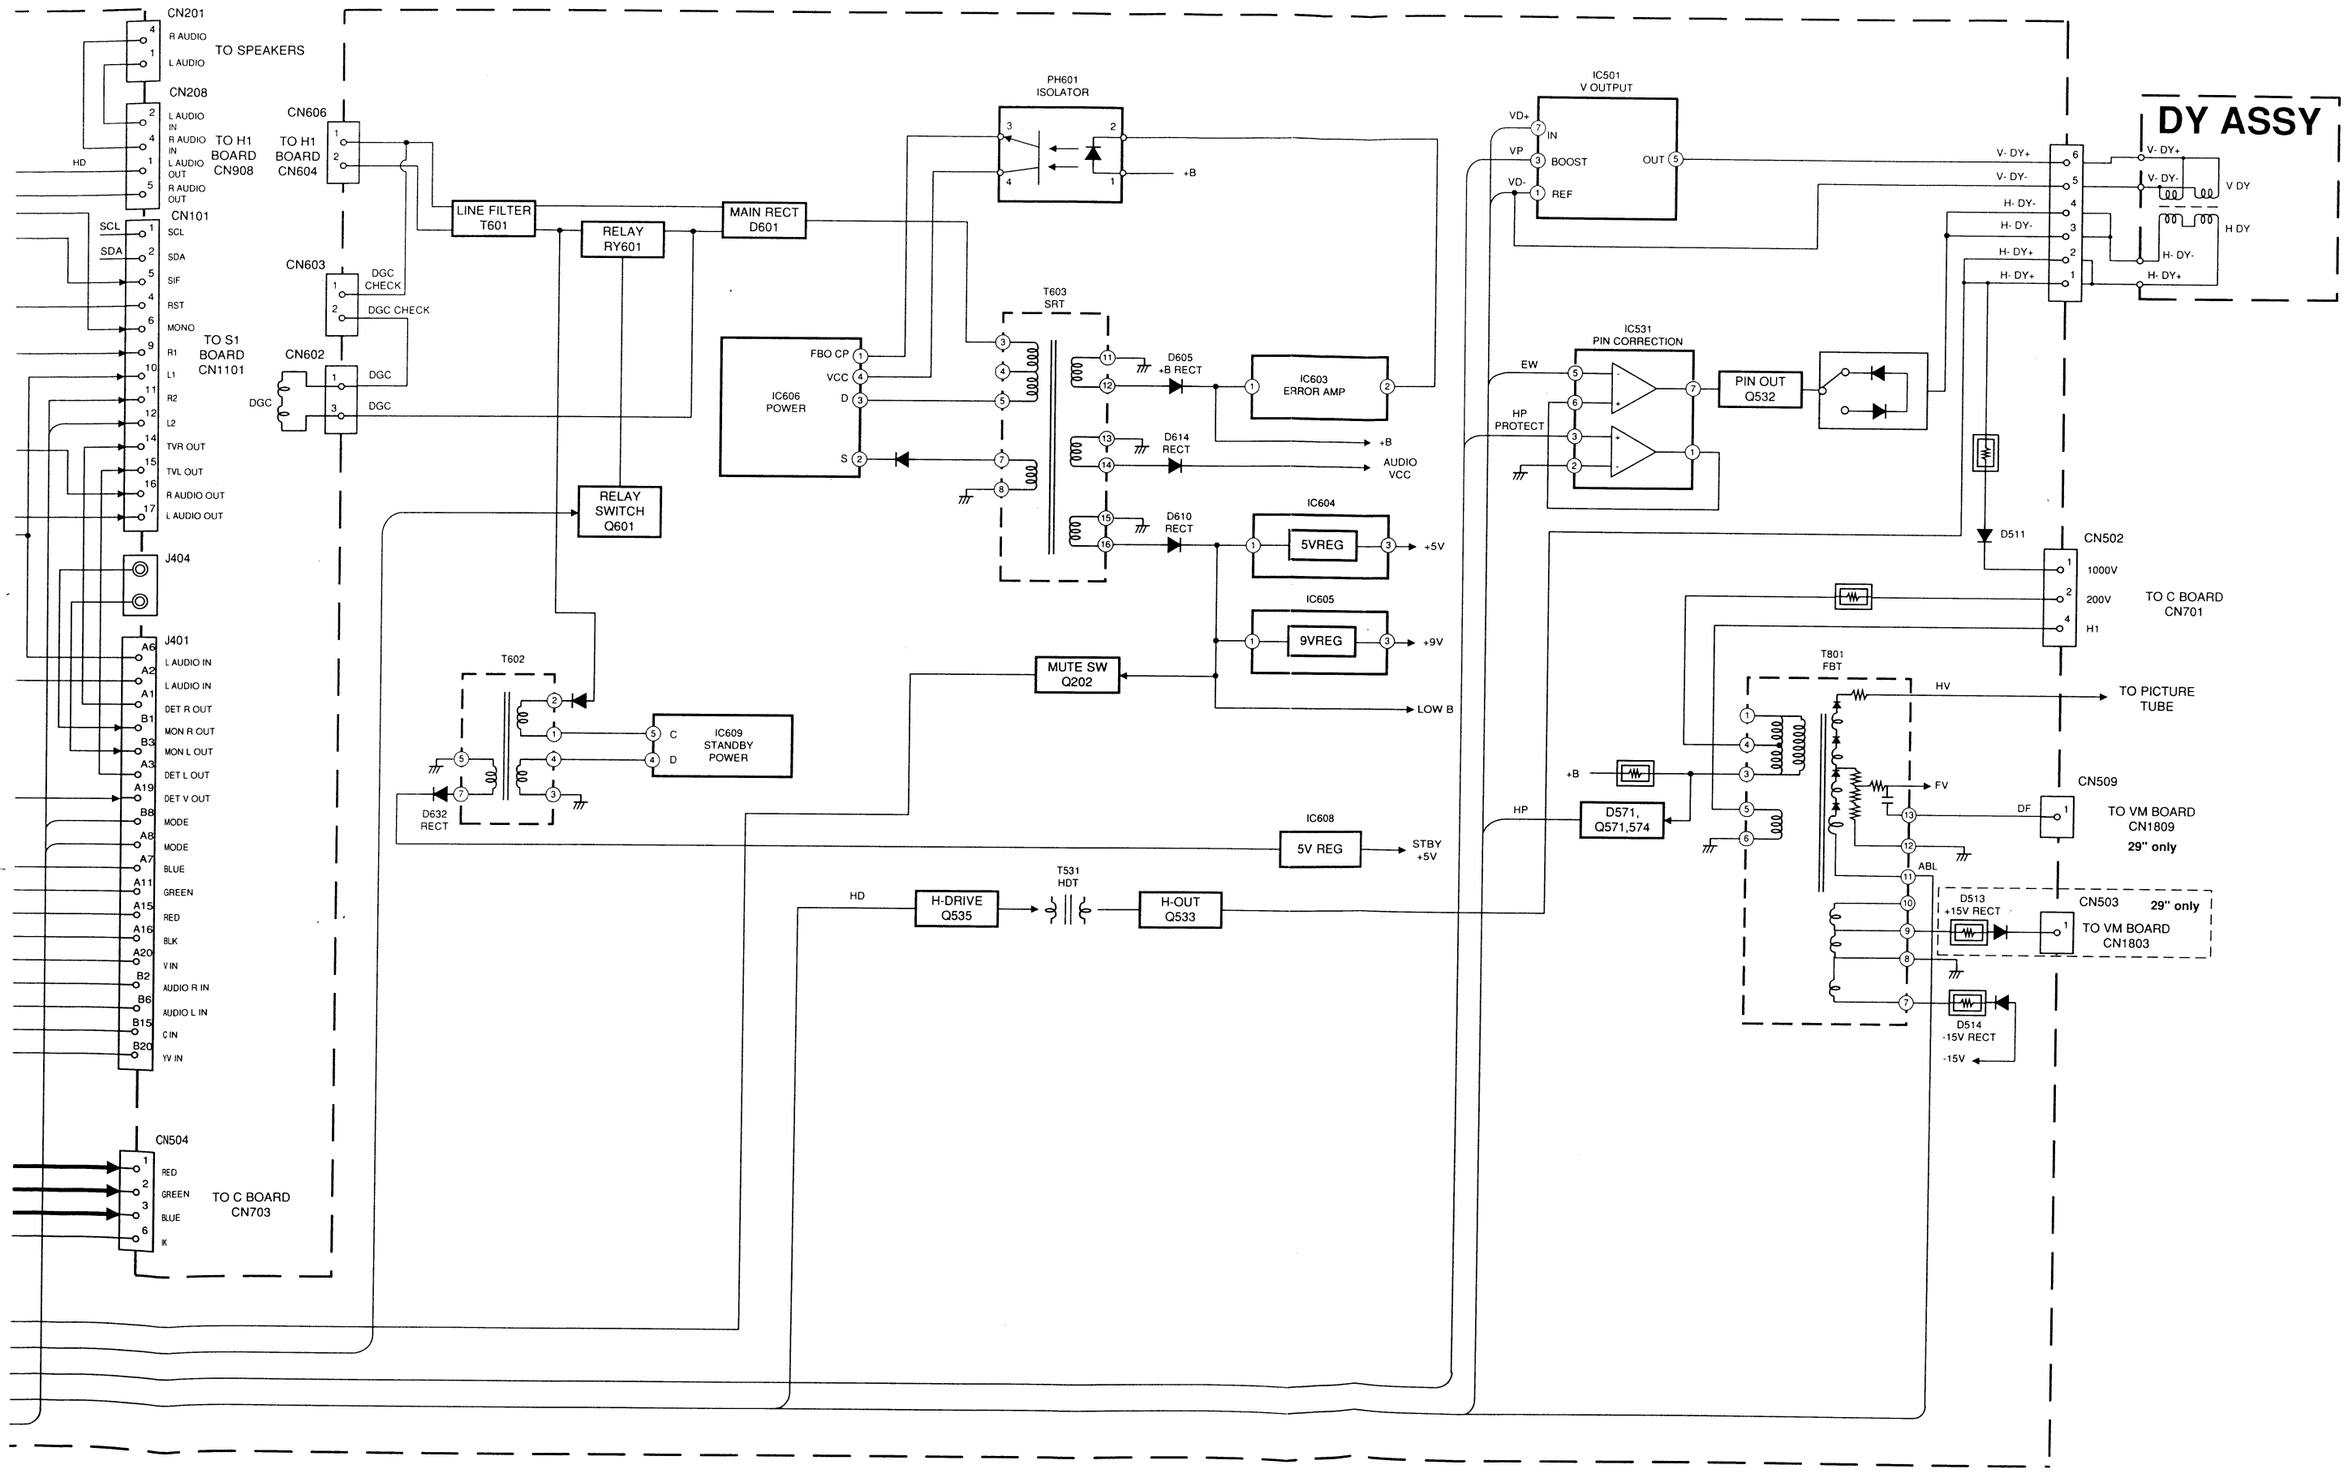
CN201
R AUDIO
L AUDIO
TO SPEAKERS
CN208
L AUDIO IN
R AUDIO IN
L AUDIO OUT
R AUDIO OUT
TO H1 BOARD CN908
HD
CN101
SCL
SDA
SIF
RST
MONO
R1
L1
R2
L2
TVR OUT
TVL OUT
R AUDIO OUT
L AUDIO OUT
TO S1 BOARD CN1101
J404
J401
A6 L AUDIO IN
A2 L AUDIO IN
A1 DET R OUT
B1 MON R OUT
B3 MON L OUT
A3 DET L OUT
A19 DET V OUT
B8 MODE
A8 MODE
A7 BLUE
A11 GREEN
A15 RED
A16 BLK
A20 V IN
B2 AUDIO R IN
B6 AUDIO L IN
B15 C IN
B20 Y IN
CN504
RED
GREEN
BLUE
IK
TO C BOARD CN703
CN606
TO H1 BOARD CN604
CN603
DGC CHECK
DGC CHECK
CN602
DGC
DGC
DGC
LINE FILTER T601
RELAY RY601
RELAY SWITCH Q601
T602
D632 RECT
IC609 STANDBY POWER
C
D
MAIN RECT D601
PH601 ISOLATOR
+B
T603 SRT
IC606 POWER
FBO CP
VCC
D
S
D605 +B RECT
IC603 ERROR AMP
+B
D614 RECT
AUDIO VCC
D610 RECT
IC604
5VREG
+5V
IC605
9VREG
+9V
LOW B
MUTE SW Q202
IC608
5V REG
STBY +5V
HD
H-DRIVE Q535
T531 HDT
H-OUT Q533
HP
IC501 V OUTPUT
VD+
IN
VP
BOOST
VD-
REF
OUT
IC531 PIN CORRECTION
EW
HP PROTECT
PIN OUT Q532
D571, Q571,574
+B
T801 FBT
HV
TO PICTURE TUBE
FV
CN509
DF
TO VM BOARD CN1809
29" only
ABL
D513 +15V RECT
CN503 29" only
TO VM BOARD CN1803
D514 -15V RECT
-15V
D511
CN502
1000V
200V
H1
TO C BOARD CN701
DY ASSY
V- DY+
V- DY-
H- DY-
H- DY-
H- DY+
H- DY+
V DY
H DY
H- DY-
H- DY+

5-1 BLOCK DIAGRAMS (2)

29" models only

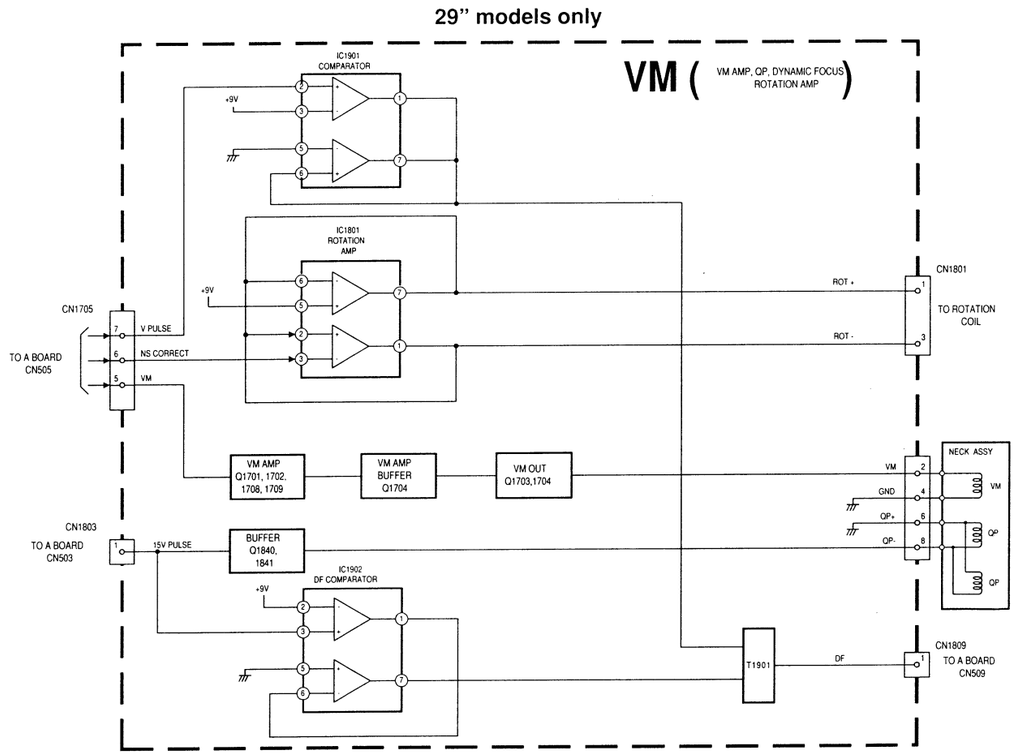

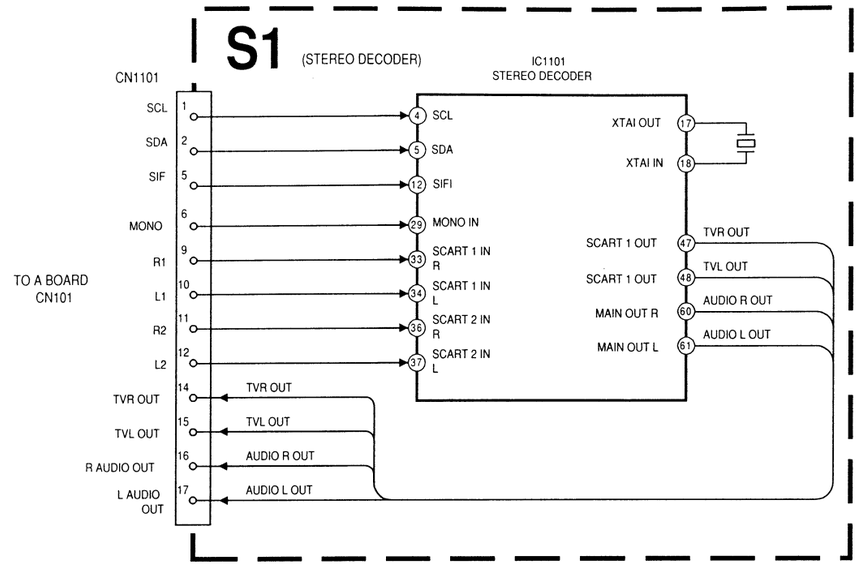

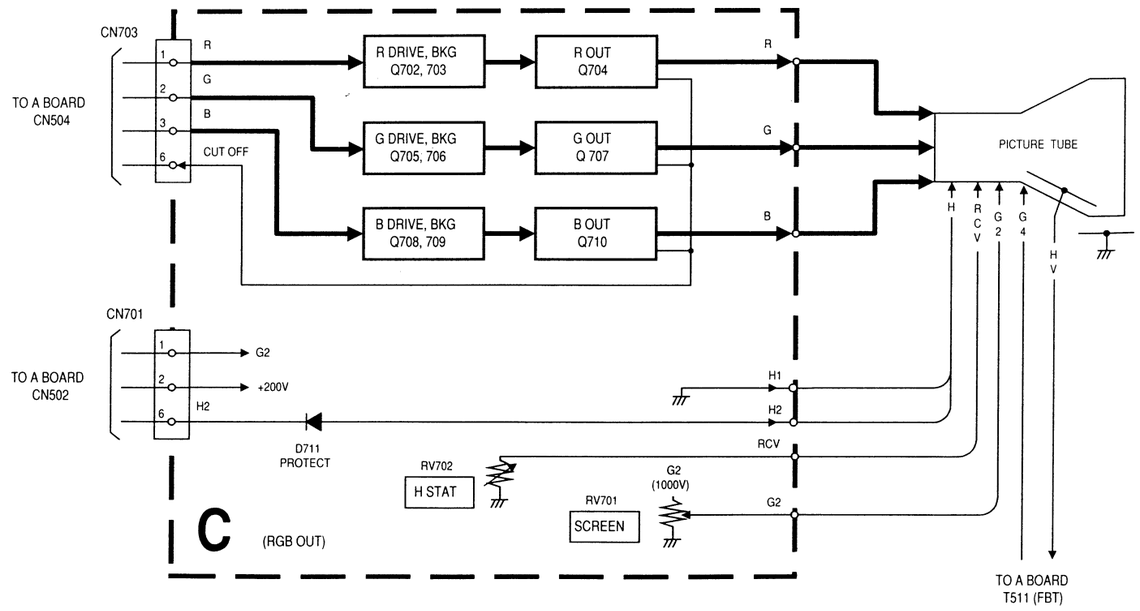

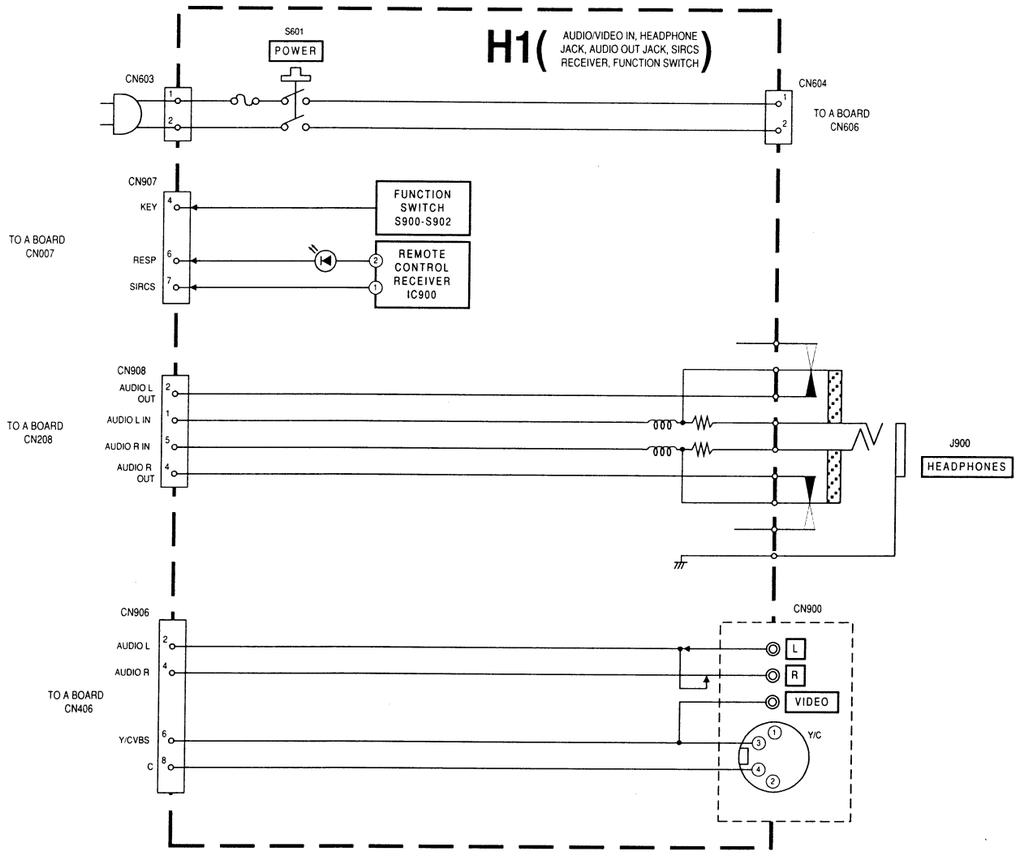



5-2. CIRCUIT BOARD LOCATION

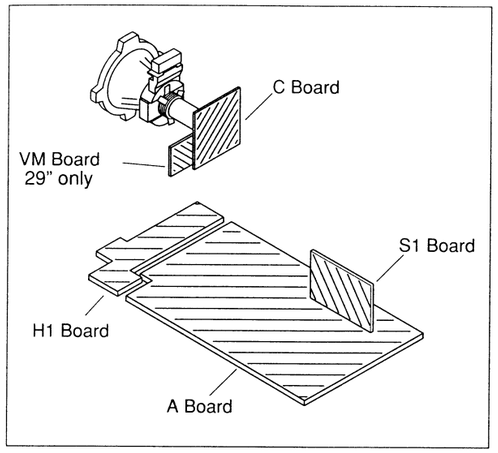

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in μF unless otherwise noted.
- pF : μμF 50WV or less are not indicated except for electrolytic types.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
  k = 1000 ohms, M = 1000,000 ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital mutimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerences.
- : B + bus.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

Reference Information

RESISTOR	**RN**	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
	※	: ADJUSTMENT RESISTOR
COIL	**LF-8L**	: MICRO INDUCTOR
CAPACITOR	**TA**	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

Note: The components identified by shading and marked ⚠ are critical for safety Replace only with the part numbers specified in the parts list.

Note: Les composants identifies par une trame et par une marque ⚠ sont d'une importance critique pour le securite. Ne les remplacer que par des pieces de numero specifie.

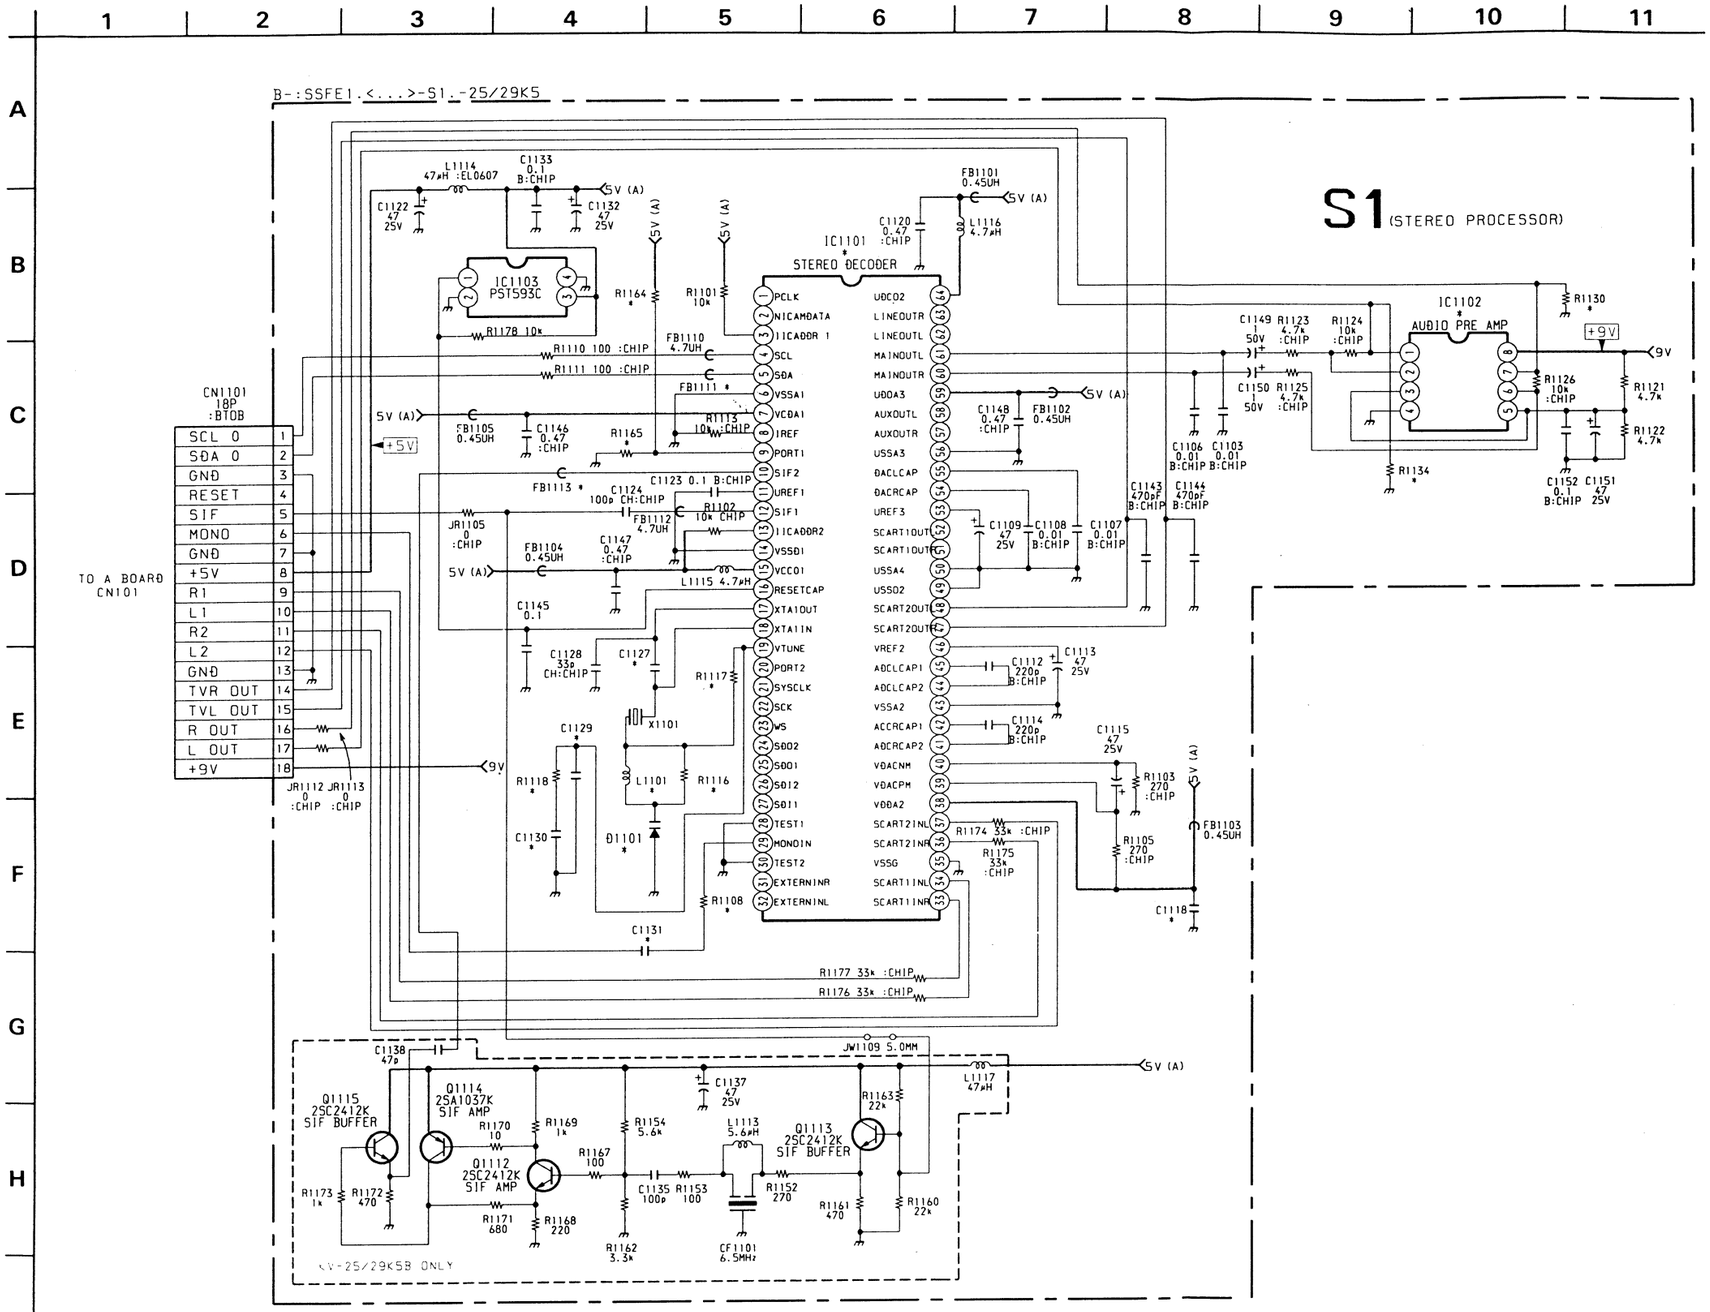

S1 [STEREO PROCESSOR]

S1 Board < Conductor Side >

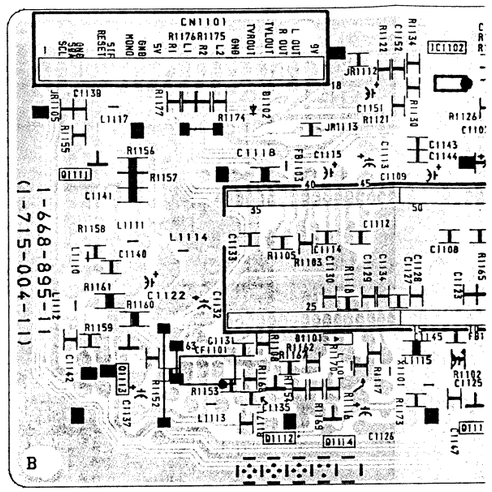

S1 BOARD IC VOLTAGE TABLE

IC Voltage Table		
Ref No	Pin No	Voltage (V)
IC1101	4	3.4
	5	3.2
	7	4.8
	8	2.3
	9	4.8
	10 - 12	2.3
	13	4.8
	15	4.8
	16	4.8
	17	2.6
	18	3.5
	19	4.0
	33 - 34	2.4
	36 - 37	2.4
	38 - 39	4.8
	41 - 42	2.4
	44 - 48	2.4
	53 - 55	2.4
	59	4.8
	60 - 61	2.4
	64	4.8
IC1102	1	4.5
	2	4.1
	3	4.5
	6	4.3
	7	3.5
	8	9.0

R]

3 4 5 6 7 8 9 10

Side >

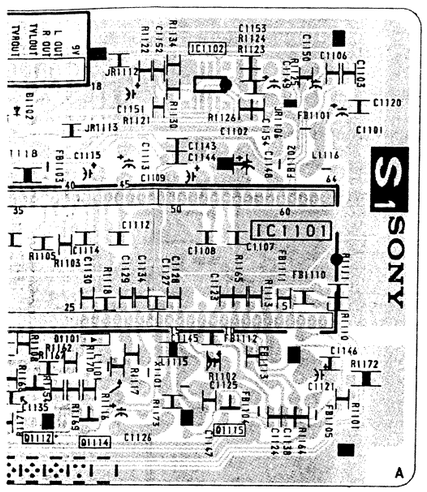

S1 Board < Component Side >

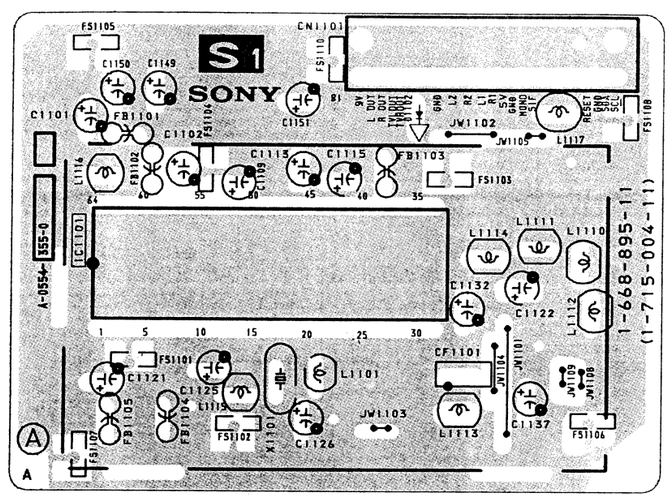

LTAGE TABLE

Voltage Table	
Pin No	Voltage (V)
4	3.4
5	3.2
7	4.8
8	2.3
9	4.8
10 - 12	2.3
13	4.8
15	4.8
16	4.8
17	2.6
18	3.5
19	4.0
33 - 34	2.4
36 - 37	2.4
38 - 39	4.8
41 - 42	2.4
44 - 48	2.4
53 - 55	2.4
59	4.8
60 - 61	2.4
64	4.8
1	4.5
2	4.1
3	4.5
6	4.3
7	3.5
8	9.0

S1 BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	(B) Base	(C) Collector	(E) Emitter
Q1111	2.0	4.1	1.3
Q1112	1.5	3.5	0.9
Q1113	1.9	4.1	1.3
Q1114	3.5	3.3	4.1
Q1115	3.3	4.1	2.7

S1 BOARD * MARK

Ref	25K5A	25K5B	25K5D	25K5E	25K5U	29K5A	29K5B	29K5D	29K5E	29K5U
C1118	0.47MF 25V	0.47MF 16V	0.47MF 25V	0.47MF 25V	0.47MF 25V	0.47MF 25V	0.47MF 16V	0.47MF 25V	0.47MF 25V	0.47MF 25V
C1127	22P	33P	22P	33P	33P	22P	33P	22P	33P	33P
C1129	-	0.033MF	-	0.033MF	0.033MF	-	0.033MF	-	0.033MF	0.033MF
C1130	-	0.33MF	-	0.33MF	0.33MF	-	0.33MF	-	0.33MF	0.33MF
C1131	0.47MF	0.47MF	0.47MF	-	-	0.47MF	0.47MF	0.47MF	-	-
D1101	0	BB135	0	BB135	BB135	0	BB135	0	BB135	BB135
FB1111	6.8UH	4.7UH	6.8UH	4.7UH	4.7UH	46.8UH	64.7UH	6.8UH	4.7UH	4.7UH
IC1101	TDA9870	TDA9875P	TDA9870	TDA9875P	TDA9875P	TDA9870	TDA9875P	TDA9870	TDA9875P	TDA9875P
IC1102	LM358DR-E2	UPC4558G2	LM358DR-E2	UPC4558G2	UPC4558G2	LM358DR-E2	UPC4558G2	LM358DR-E2	UPC4558G2	UPC4558G2
L1101	-	2.7UH	-	2.7UH	2.7UH	-	2.7UH	-	2.7UH	2.7UH
R1108	2.2K	2.2K	2.2K	-	-	2.2K	2.2K	2.2K	-	-
R1116	0	39K	0	39K	39K	0	39K	0	39K	39K
R1117	-	10K	-	10K	10K	-	10K	-	10K	10K
R1118	-	20K	-	20K	20K	-	20K	-	20K	20K
R1130	10K	-	10K	-	-	10K	-	10K	-	-
R1134	10K	-	10K	-	-	10K	-	10K	-	-
R1164	-	10K	-	10K	10K	-	10K	-	10K	10K
R1165	0	-	0	-	-	0	-	0	-	-
X1101	1-567-970-21	1-567-970-21	1-567-970-21	1-767-813-21	1-767-813-21	1-567-970-21	1-567-970-21	1-567-970-21	1-567-970-21	1-567-970-21

A BOARD

IC		DIODE	
IC001	C - 11	D001	D - 8
IC003	D - 10	D002	D - 8
IC004	D - 9	D004	D - 10
IC005	B - 11	D007	D - 9
IC101	A - 4	D008	D -7
IC201	B - 7	D009	C - 11
IC301	D - 6	D010	D - 10
IC501	I - 4	D011	E - 12
IC531	C - 4	D012	D - 11
IC603	F - 6	D014	D - 11
IC604	E - 6	D015	D - 11
IC605	C - 8	D017	E - 10
IC606	I - 7	D018	D - 7
IC608	D - 12	D023	E - 10
IC609	E - 11	D101	B - 2
TRANSISTOR		D104	A - 3
Q004	B - 9	D201	C - 8
Q005	C - 10	D202	C - 8
Q006	B - 9	D204	C - 9
Q007	D - 10	D205	B - 8
Q008	D - 11	D206	B - 7
Q009	D - 11	D306	C - 6
Q010	D - 10	D307	C - 6
Q011	D - 8	D308	E - 5
Q012	B - 11	D309	E - 5
Q013	B - 9	D405	C - 1
Q101	B - 5	D406	C - 2
Q107	A - 3	D407	D - 2
Q109	B - 2	D409	B - 1
Q110	B - 2	D415	D - 2
Q111	A - 2	D417	D - 2
Q112	A - 2	D422	C -1
Q202	C - 8	D423	C - 1
Q401	B - 2	D427	B - 2
Q405	B - 2	D501	I - 4
Q408	B - 2	D502	H - 4
Q501	I - 5	D511	G - 3
Q532	E - 2	D512	H - 3
Q533	F - 1	D513	I - 3
Q535	D - 1	D514	I - 3
Q571	F - 5	D534	D - 3
Q574	E - 5	D535	F - 4
Q575	E - 6	D536	F - 2
Q576	E - 6	D538	F - 4
		D539	F - 2
		D571	F - 5
		D601	G - 8
		D602	I - 6
		D603	H - 6
		D605	G - 6
		D608	H - 8
		D610	F - 7
		D613	E - 9
		D614	G - 6
		D619	I - 8
		D621	F - 10
		D626	F - 9
		D627	F - 9
		D628	E - 10
		D629	E - 11
		D631	F - 11
		D632	E - 10
		D633	E - 9

A [POWER SUPPLY, DEFLECTION, TUNING, PROCESSOR VIDEO SIGNAL PROCESSOR, AV IN/OUT]

A Board

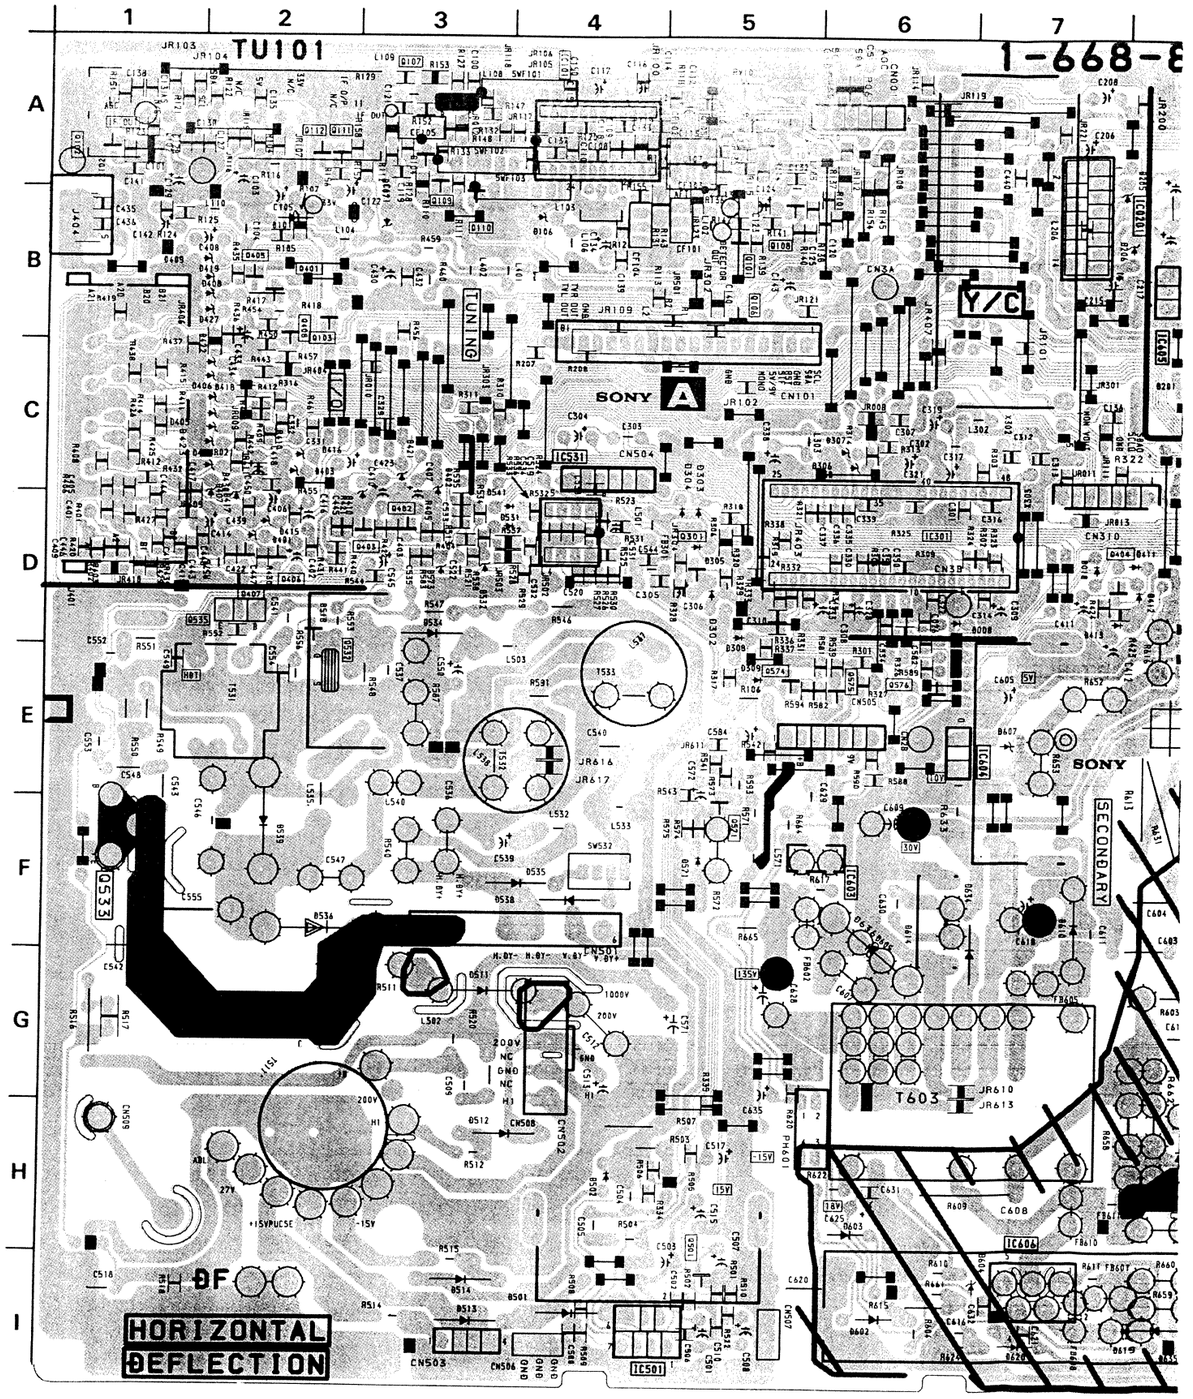

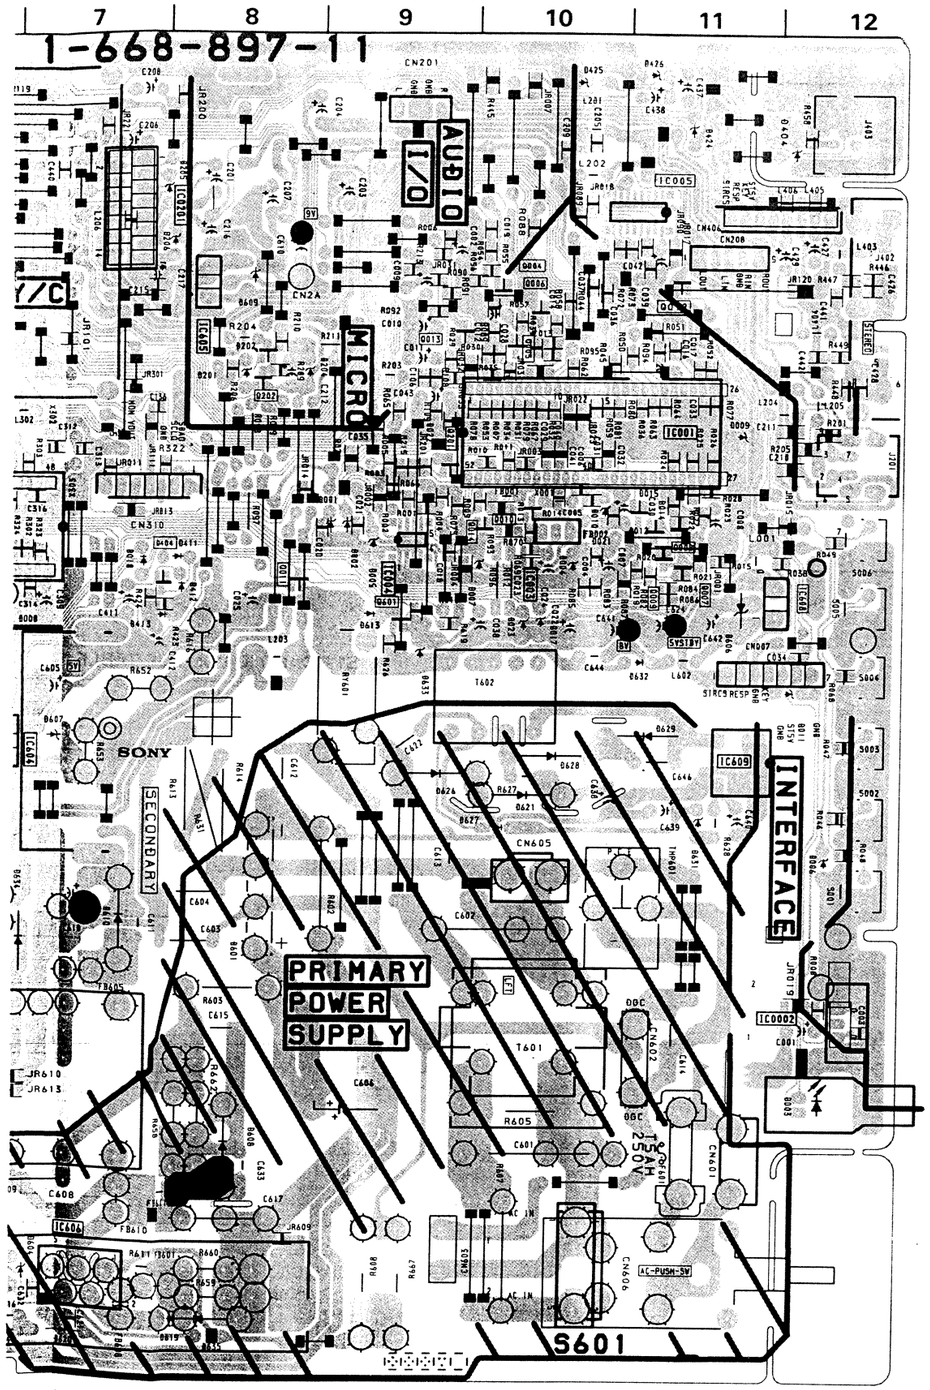
1-668-897-11
7
8
9
10
11
12
AUDIO I/O
MICRO
SONY
SECONDARY
INTERFACE
PRIMARY
POWER
SUPPLY
S601
T2.5AH
250V
AC-PUSH-5V
IC005
IC609
IC0002
IC606
IC604
CN201
CN2A
CN208
CN605
CN602
CN603
CN604
CN310
CN007
T602
T601
T605
T603
T604
T606
T607
T608
T609
T610
T611
T612
T613
T614
T615
T616
T617
T618
T619
T620
T621
T622
T623
T624
T625
T626
T627
T628
T629
T630
T631
T632
T633
T634
T635
T636
T637
T638
T639
T640
T641
T642
T643
T644
T645

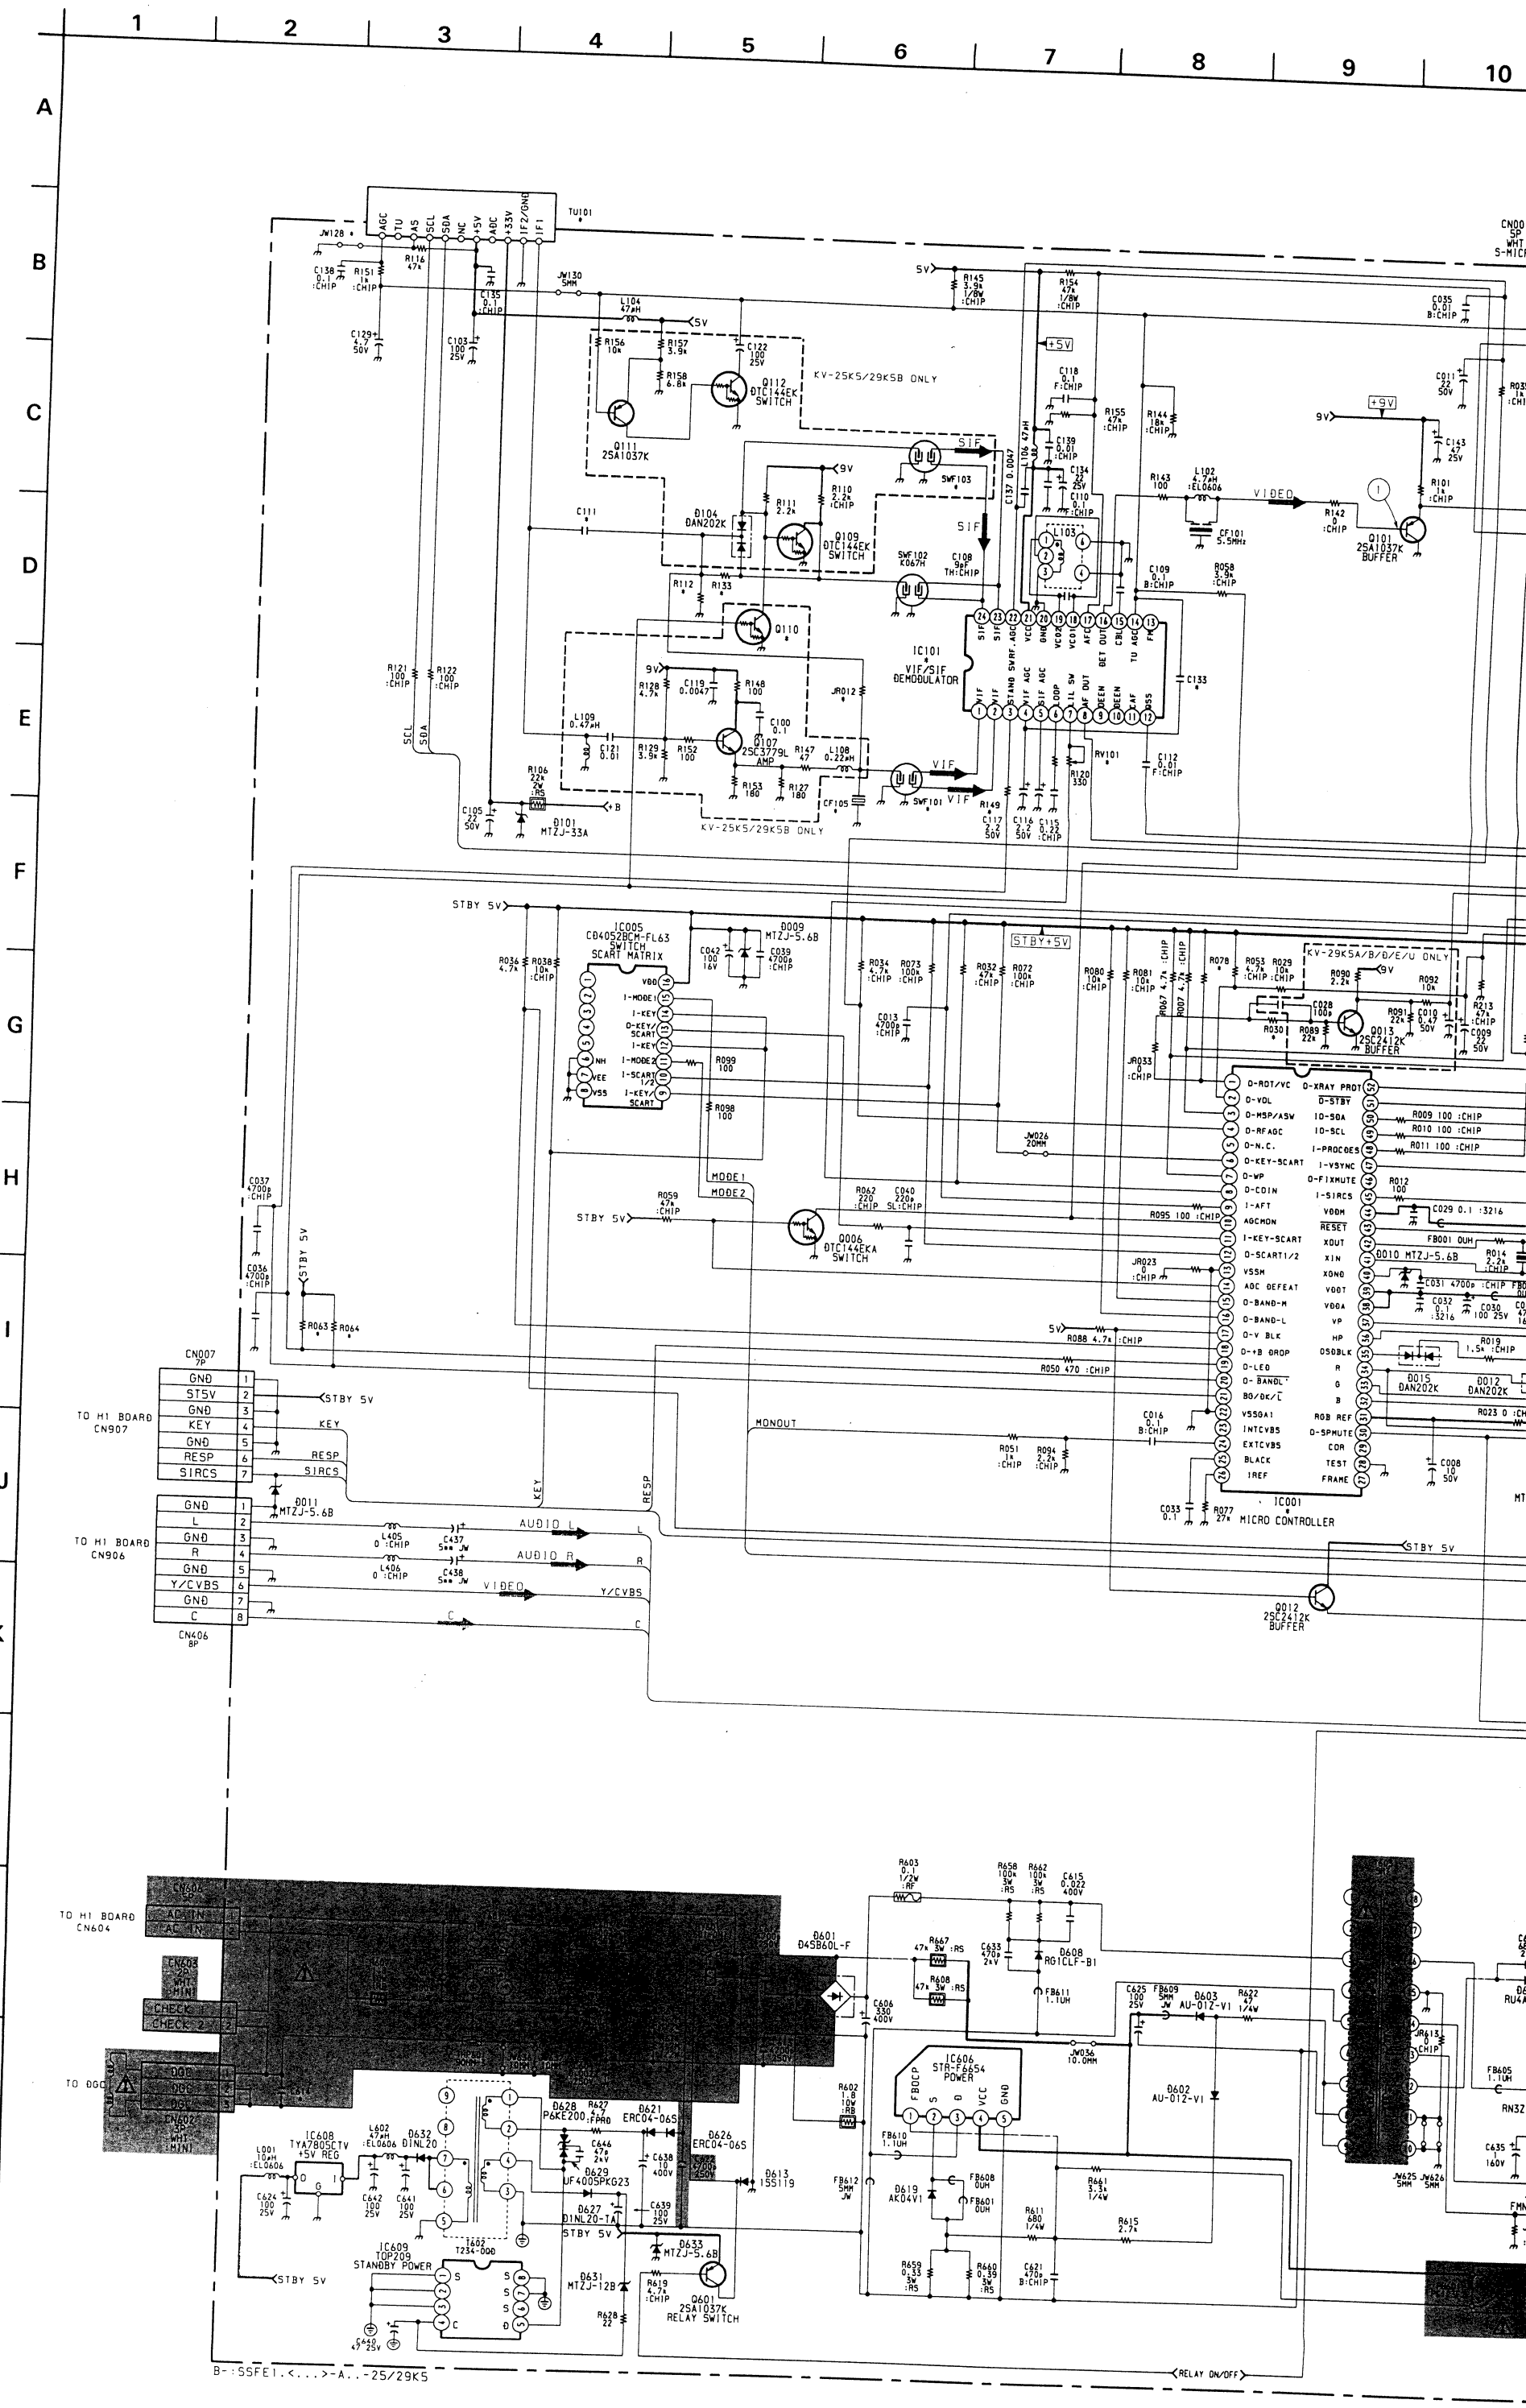
TU101
IC101
VIF/SIF DEMODULATOR
IC001
MICRO CONTROLLER
IC005
SWITCH SCART MATRIX
IC606
STR-F6654 POWER
IC608
TYA780SCTV +5V REG
IC609
TOP209 STANDBY POWER
Q101 2SA1037K BUFFER
Q107 2SC3779L AMP
Q109 DTC144EK SWITCH
Q110
Q111 2SA1037K
Q112 DTC144EK SWITCH
Q006 DTC144EKA SWITCH
Q013 2SC2412K BUFFER
Q012 2SC2412K BUFFER
Q601 2SA1037K RELAY SWITCH
KV-25K5/29K5B ONLY
KV-29K5A/B/D/E/U ONLY
TO H1 BOARD CN907
TO H1 BOARD CN906
TO H1 BOARD CN604
TO DGC
CN007
CN406
CN603
CN602
VIDEO
AUDIO L
AUDIO R
MONOUT
RESP
SIRCS
KEY
Y/CVBS
STBY 5V
RELAY ON/OFF
B-:SSFE1.<...>-A..-25/29K5

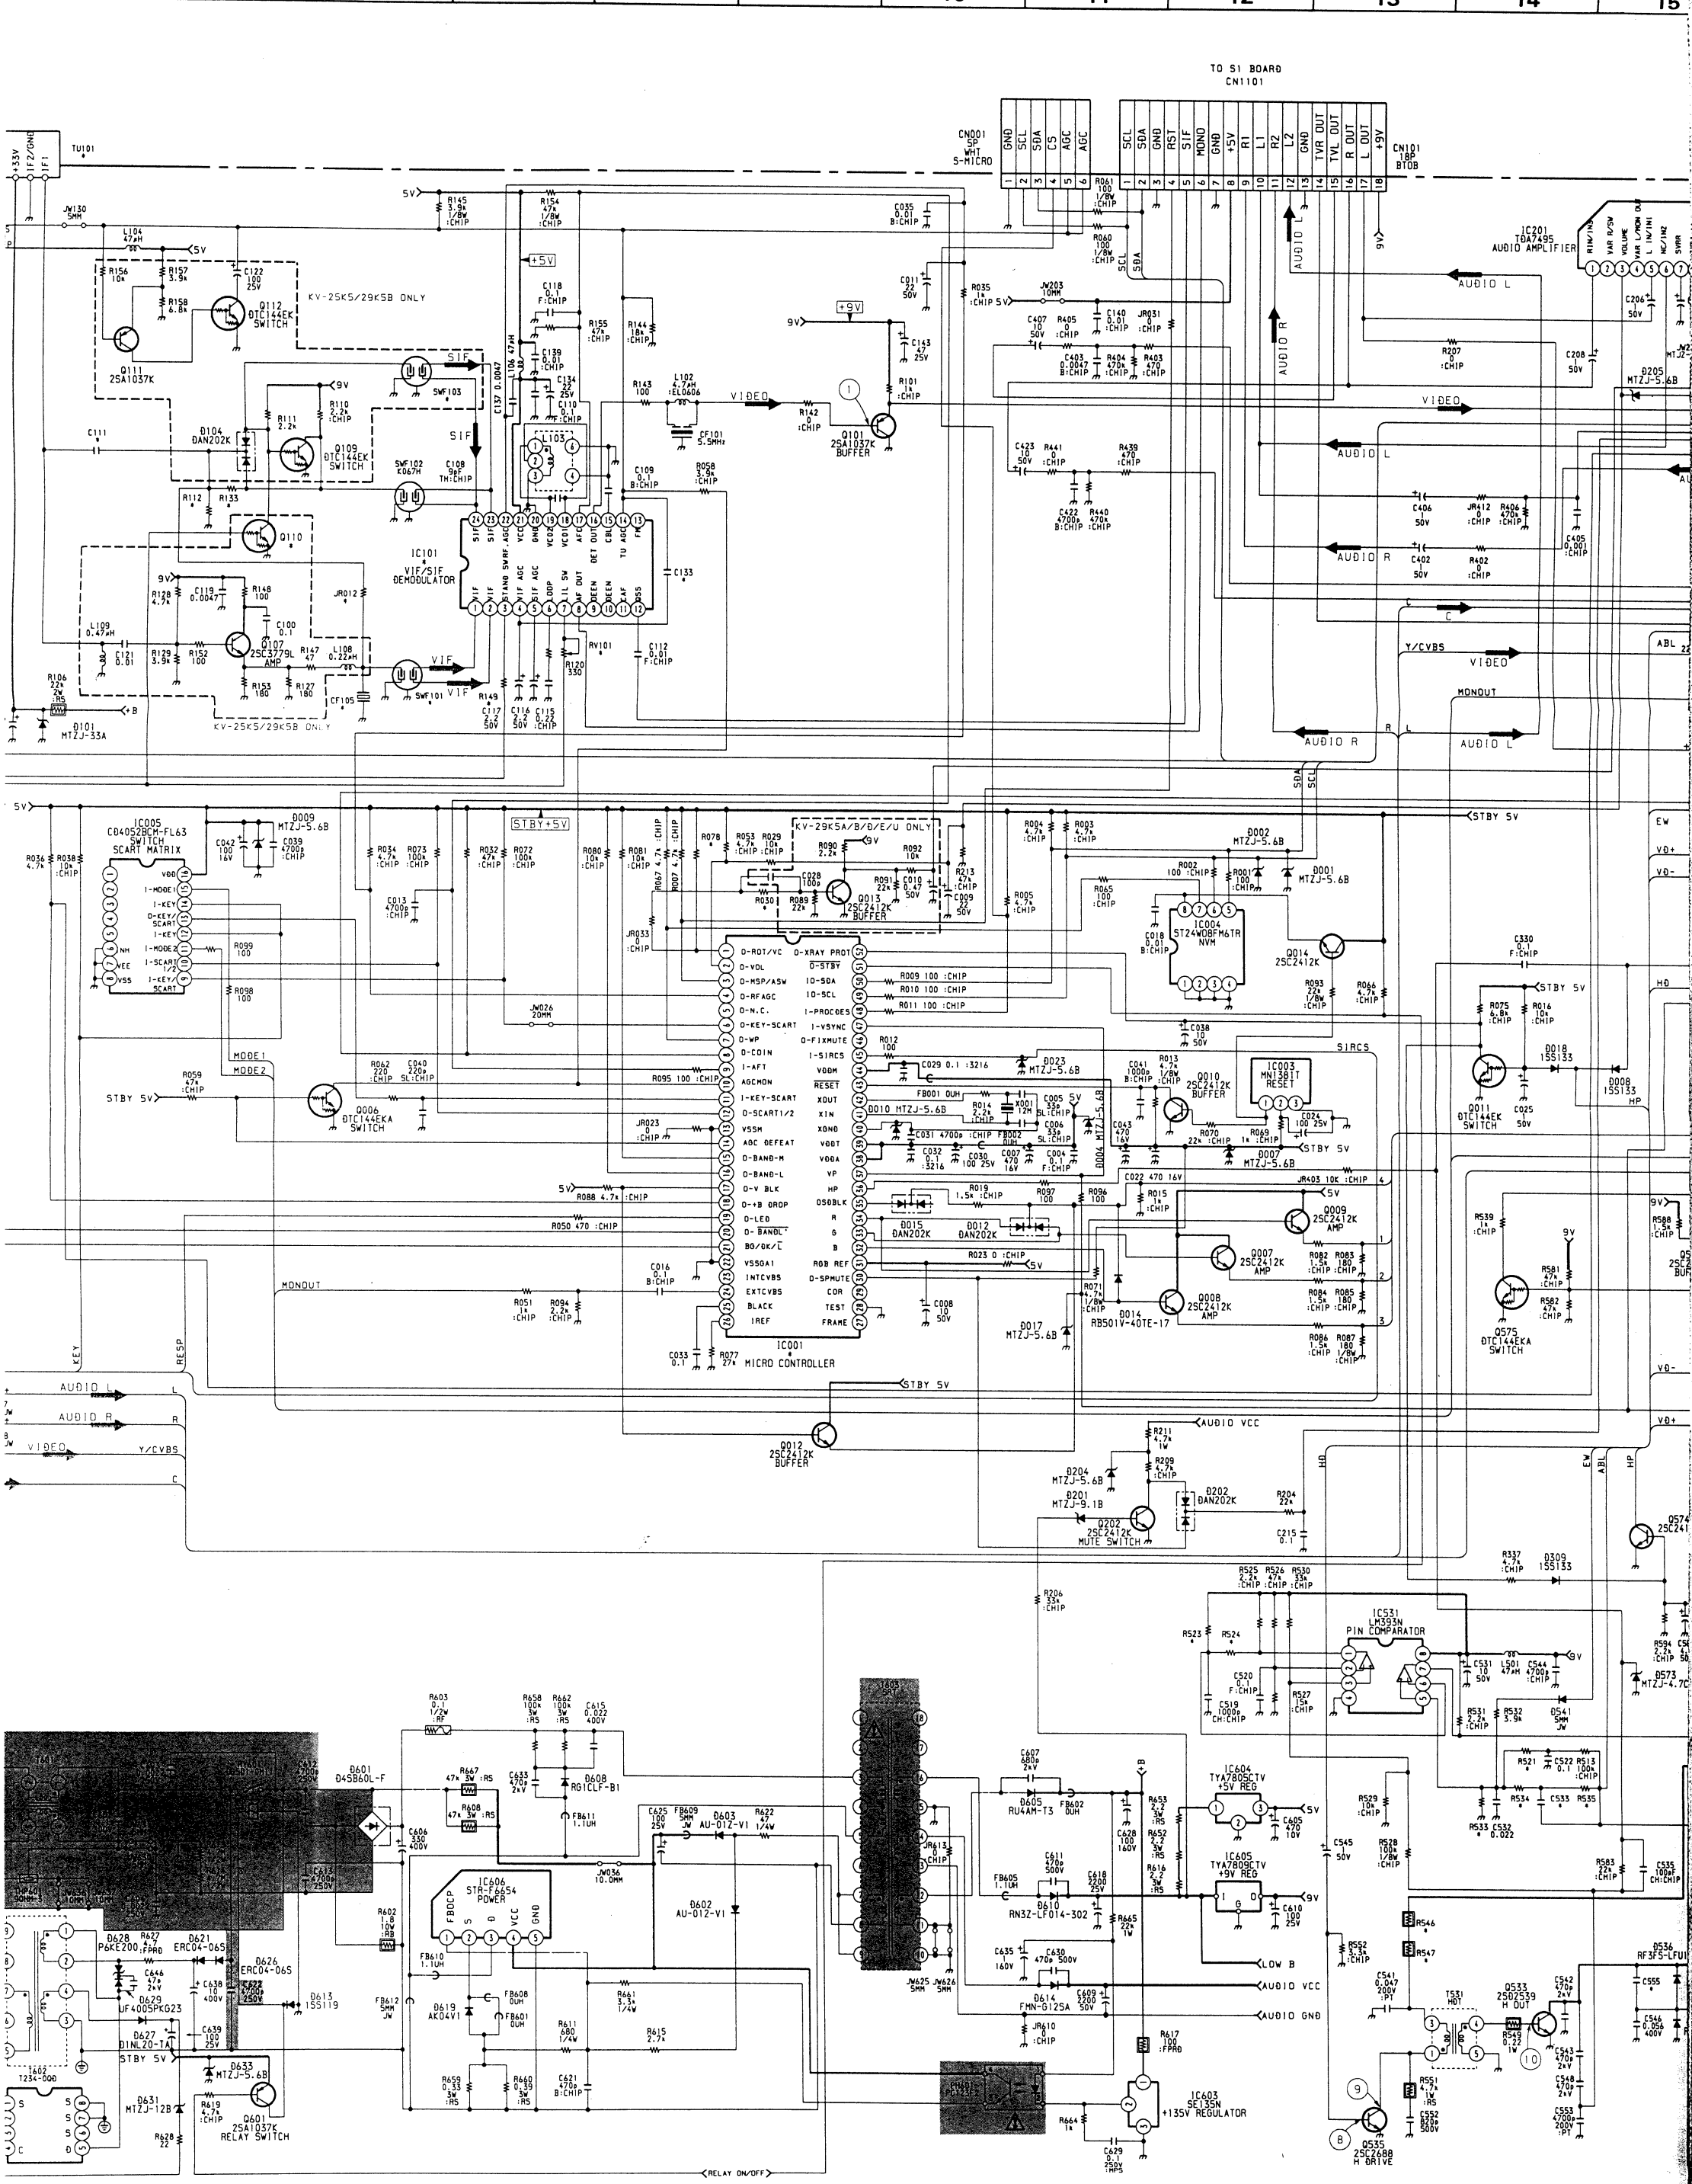
4
5
6
7
8
9
10
11
12
13
14
15
TO S1 BOARD
CN1101
CN001
5P
WHT
S-MICRO
CN101
18P
BTOB
TU101
IC101
VIF/SIF
DEMODULATOR
IC001
MICRO CONTROLLER
IC005
CD4052BCM-FL63
SWITCH
SCART MATRIX
IC201
TDA7495
AUDIO AMPLIFIER
IC004
ST24W08FM6TR
NVM
IC003
MN1381T
RESET
IC606
STR-F6654
POWER
IC604
TYA7805CTV
+5V REG
IC605
TYA7809CTV
+9V REG
IC603
SE135N
+135V REGULATOR
IC531
LM393N
PIN COMPARATOR
Q101
2SA1037K
BUFFER
Q111
2SA1037K
Q112
DTC144EK
SWITCH
Q109
DTC144EK
SWITCH
Q110
Q107
2SC3779L
AMP
Q013
2SC2412K
BUFFER
Q014
2SC2412K
Q010
2SC2412K
BUFFER
Q009
2SC2412K
AMP
Q007
2SC2412K
AMP
Q008
2SC2412K
AMP
Q012
2SC2412K
BUFFER
Q202
2SC2412K
MUTE SWITCH
Q006
DTC144EKA
SWITCH
Q011
DTC144EK
SWITCH
Q575
DTC144EKA
SWITCH
Q601
2SA1037K
RELAY SWITCH
Q533
2SD2539
H OUT
Q535
2SC2688
H DRIVE
Q574
2SC241
D101
MTZJ-33A
D104
DAN202K
D009
MTZJ-5.6B
D002
MTZJ-5.6B
D001
MTZJ-5.6B
D205
MTZJ-5.6B
D018
1SS133
D008
1SS133
D309
1SS133
D023
MTZJ-5.6B
D004
MTZJ-5.6B
D007
MTZJ-5.6B
D015
DAN202K
D012
DAN202K
D017
MTZJ-5.6B
D014
RB501V-40TE-17
D204
MTZJ-5.6B
D201
MTZJ-9.1B
D202
DAN202K
D573
MTZJ-4.7C
D574
D536
RF3F5-LFUI
D601
D45SB60L-F
D608
RG1CLF-B1
D602
AU-012-V1
D603
AU-01Z-V1
D605
RU4AM-T3
D610
RN3Z-LF014-302
D614
FMN-G12SA
D619
AK04V1
D626
ERC04-06S
D628
P6KE200
D621
ERC04-06S
D629
UF4005PKG23
D627
DINL20-1A
D633
MTZJ-5.6B
D631
MTZJ-12B
D613
1SS119
SIF
VIF
VIDEO
Y/CVBS
MONOUT
AUDIO L
AUDIO R
AUDIO VCC
AUDIO GND
STBY 5V
STBY+5V
RELAY ON/OFF
LOW B
SIRCS
KEY
RESP
MODE1
MODE2
KV-25K5/29K5B ONLY
KV-29K5A/B/D/E/U ONLY
SWF101
SWF102
SWF103
CF101
5.5MHz
CF105
X001
12M
T602
T234-000
T401
T402
T403
T404
T405
T406
T407
T408
T409
T410
T411
T412
T413
T414
T415
T416
T417
T418
T419
T420
T421
T422
T423
T424
T425
T426
T427
T428
T429
T430
T431
T432
T433
T434
T435
T436
T437
T438
T439
T440

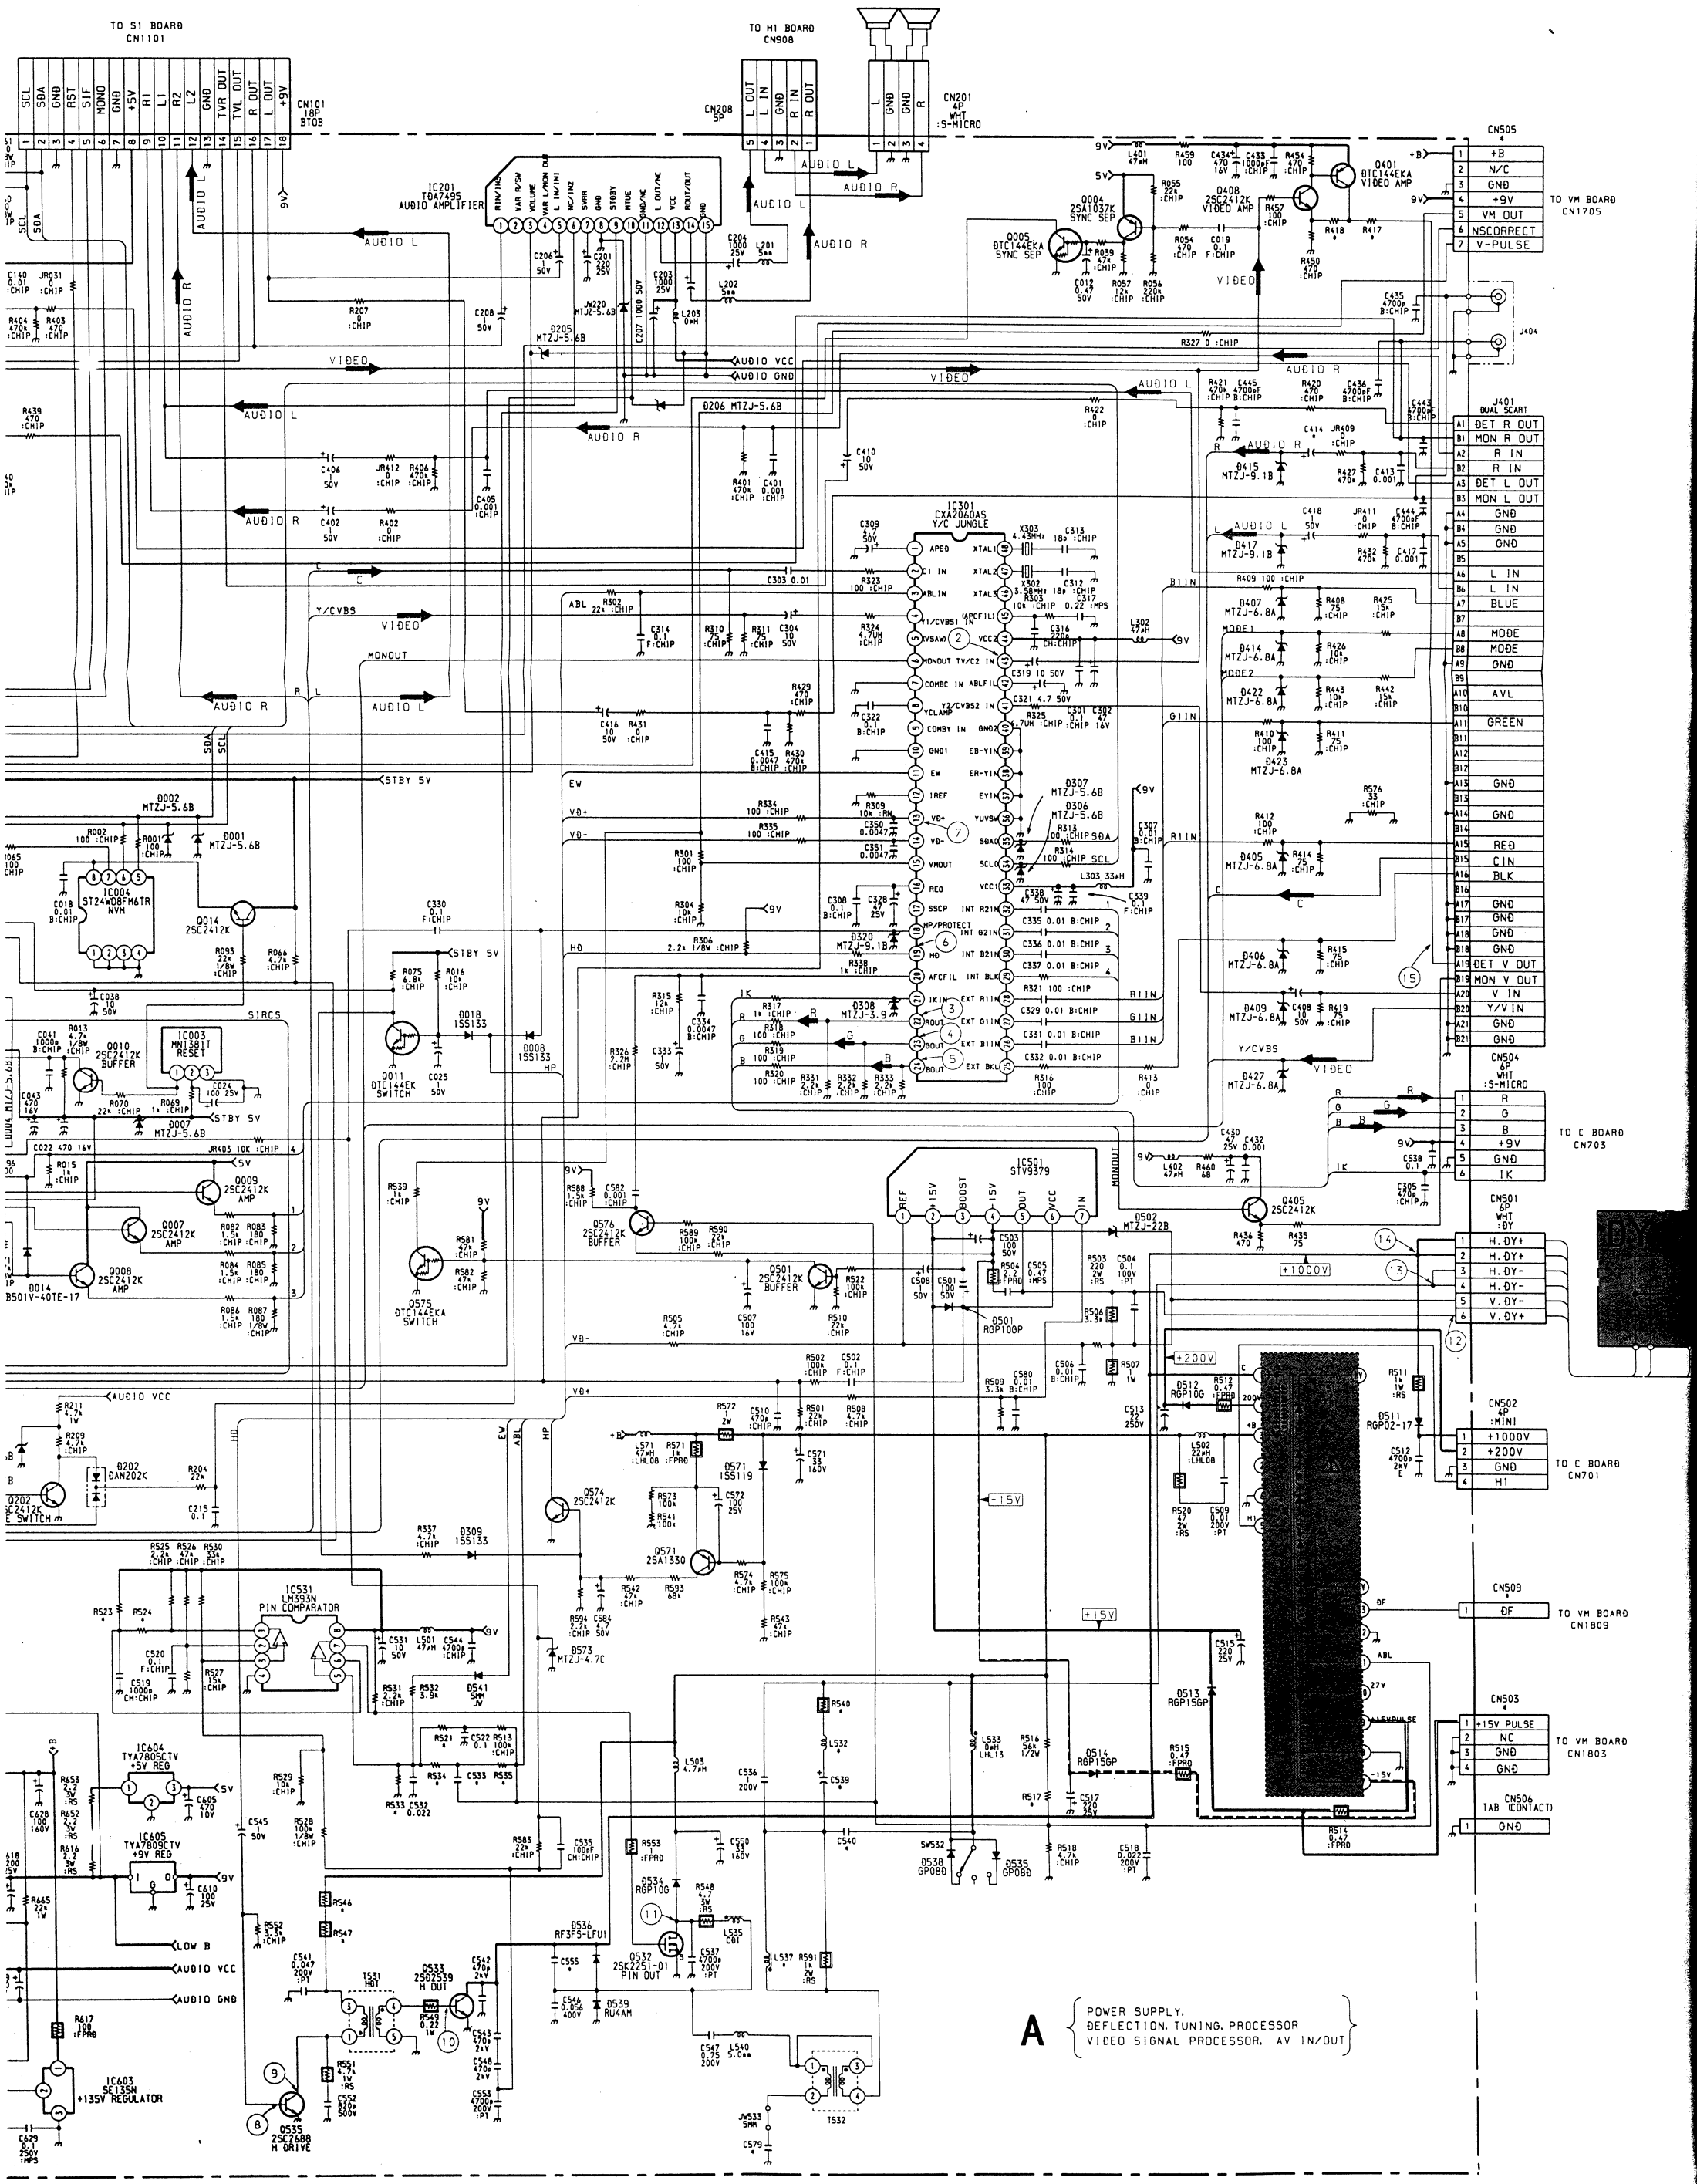
TO S1 BOARD CN1101
CN101 18P BTOB
SCL SDA GND RST SIF MONO GND +5V R1 L1 R2 L2 GND TVR OUT TVL OUT R OUT L OUT +9V
TO H1 BOARD CN908
CN208 5P
L OUT L IN GND R IN R OUT
CN201 4P WHT :S-MICRO
L GND GND R
IC201 TDA7495 AUDIO AMPLIFIER
RIN/IN2 VAR R/SW VOLUME VAR L/MON OUT L IN/IN1 NC/IN2 SVRR GND STBY MTUE GND/NC L OUT/NC VCC ROUT/OUT GND
AUDIO L
AUDIO R
VIDEO
AUDIO VCC
AUDIO GND
STBY 5V
CN505
+B
N/C
GND
+9V
VM OUT
NSCORRECT
V-PULSE
TO VM BOARD CN1705
Q401 DTC144EKA VIDEO AMP
Q004 2SA1037K SYNC SEP
Q005 DTC144EKA SYNC SEP
Q408 2SC2412K VIDEO AMP
J404
J401 DUAL SCART
ĐET R OUT
MON R OUT
R IN
R IN
ĐET L OUT
MON L OUT
GND
GND
GND
L IN
L IN
BLUE
MODE
MODE
GND
AVL
GREEN
GND
GND
REĐ
CIN
BLK
GND
GND
GND
GND
ĐET V OUT
MON V OUT
V IN
Y/V IN
GND
GND
IC301 CXA2060AS Y/C JUNGLE
APEĐ
C1 IN
ABL IN
Y1/CVBS1 IN
XVSAW
MONOUT TV/C2 IN
COMBC IN ABLFIL
Y2/CVBS2 IN
YCLAMP
COMBY IN
GNĐ1
EW
IREF
VĐ+
VĐ-
VMOUT
REĐ
SSCP
HP/PROTECT
HĐ
AFCFIL
IKIN
ROUT
GOUT
BOUT
XTAL1
XTAL2
XTAL3
(APCF1L)
VCC2
EB-YIN
ER-YIN
EYIN
YUVSW
SDAO
SCLO
VCC1
INT R2IN
INT G2IN
INT B2IN
INT BLK
EXT R1IN
EXT G1IN
EXT B1IN
EXT BLK
IC501 STV9379
REF 15V BOOST 15V OUT VCC IN
IC531 LM393N PIN COMPARATOR
IC603 SE135N +135V REGULATOR
IC604 TYA7805CTV +5V REG
IC605 TYA7809CTV +9V REG
IC004 ST24W08FM6TR NVM
IC003 MN13811 RESET
SIRCS
LOW B
Q009 2SC2412K AMP
Q007 2SC2412K AMP
Q008 2SC2412K AMP
Q010 2SC2412K BUFFER
Q011 DTC144EK SWITCH
Q014 2SC2412K
Q202 2SC2412K E SWITCH
Q576 2SC2412K BUFFER
Q575 DTC144EKA SWITCH
Q501 2SC2412K BUFFER
Q574 2SC2412K
Q571 2SA1330
Q535 2SC2688 H DRIVE
Q533 2SD2539 H OUT
Q532 2SK2251-01 PIN OUT
Q405 2SC2412K
Q502 MTZJ-22B
Q501 RGP10GP
Q512 RGP10G
Q511 RGP02-17
Q513 RGP15GP
Q514 RGP15GP
Q534 RGP10G
Q538 GP08D
Q535 GP08D
Đ001 MTZJ-5.6B
Đ002 MTZJ-5.6B
Đ205 MTZJ-5.6B
Đ206 MTZJ-5.6B
Đ007 MTZJ-5.6B
Đ415 MTZJ-9.1B
Đ417 MTZJ-9.1B
Đ407 MTZJ-6.8A
Đ414 MTZJ-6.8A
Đ422 MTZJ-6.8A
Đ423 MTZJ-6.8A
Đ405 MTZJ-6.8A
Đ406 MTZJ-6.8A
Đ409 MTZJ-6.8A
Đ427 MTZJ-6.8A
Đ307 MTZJ-5.6B
Đ306 MTZJ-5.6B
Đ320 MTZJ-9.1B
Đ308 MTZJ-3.9
Đ018 1SS133
Đ008 1SS133
Đ309 1SS133
Đ571 1SS119
Đ014 BS01V-40TE-17
Đ202 DAN202K
Đ220 MTZJ-4.7C
Đ573 MTZJ-4.7C
Đ536 RF3FS-LFUI
Đ539 RU4AM
Đ541 SHM JW
Đ501 RGP10GP
Đ502 MTZJ-22B
CN504 6P WHT :S-MICRO
R G B +9V GND IK
TO C BOARD CN703
CN501 6P WHT :ĐY
H.ĐY+ H.ĐY+ H.ĐY- H.ĐY- V.ĐY- V.ĐY+
CN502 4P :MINI
+1000V +200V GND H1
TO C BOARD CN701
CN509
ĐF ABL 27V -15V
TO VM BOARD CN1809
CN503
+15V PULSE NC GND GND
TO VM BOARD CN1803
CN506 TAB (CONTACT)
GND
+1000V
+200V
+15V
-15V
A { POWER SUPPLY. ĐEFLECTION. TUNING. PROCESSOR VIĐEO SIGNAL PROCESSOR. AV IN/OUT }

WAVEFORMS A BOARD

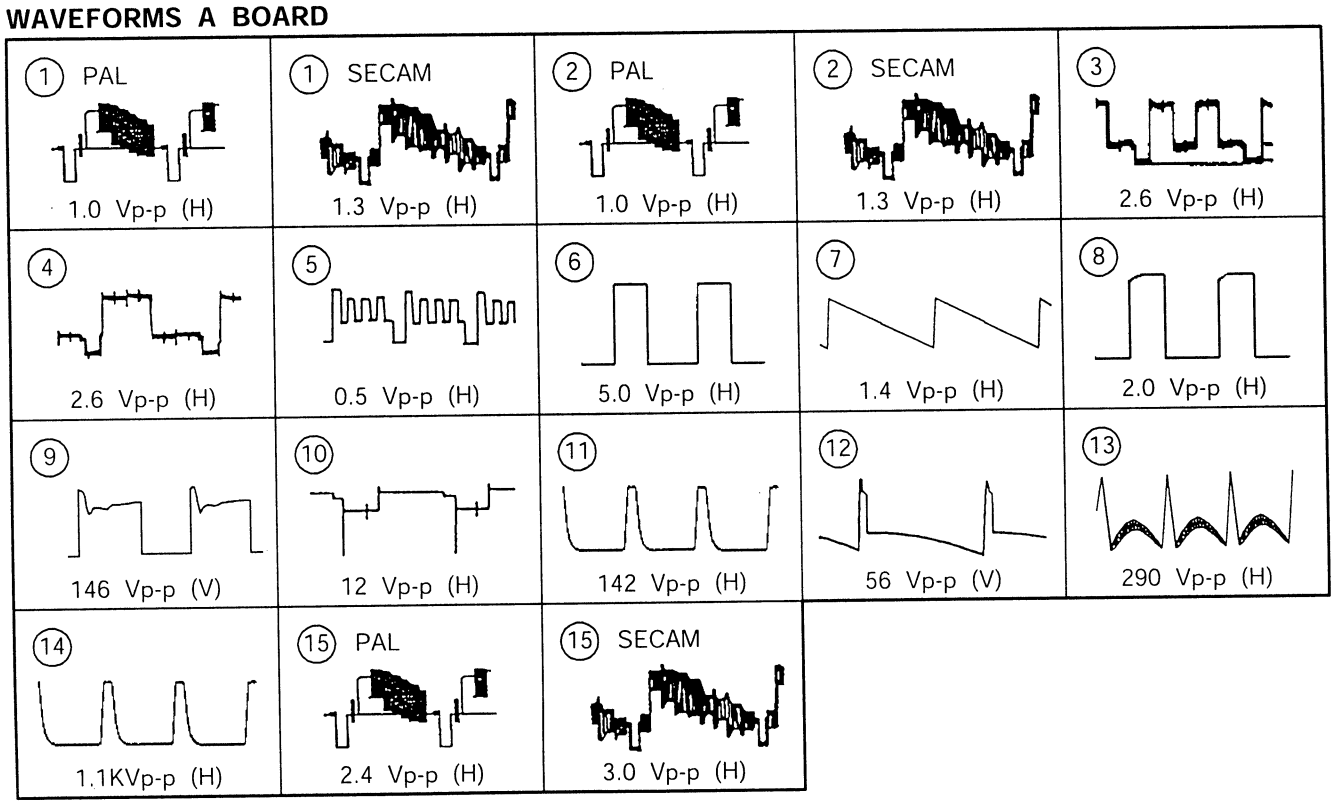

A BOARD * MARK

Ref	25K5A	25K5B	25K5D	25K5E	25K5U	29K5A	29K5B	29K5D	29K5E	29K5U
C111	0	0.01MF	0	0	0	0	0.01MF	0	0	0
C133	-	1MF	-	-	-	-	1MF	-	-	-
C414	0.001MF	0.001MF	0.001MF	0.001MF	0.001MF	1MF	1MF	1MF	1MF	1MF
C533	-	-	-	-	-	0.0047MF	0.0047MF	0.0047MF	0.0047MF	0.0047MF
C539	10MF	10MF	10MF	10MF	10MF	1MF	1MF	1MF	1MF	1MF
C540	0.068MF	0.068MF	0.068MF	0.068MF	0.068MF	0.033MF	0.033MF	0.033MF	0.033MF	0.033MF
C555	0	1800P	0	0	0	1500P	1500P	1500P	1500P	1500P
C579	LEAD JUMPER (5.0MM)	LEAD JUMPER (5.0MM)	LEAD JUMPER (5.0MM)	LEAD JUMPER (5.0MM)	LEAD JUMPER (5.0MM)	-	-	-	-	-
C614	-	-	-	-	-	0.0047MF	0.0047MF	0.0047MF	0.0047MF	0.0047MF
CF105	-	TRAP	-	-	TRAP	-	TRAP	-	-	TRAP
CN503	-	-	-	-	-	4P	4P	4P	4P	4P
CN505	-	-	-	-	-	7P	7P	7P	7P	7P
CN509	-	-	-	-	-	1P	1P	1P	1P	1P
IC001	SAA5497PS/ M1A/040	SAA5497PS/ M1A/038	SAA5497PS/ M1A/040	SAA5497PS/ M1A/038	SAA5497PS/ M1A/038	SAA5497PS/ M1A/040	SAA5497PS/ M1A/038	SAA5497PS/ M1A/040	SAA5497PS/ M1A/038	SAA5497PS/ M1A/038
IC101	TDA9817/V1	TDA9818/V1	TDA9817/V1	TDA9817/V1	TDA9817/V1	TDA9817/V1	TDA9818/V1	TDA9817/V1	TDA9817/V1	TDA9817/V1
JR012	0	-	0	0	0	0	-	0	0	0
JW128	47K	47K	47K	47K	47K	47K	47K	47K	47K	-
L532	2.2MMH	2.2MMH	2.2MMH	2.2MMH	2.2MMH	3.3MMH	3.3MMH	3.3MMH	3.3MMH	3.3MMH
L537	1-409-756-11	1-416-214-11	1-409-756-11	1-409-756-11	1-409-756-11	1-409-855-11	1-409-855-11	1-409-855-11	1-409-855-11	1-409-855-11
R030	-	-	-	-	-	22K	22K	22K	22K	22K
R063	-	4.7K	-	-	-	-	4.7K	-	-	-
R064	-	4.7K	-	-	-	-	4.7K	-	-	-
R078	-	-	-	-	-	4.7K	4.7K	4.7K	4.7K	4.7K
R112	-	2.2K	-	-	-	-	2.2K	-	-	-
R133	0	-	0	0	0	0	-	0	0	0
R149	-	1K	-	-	-	-	1K	-	-	-
R417	75	75	75	75	68	75	75	75	75	68
R418	470	470	470	470	560	470	470	470	470	560
R517	27K	27K	27K	27K	27K	10K	10K	10K	10K	10K
R521	680K	680K	680K	680K	680K	1M	1M	1M	1M	1M
R523	1M	680K	1M	1M	1M	1M	1M	1M	1M	1M
R524	27K	33K	27K	27K	27K	27K	27K	27K	27K	27K
R533	10K	22K	10K	10K	10K	10K	10K	10K	10K	10K
R534	220K	220K	220K	220K	220K	470K	470K	470K	470K	470K
R535	330K	330K	330K	330K	330K	150K	150K	150K	150K	150K
R540	56	56	56	56	56	47	47	47	47	47
R546	47	47	47	47	47	1.5K	1.5K	1.5K	1.5K	1.5K
R547	LEAD JUMPER (7.5MM)	LEAD JUMPER (7.5MM)	LEAD JUMPER (7.5MM)	LEAD JUMPER (7.5MM)	LEAD JUMPER (7.5MM)	1.5K	1.5K	1.5K	1.5K	1.5K
RV101	-	22K	-	-	-	-	22K	-	-	-
SWF101	1-767-874-11	1-579-273-12	1-767-874-11	1-767-874-11	1-767-874-11	1-767-874-11	1-579-273-12	1-767-874-11	1-767-874-11	1-767-874-11
T511	NX-1680	NX-1680	NX-1680	NX-1680	NX-1680	NX-1681	NX-1681	NX-1681	NX-1681	NX-1681
TU101	TELE-001A	TELE-001A	TELE-001A	TELE-001A	FSS BTP-AU611	TELE-001A	TELE-001A	TELE-001A	TELE-001A	FSS BTP-AU611

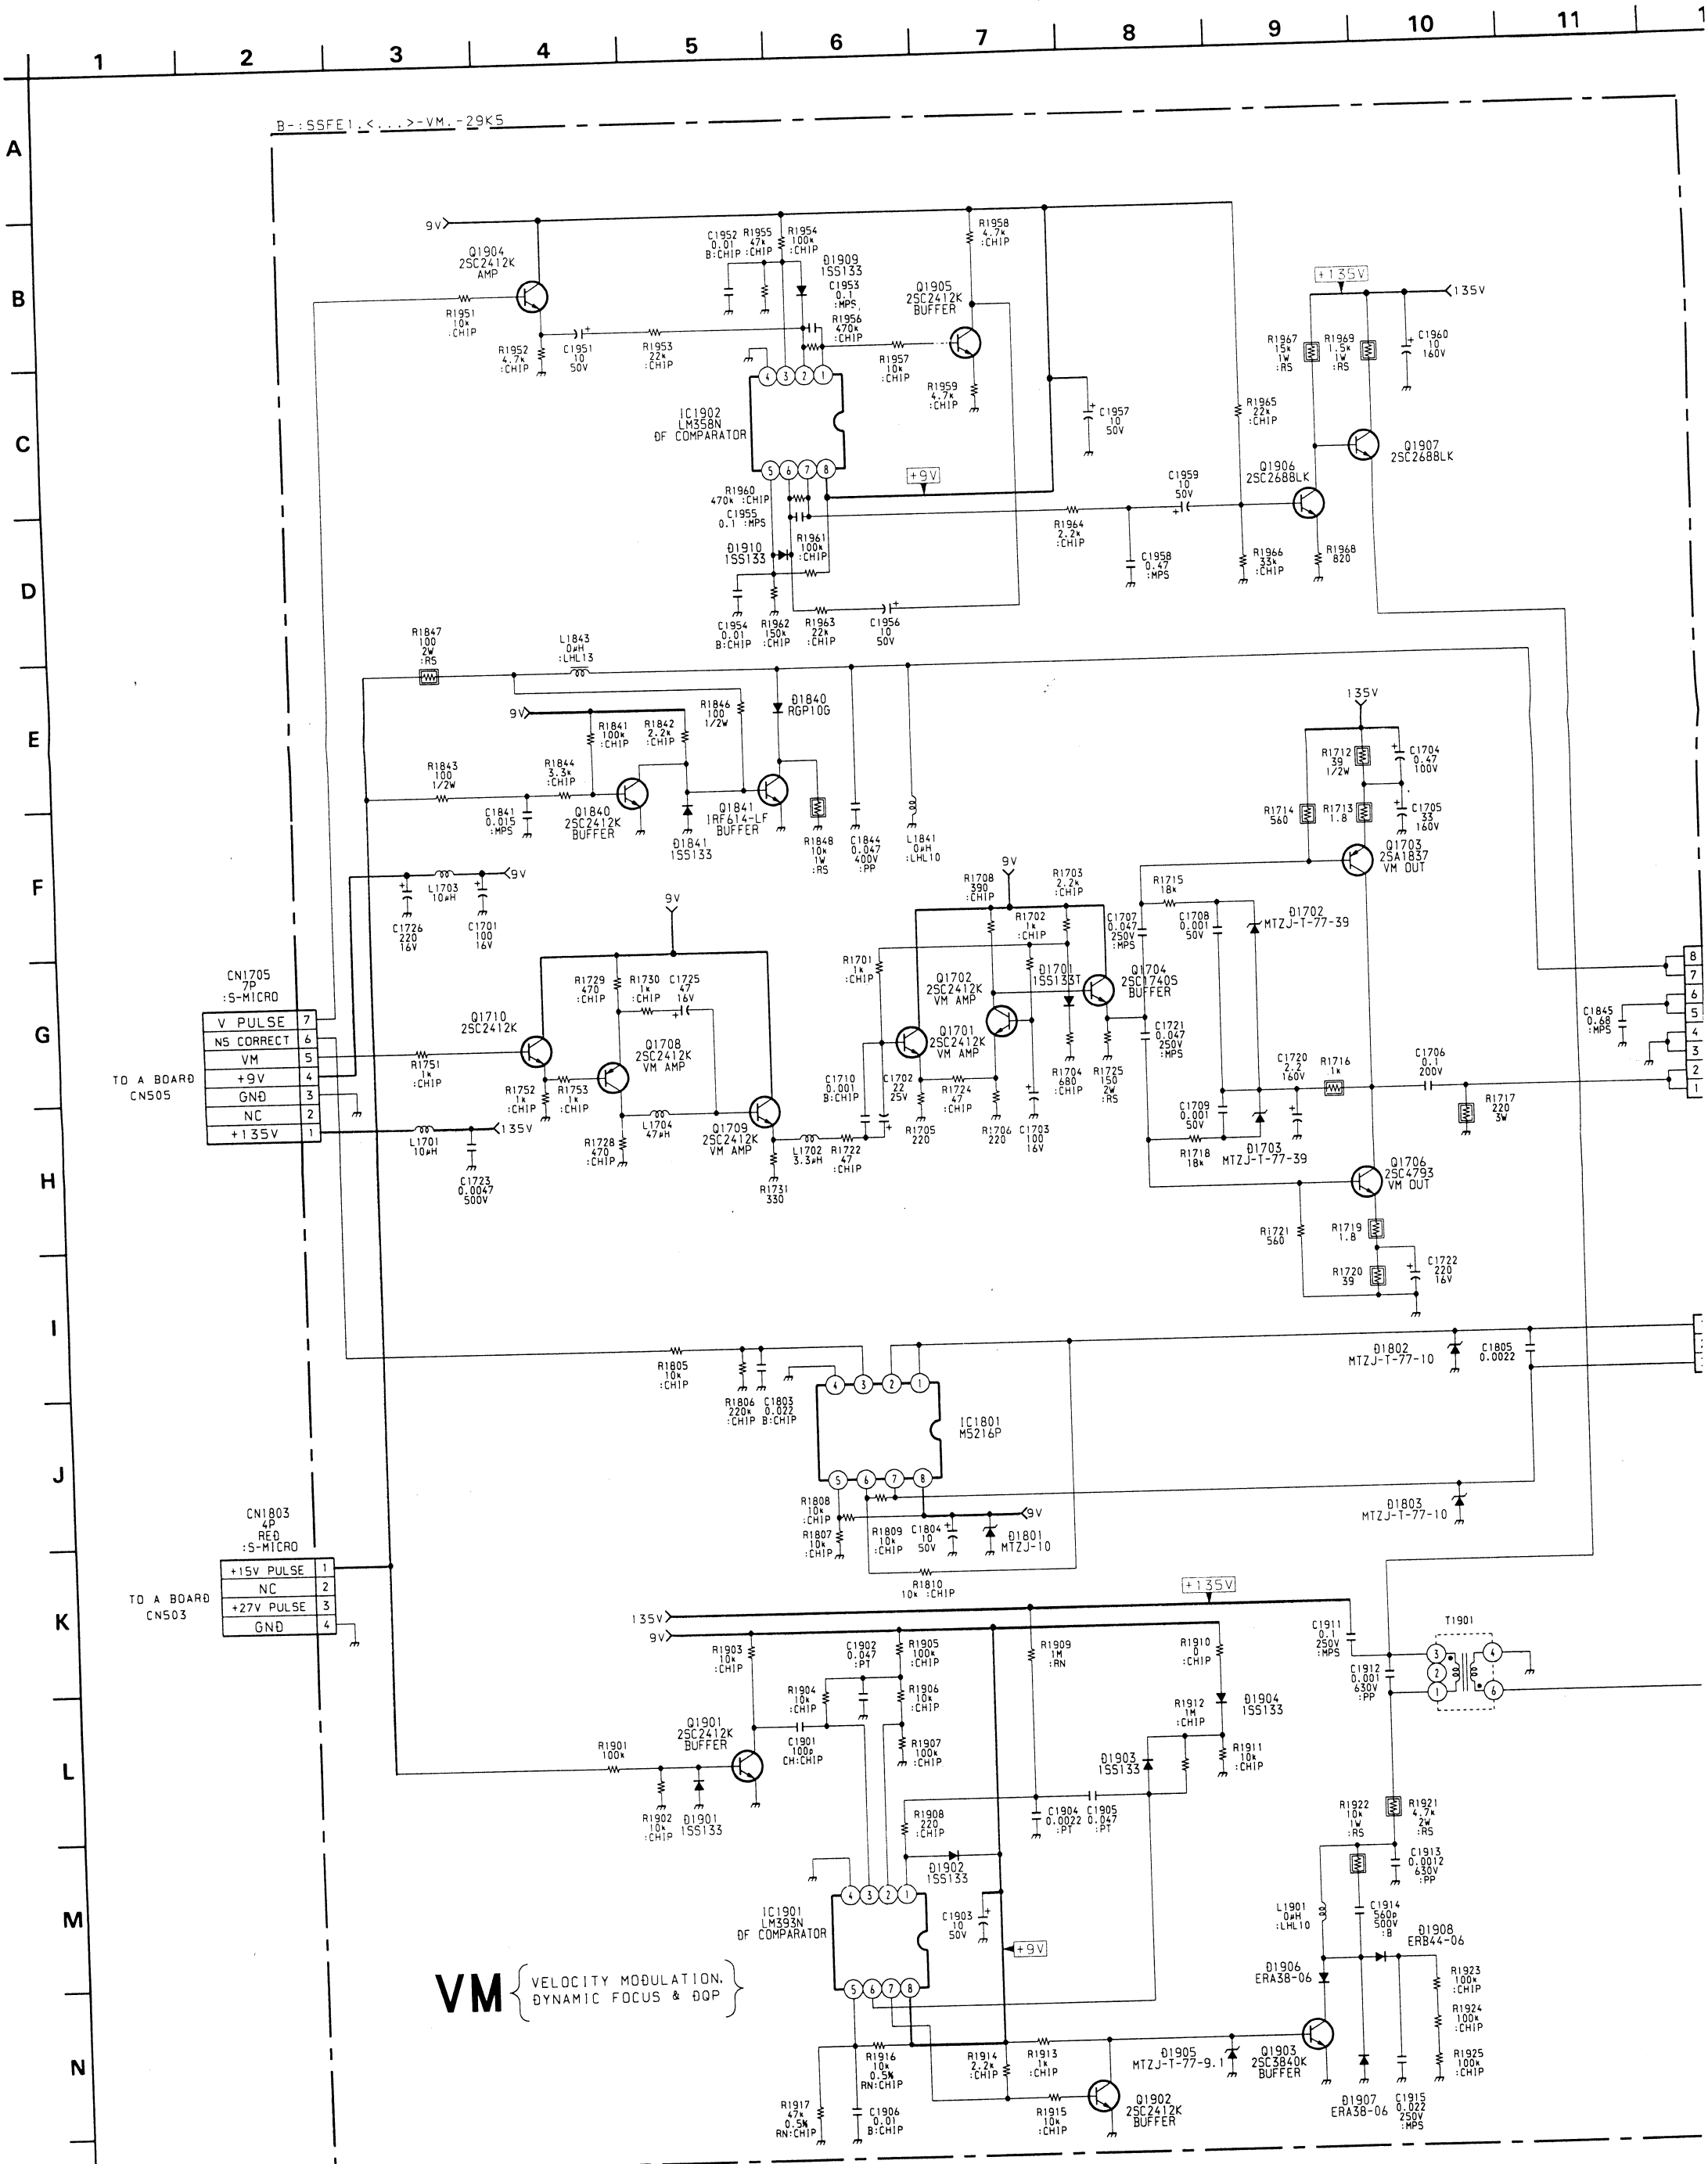
B-:SSFE1.<...>-VM.-29K5
9V
Q1904 2SC2412K AMP
R1951 10k :CHIP
R1952 4.7k :CHIP
C1951 10 50V
R1953 22k :CHIP
C1952 0.01 B:CHIP
R1955 47k :CHIP
R1954 100k :CHIP
D1909 1SS133
C1953 0.1 :MPS
R1956 470k :CHIP
R1957 10k :CHIP
Q1905 2SC2412K BUFFER
R1958 4.7k :CHIP
R1959 4.7k :CHIP
IC1902 LM358N DF COMPARATOR
C1957 10 50V
+9V
R1960 470k :CHIP
C1955 0.1 :MPS
D1910 1SS133
R1961 100k :CHIP
C1954 0.01 B:CHIP
R1962 150k :CHIP
R1963 22k :CHIP
C1956 10 50V
R1964 2.2k :CHIP
C1958 0.47 :MPS
C1959 10 50V
R1965 22k :CHIP
R1966 33k :CHIP
R1968 820
+135V
135V
R1967 15k 1W :RS
R1969 1.5k 1W :RS
C1960 10 160V
Q1907 2SC2688LK
Q1906 2SC2688LK
R1847 100 2W :RS
L1843 0μH :LHL13
R1846 100 1/2W
D1840 RGP10G
R1841 100k :CHIP
R1842 2.2k :CHIP
R1843 100 1/2W
R1844 3.3k :CHIP
C1841 0.015 :MPS
Q1840 2SC2412K BUFFER
D1841 1SS133
Q1841 IRF614-LF BUFFER
R1848 10k 1W :RS
C1844 0.047 400V :PP
L1841 0μH :LHL10
R1712 39 1/2W
C1704 0.47 100V
R1714 560
R1713 1.8
C1705 33 160V
Q1703 2SA1837 VM OUT
L1703 10μH
C1726 220 16V
C1701 100 16V
R1708 390 :CHIP
R1703 2.2k :CHIP
R1702 1k :CHIP
C1707 0.047 250V :MPS
R1715 18k
C1708 0.001 50V
D1702 MTZJ-T-77-39
R1701 1k :CHIP
D1701 1SS133T
Q1704 2SC1740S BUFFER
Q1702 2SC2412K VM AMP
Q1701 2SC2412K VM AMP
C1721 0.047 250V :MPS
C1845 0.68 :MPS
CN1705 7P :S-MICRO
V PULSE 7
NS CORRECT 6
VM 5
+9V 4
GND 3
NC 2
+135V 1
TO A BOARD CN505
R1729 470 :CHIP
R1730 1k :CHIP
C1725 47 16V
Q1710 2SC2412K
Q1708 2SC2412K VM AMP
R1751 1k :CHIP
R1752 1k :CHIP
R1753 1k :CHIP
L1704 47μH
R1728 470 :CHIP
Q1709 2SC2412K VM AMP
L1702 3.3μH
R1722 47 :CHIP
R1731 330
C1710 0.001 B:CHIP
C1702 22 25V
R1724 47 :CHIP
R1705 220
R1706 220
C1703 100 16V
R1704 680 :CHIP
R1725 150 2W :RS
C1720 2.2 160V
R1716 1k
C1706 0.1 200V
R1717 220 3W
C1709 0.001 50V
D1703 MTZJ-T-77-39
R1718 18k
L1701 10μH
C1723 0.0047 500V
Q1706 2SC4793 VM OUT
Ri721 560
R1719 1.8
R1720 39
C1722 220 16V
R1805 10k :CHIP
R1806 220k :CHIP
C1803 0.022 B:CHIP
IC1801 M5216P
D1802 MTZJ-T-77-10
C1805 0.0022
R1808 10k :CHIP
R1807 10k :CHIP
R1809 10k :CHIP
C1804 10 50V
D1801 MTZJ-10
R1810 10k :CHIP
D1803 MTZJ-T-77-10
CN1803 4P RED :S-MICRO
+15V PULSE 1
NC 2
+27V PULSE 3
GND 4
TO A BOARD CN503
135V
9V
R1903 10k :CHIP
C1902 0.047 :PT
R1905 100k :CHIP
R1909 1M :RN
R1910 0 :CHIP
C1911 0.1 250V :MPS
T1901
C1912 0.001 630V :PP
R1904 10k :CHIP
R1906 10k :CHIP
R1912 1M :CHIP
D1904 1SS133
Q1901 2SC2412K BUFFER
R1901 100k
C1901 100p CH:CHIP
R1907 100k :CHIP
D1903 1SS133
R1911 10k :CHIP
R1902 10k :CHIP
D1901 1SS133
R1908 220 :CHIP
C1904 0.0022 :PT
C1905 0.047 :PT
R1922 10k 1W :RS
R1921 4.7k 2W :RS
C1913 0.0012 630V :PP
D1902 1SS133
IC1901 LM393N DF COMPARATOR
C1903 10 50V
+9V
L1901 0μH :LHL10
C1914 560p 500V :B
D1908 ERB44-06
D1906 ERA38-06
R1923 100k :CHIP
R1924 100k :CHIP
R1925 100k :CHIP
R1916 10k 0.5% RN:CHIP
R1914 2.2k :CHIP
R1913 1k :CHIP
D1905 MTZJ-T-77-9.1
Q1903 2SC3840K BUFFER
R1917 47k 0.5% RN:CHIP
C1906 0.01 B:CHIP
R1915 10k :CHIP
Q1902 2SC2412K BUFFER
D1907 ERA38-06
C1915 0.022 250V :MPS
VM
VELOCITY MODULATION, DYNAMIC FOCUS & DDP

VM VELOCITY MODULATION, DYNAMIC FOCUS & DQP

VM Board

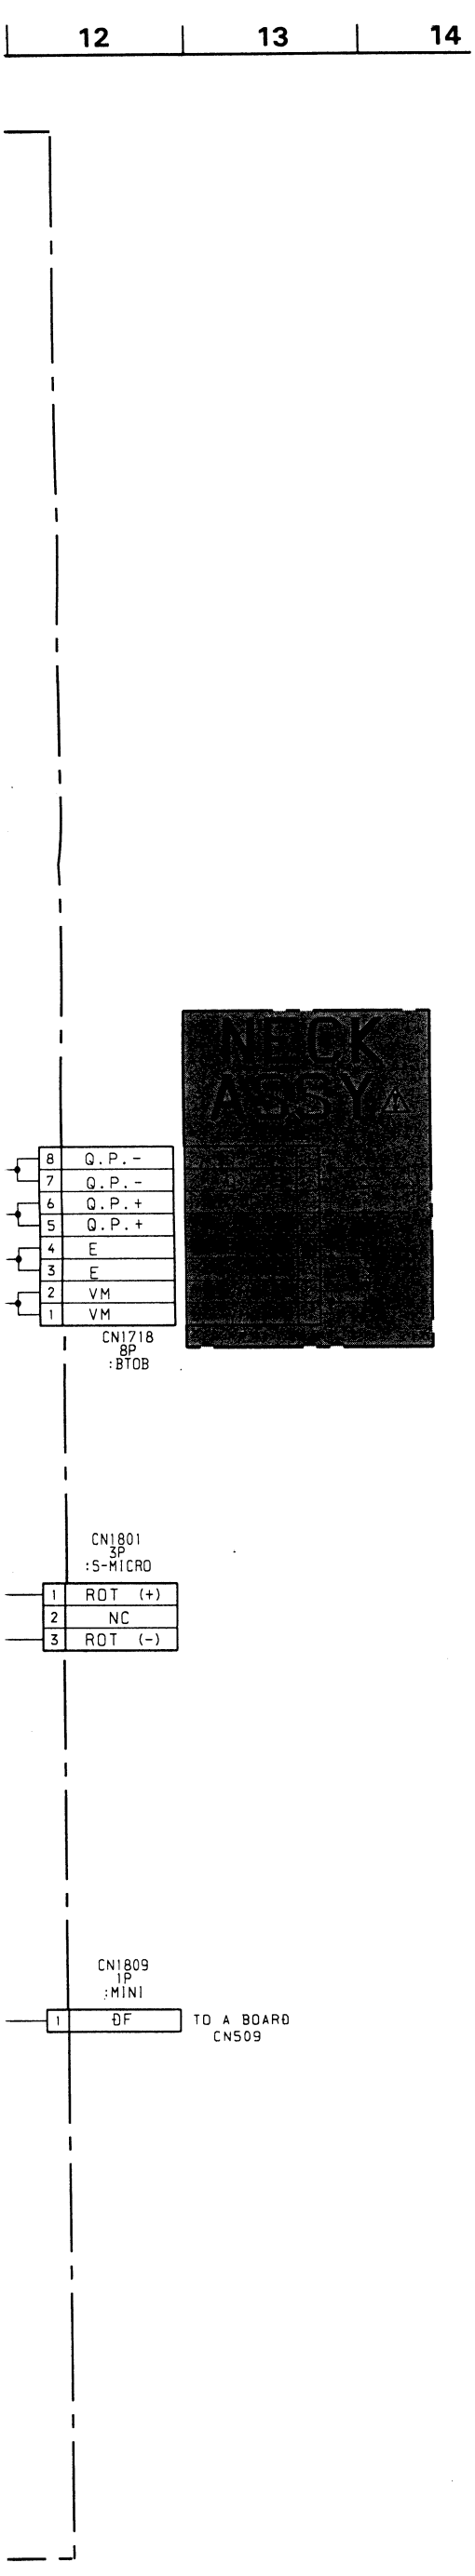

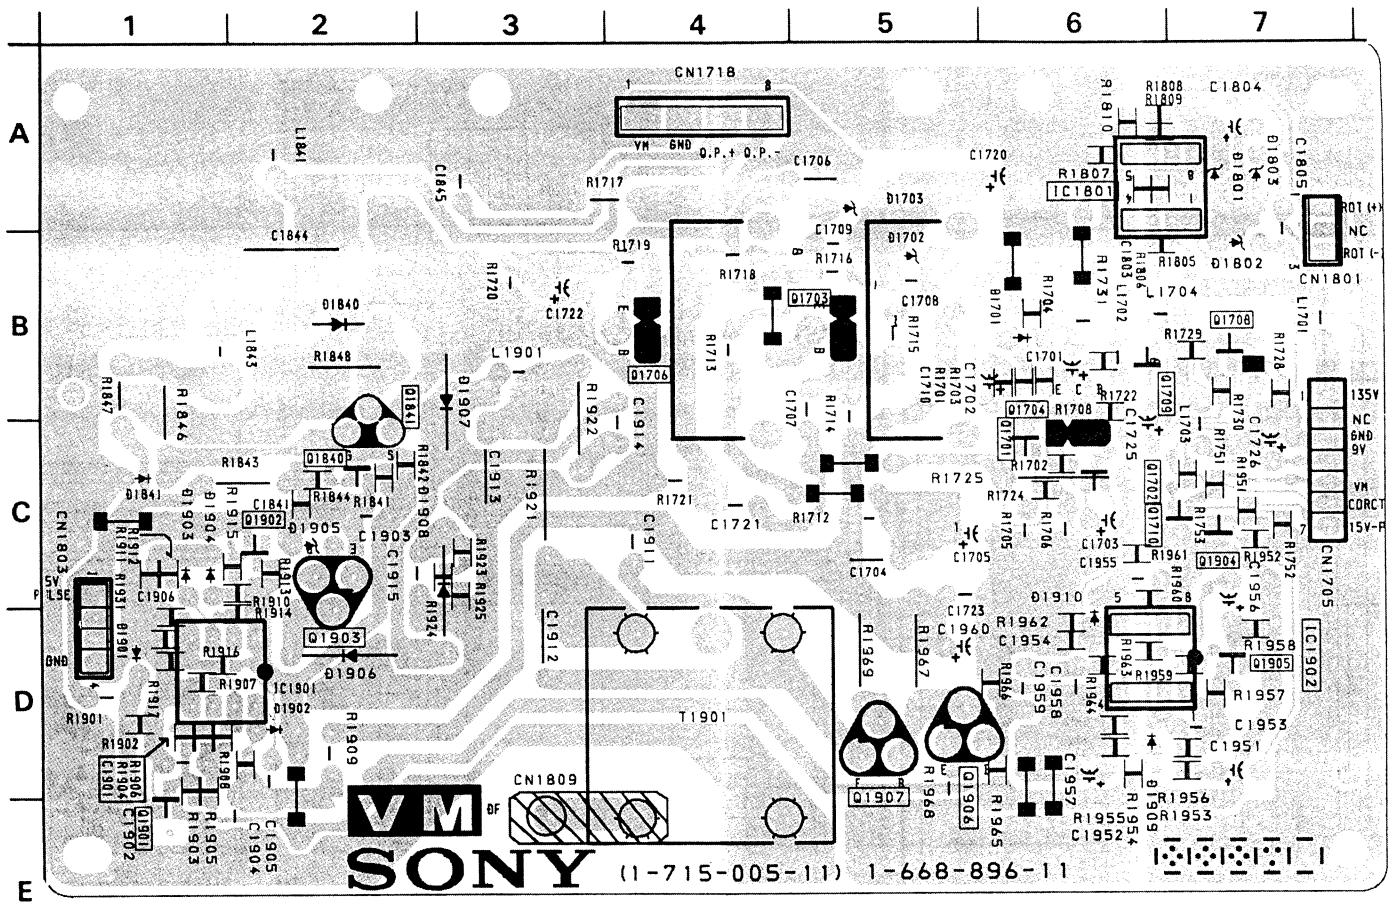

VM BOARD IC VOLTAGE TABLE

IC Voltage Table		
Ref No	Pin No	Voltage (V)
IC1801	1 - 3	5.0
	5 - 6	4.3
	7	3.7
	8	8.0
	9	4.8
IC1901	1	1.7
	2	4.0
	3	4.5
	5	6.7
	6	6.8
	7	3.6
	8	8.0
IC1902	1 - 3	2.8
	5 - 6	5.2
	7	5.0
	8	8.0

C BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	(B) Base	(C) Collector	(E) Emitter
Q702	1.5	8.3	1.1
Q703	8.8	169.8	8.3
Q704	169.5	1.9	209.5
Q705	1.5	8.3	1.1
Q706	8.8	170.7	8.3
Q707	170.5	1.9	215.7
Q708	1.5	8.3	1.0
Q709	8.9	171.3	8.3
Q710	171.2	1.9	206.3

VM BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	(B) Base	(C) Collector	(E) Emitter
Q1701	2.4	8.7	1.8
Q1702	2.4	6.5	1.8
Q1703	133.4	52.0	133.8
Q1704	8.7	8.5	5.8
Q1706	0.8	52.0	0.5
Q1708	5.0	2.1	5.6
Q1709	5.4	8.0	4.7
Q1710	5.6	8.0	5.0
Q1840	-0.3	4.7	-
Q1901	0.4	1.3	-
Q1902	0.4	0.3	-
Q1903	0.3	62.0	-
Q1904	-	8.0	0.1
Q1905	2.7	6.5	2.2
Q1906	4.0	68.8	3.4
Q1907	68.7	122.2	68.2
	Gate	Drain	Source
Q1841	4.7	18.0	-

WAVEFORMS C BOARD

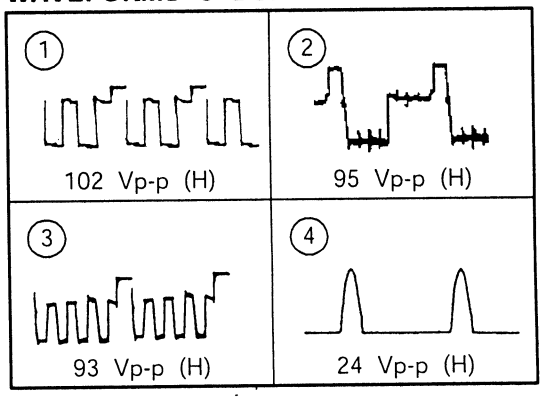

C [RGB OUT]

C Board

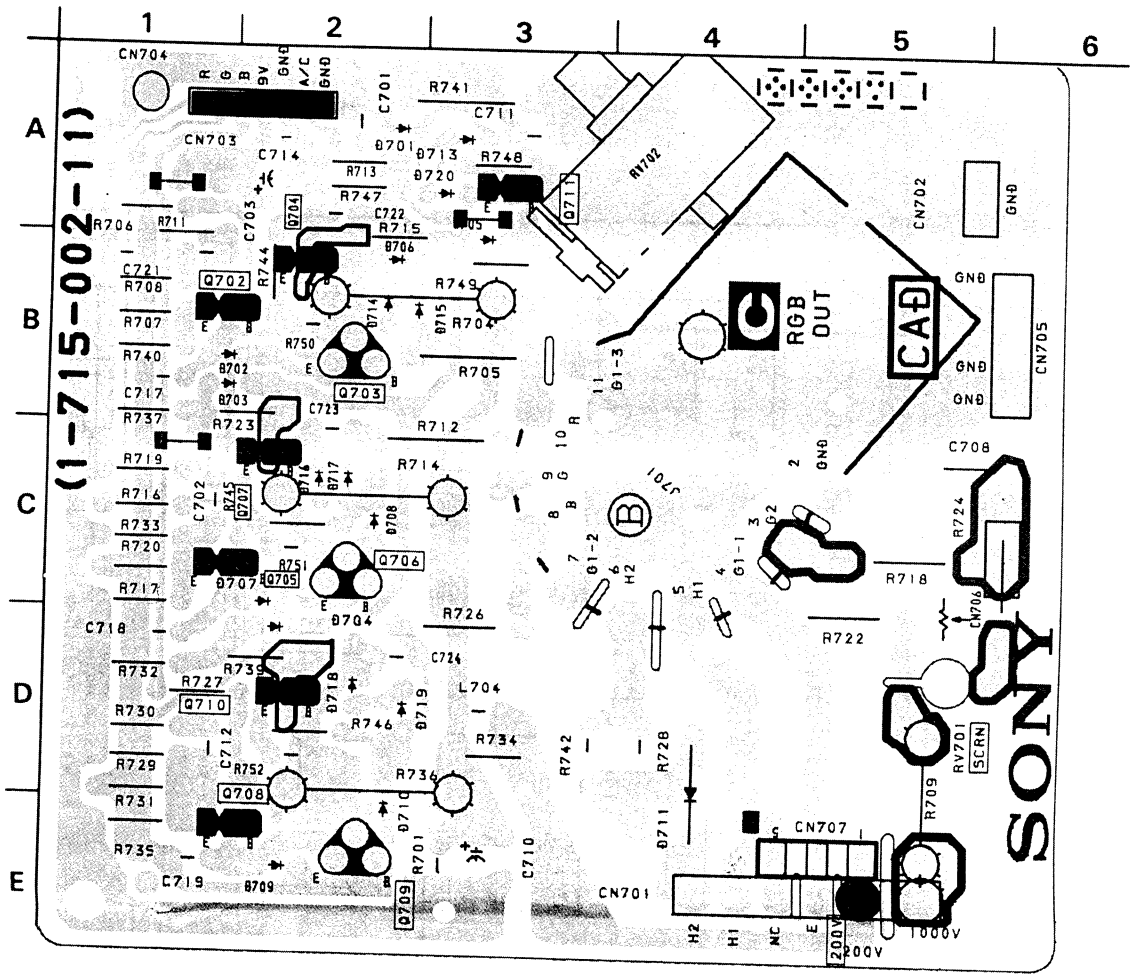

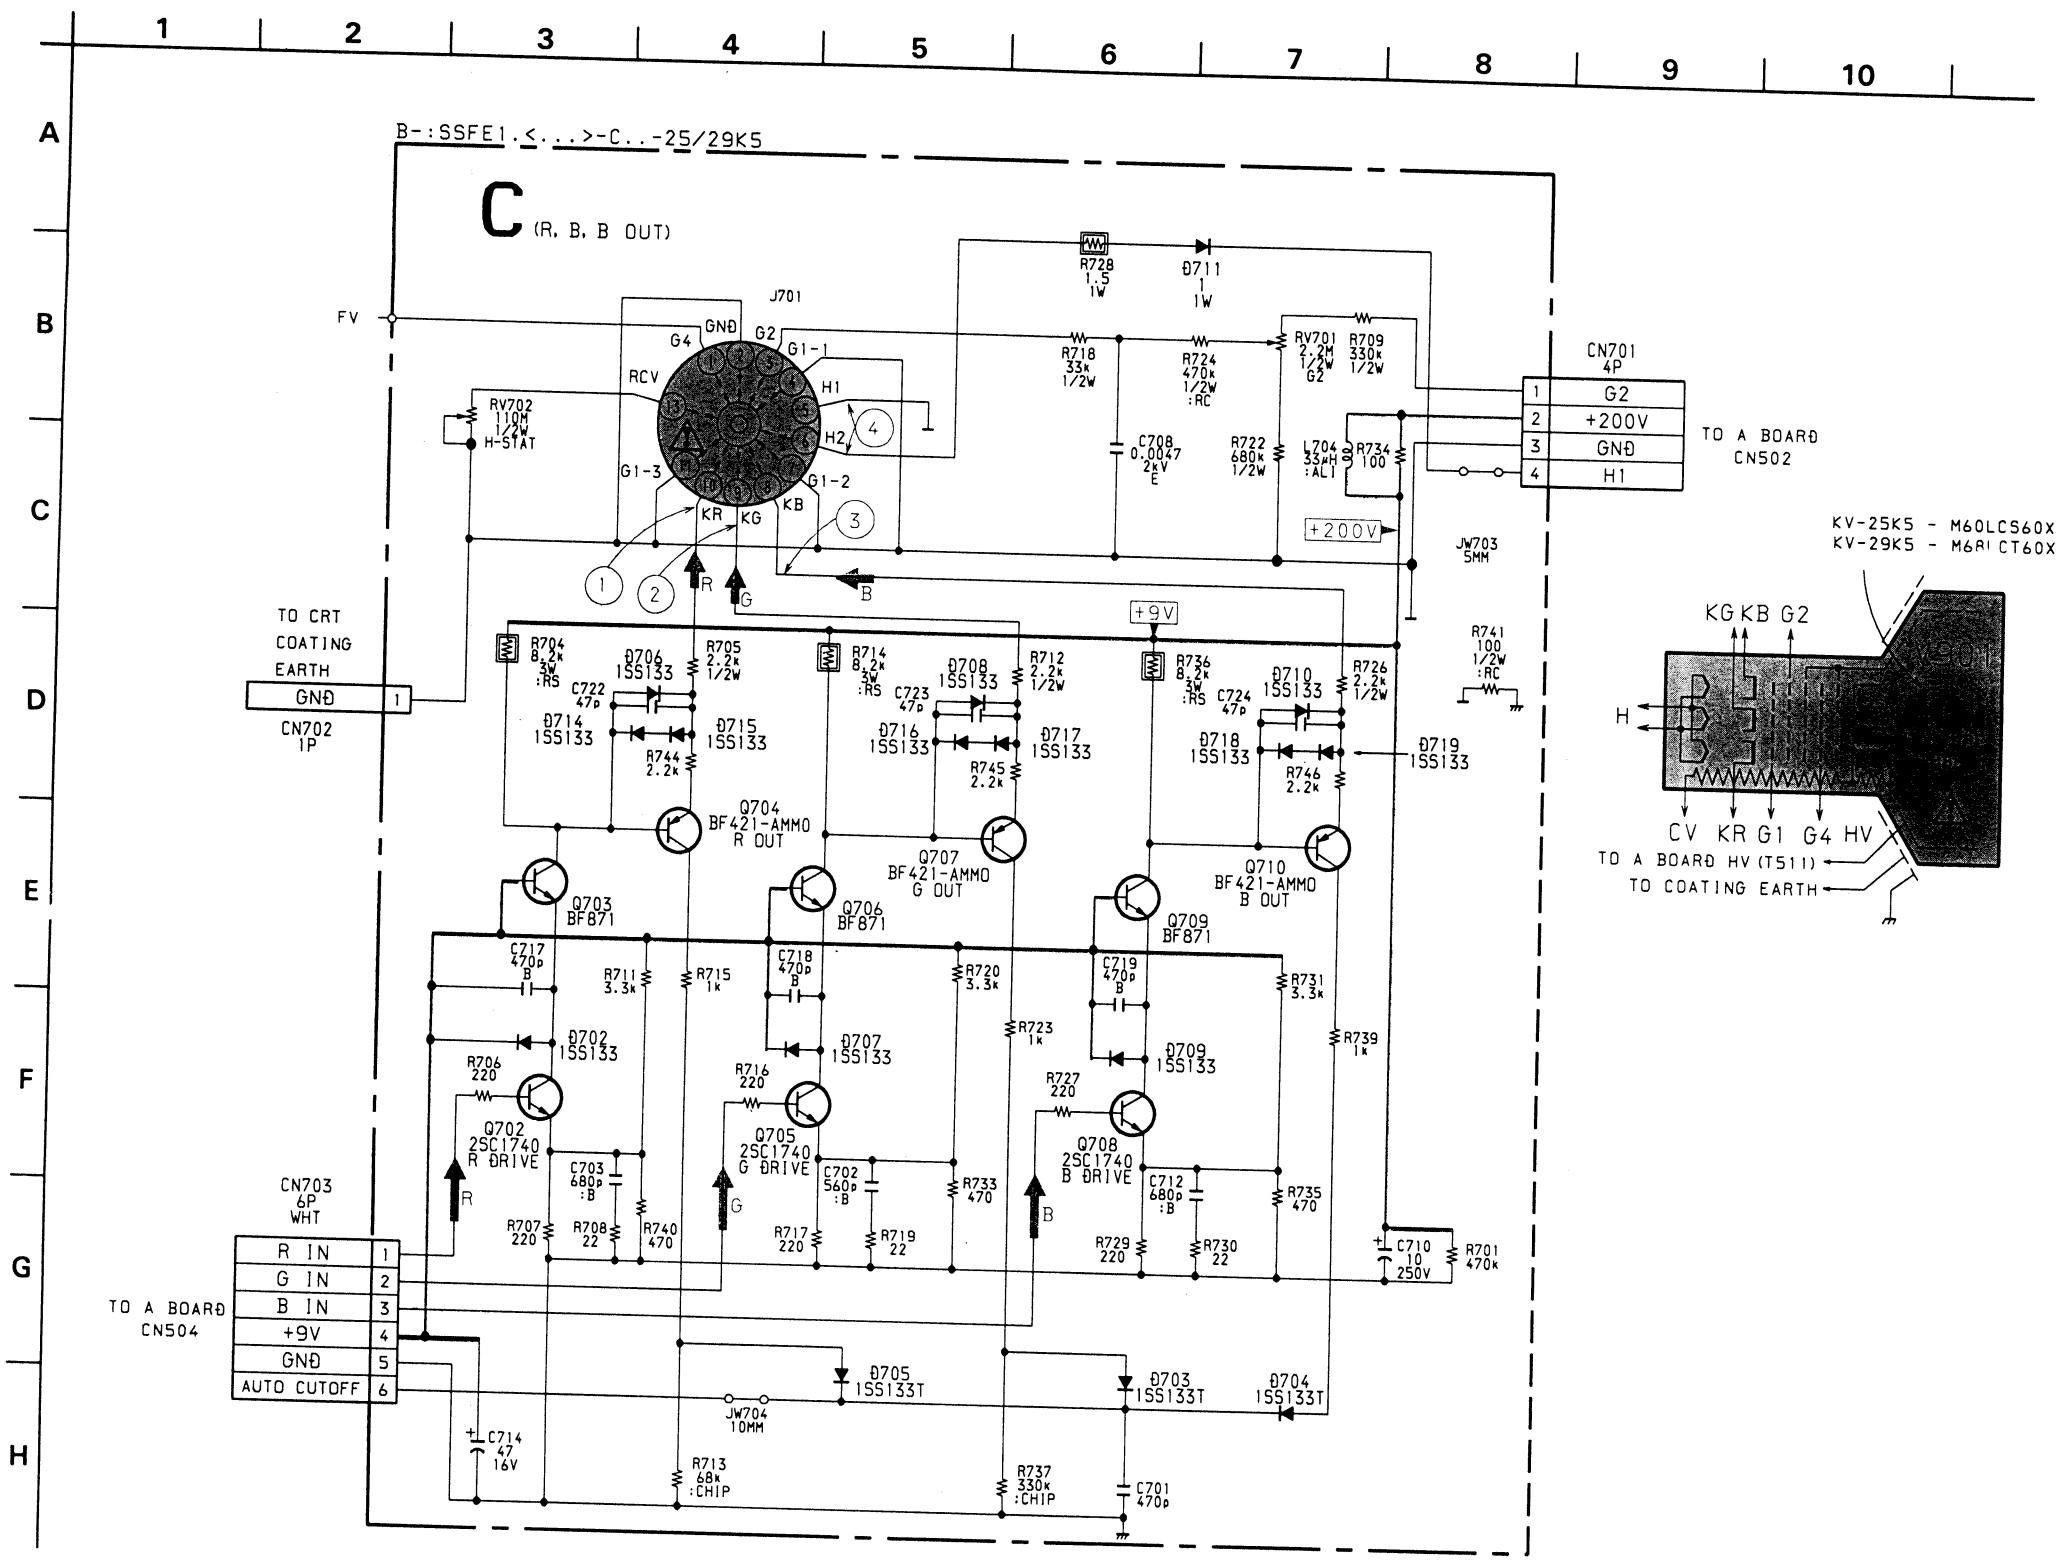

H1 [AC SWITCH, CONTROL SWITCH,
AUDIO IN, Y/C IN, HEADPHONE IN,
SIRCS RECIEVER, SIRCS INDICATOR]

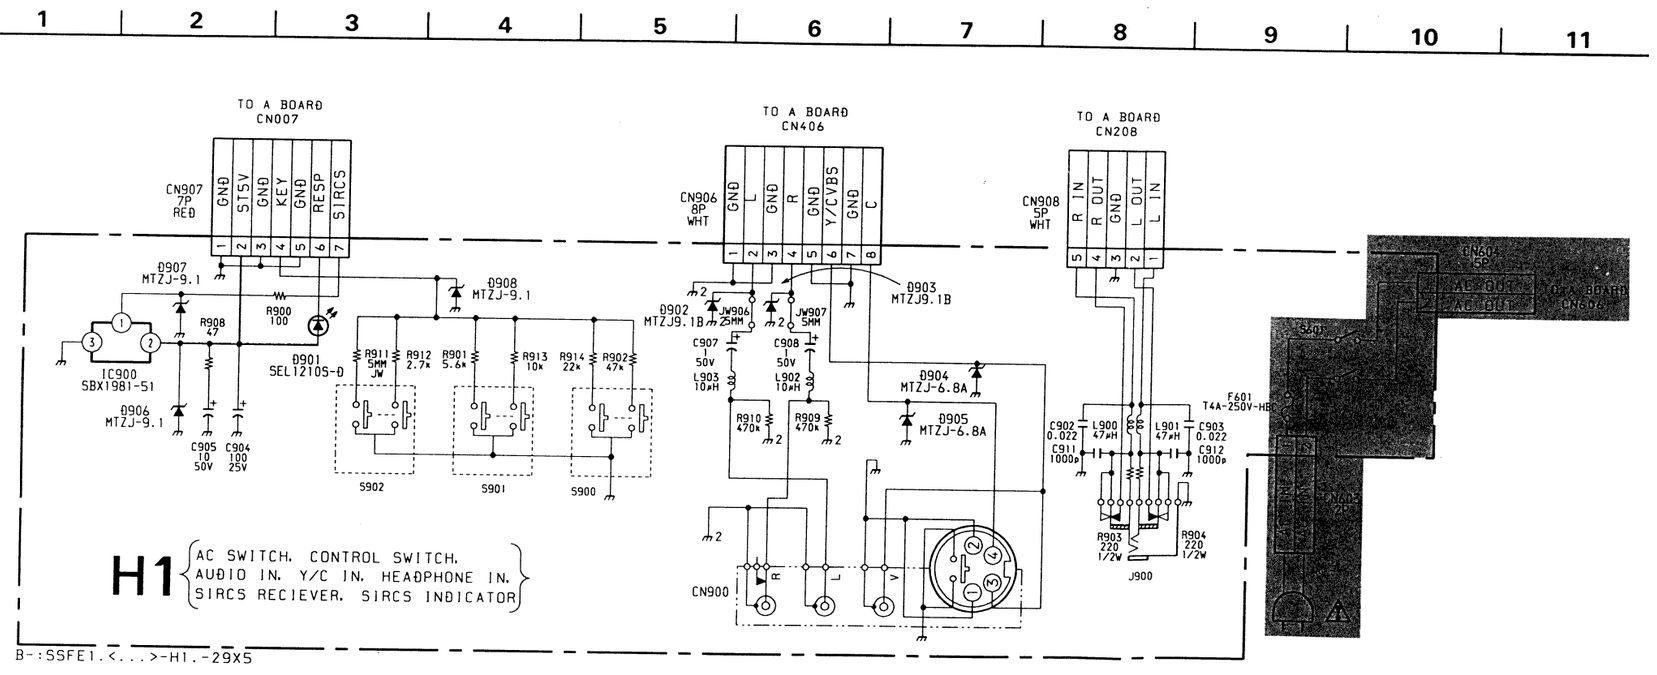

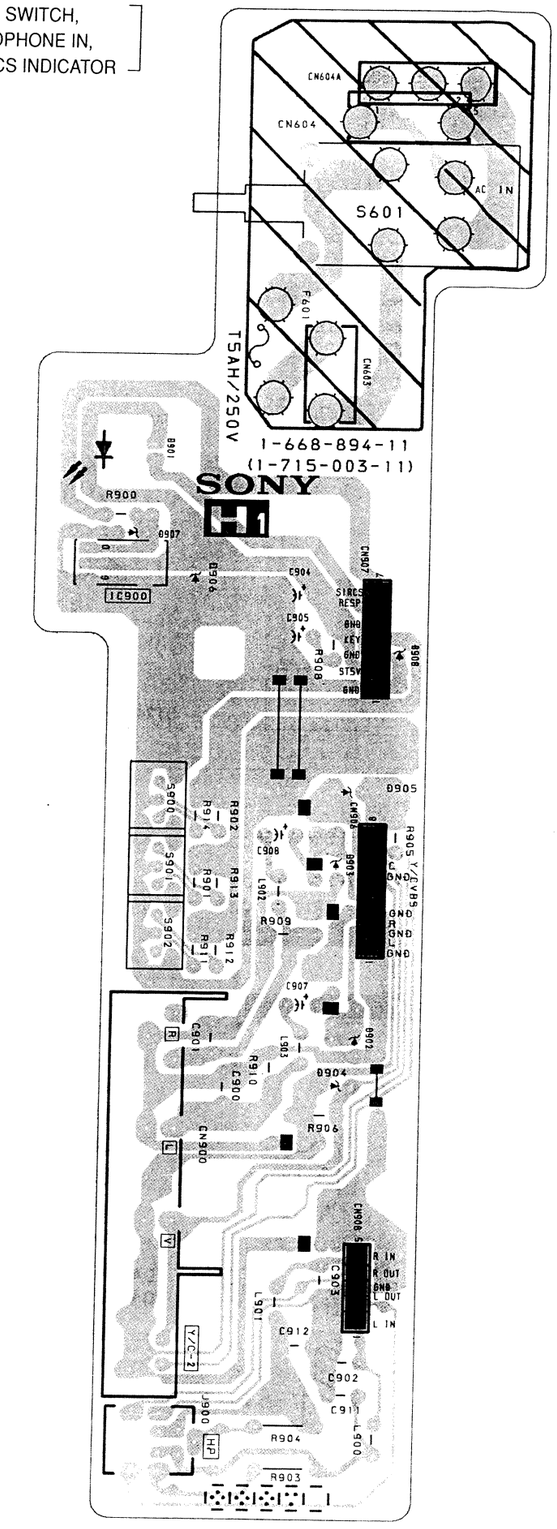

5-4 SEMICONDUCTORS

CD4052BCM



LM358DR-EZ
NJM4558M-TE2
NJM2903D



LM393P
TDA2822M
TEA2124



SAA5497PS/MIA/038
SAA5497PS/MIA/039
SAA5497PS/MIA040

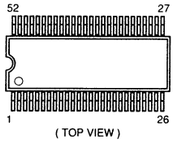

SBX1981-51



SE-135N
SE135N-LF12

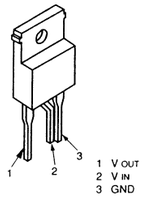

STR-F6654



STV9379



ST24W08FM6TR



TDA7495



TDA9818-V1
TDA9817-V1

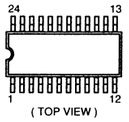

TDA9875
TDA9870

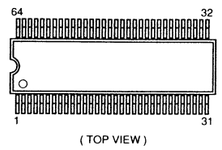

TOP209P

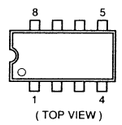

TYA7805CTV
TYA7809CTV



BF421-AMMO
2SA1091-O



2SC688-LK



2SA1837



2SC4793



BF871-127



DTA144ESA
DTA144ESA-TP
DTC114EK
DTC114EKA-T146
DTC143TKA-T146
DTC144EKA-T-146R
2SA1037K-T-146-
R2SA1162-G
2SC2412K-QR
2SC2412K-T-146-R



IRF614



2SA933AS-QRT
2SA933AS-RT
2SC1740S-RT



2SK2251-01-F19

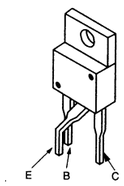

AK04-V1
AU-012-V1
BYD33G
BYD33G-
AMMO
DINL20-TR
ERB44-06TP1
EG-1Z-V1
EL1Z
ERD28-06S
ERD28-08S
ERC06-15
FMN-G12S
RG1CLF-B1
RGP10GPKG23
RU3YX-LF-C4
RU3YX-V1
RU-4AM-T3
1SS292T-77



DAN202K
DAN202K-T146



ERA81-004TP1
ERA83-006
MTZJ-T-77-3.9B
MTZJ-T-77-5.6B
MTZJ-T-77-5.6C
MTZJ-T-77-6.8A
MTZJ-T-77-6.8C
MTZJ-T-77-7.5C
MTZJ-T-77-9.1A
MTZJ-T-77-9.1A
MTZJ-T-77-10
MTZJ-T-77-33A
MTZJ-33C
MTZJ-7.5B
RD3.9ES-B2
RD5.6ESB2
RD6.8ES-B2
RD7.5ESB2
RD9.1ES-B3
1SS119-25TD
1SS133T-77



SEL12108-D

UF4005PK623



5-5. IC BLOCK DIAGRAMS

A BOARD IC501 STV 9379

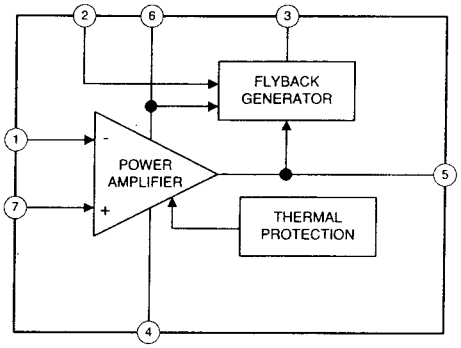

A BOARD IC201 TDA7495

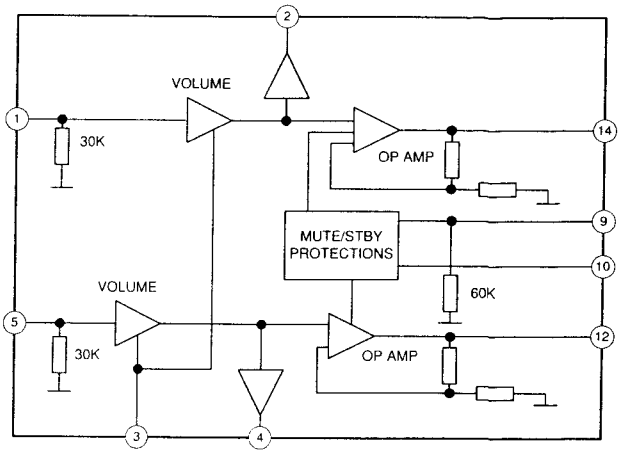

A BOARD IC101 TDA9817/V1

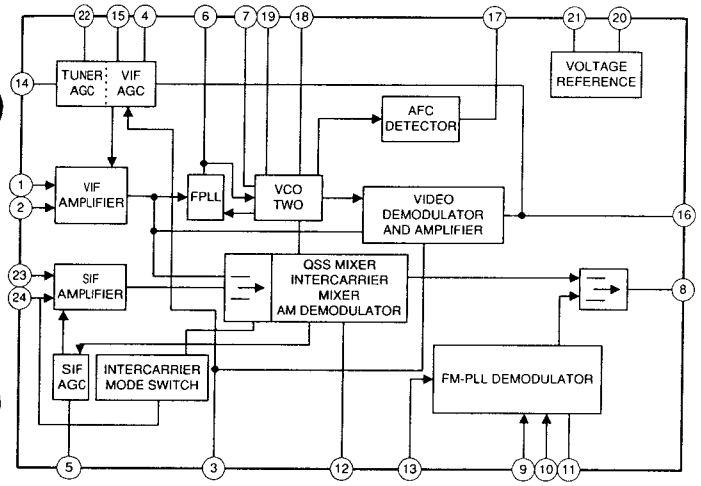

A BOARD IC606 STR-F6654

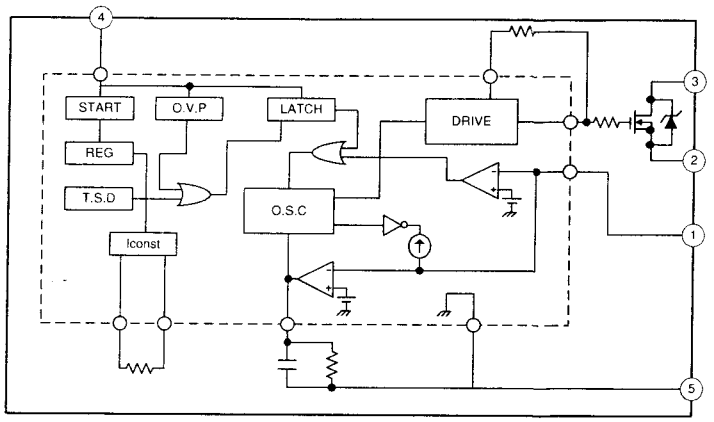

A BOARD IC301 CXA2060AS

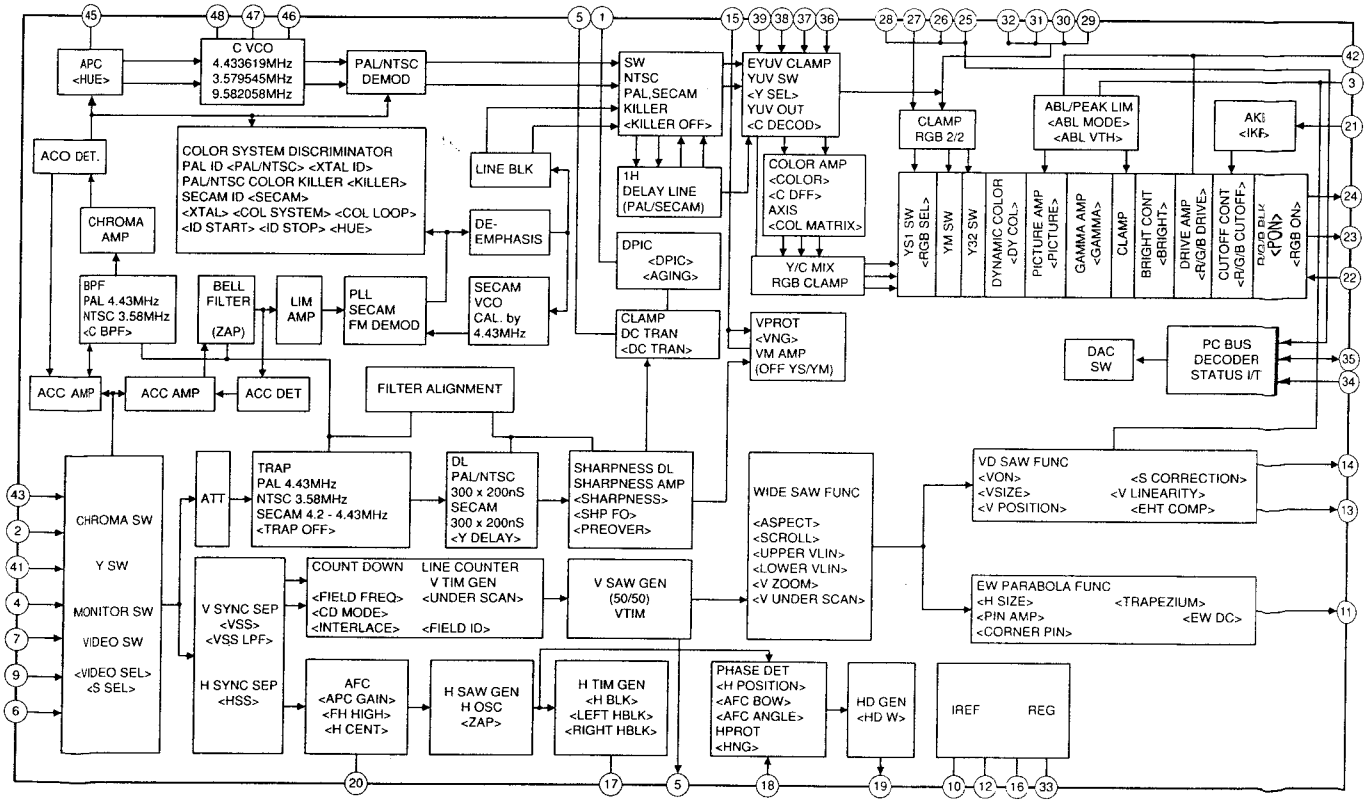

SECTION 6
EXPLODED VIEWS

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

6-1. CHASSIS

■ 7-685-663-79 x 1
● 7-685-663-71 x 8

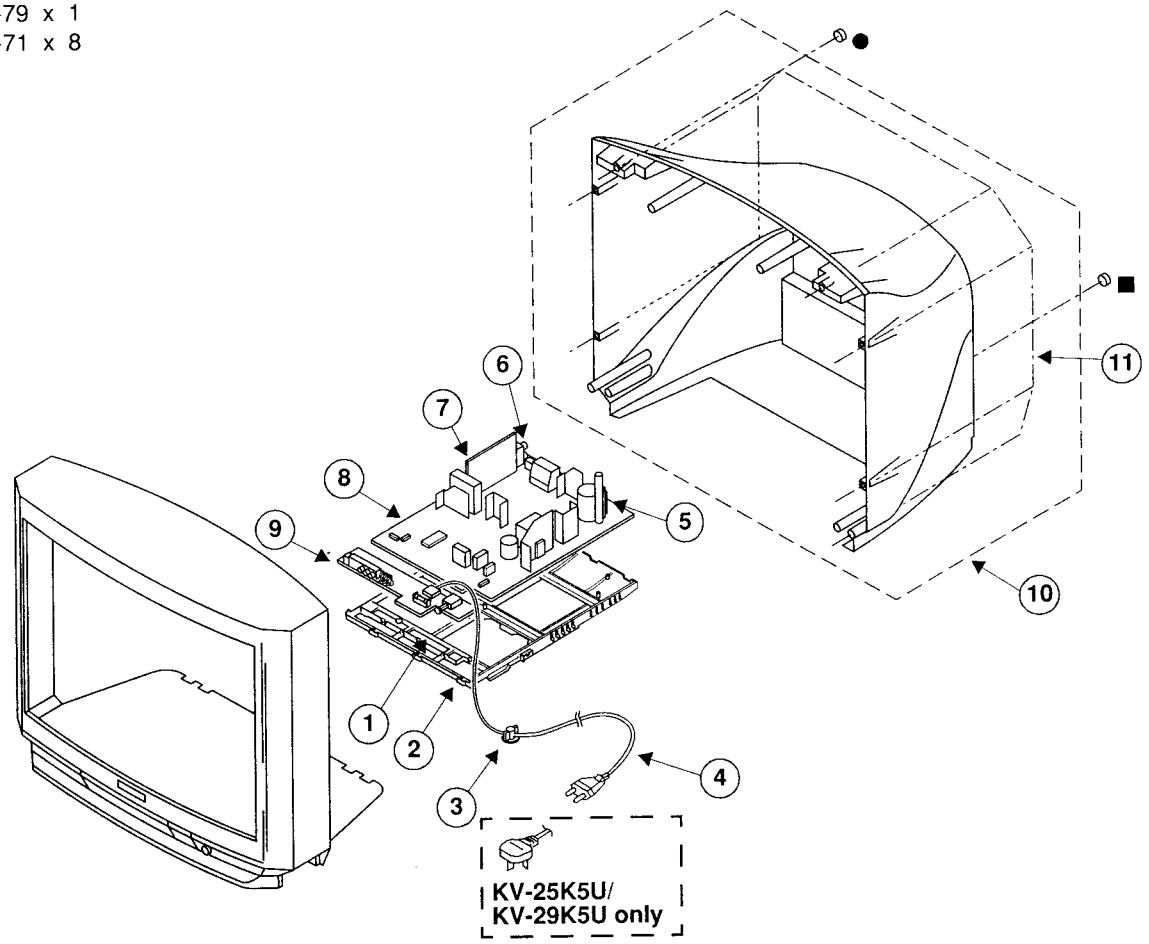

REF. NO.		PART.NO	DESCRIPTION	REMARK
1	⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
2		*4-204-141-01	BRACKET, MAIN	
3		*4-202-531-01	AC CORD LOCK (SC)	
4	⚠	1-765-286-11	CORD, POWER (KV-25K5A/25K5B/25K5D/25K5E/29K5A/29K5B/29K5D/29K5E)	
	⚠	1-776-204-11	CORD, POWER (FILTER) (KV-25K5U/29K5U)	
5	⚠	1-453-264-11	TRANSFORMER ASSY, FLYBACK (NX-1680/U2B4) (KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
	⚠	1-453-265-11	TRANSFORMER ASSY, FLYBACK (NX-1681/U2B4) (KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
6		1-693-418-11	TUNER (TELE9-001A) (KV-25K5A/25K5B/25K5D/25K5E/29K5A/29K5B/29K5D/29K5E)	
		8-598-464-00	TUNER (FSS-BTP-AU611) (KV-25K5U/29K5U)	
7		*A-1652-055-A	S1 BOARD, COMPLETE (KV-25K5A/25K5D/29K5A/29K5D)	
		*A-1652-059-A	S1 BOARD, COMPLETE (KV-25K5B/29K5B)	
		*A-1652-054-A	S1 BOARD, COMPLETE (KV-25K5E/25K5U/29K5E/29K5U)	
8		*A-1632-740-A	A BOARD, COMPLETE (KV-25K5A)	
		*A-1632-738-A	A BOARD, COMPLETE (KV-25K5B)	
		*A-1632-739-A	A BOARD, COMPLETE (KV-25K5D)	
		*A-1632-737-A	A BOARD, COMPLETE (KV-25K5E)	
		*A-1632-736-A	A BOARD, COMPLETE (KV-25K5U)	
		*A-1632-735-A	A BOARD, COMPLETE (KV-29K5A)	
		*A-1632-734-A	A BOARD, COMPLETE (KV-29K5B)	
		*A-1632-733-A	A BOARD, COMPLETE (KV-29K5D)	
		*A-1632-732-A	A BOARD, COMPLETE (KV-29K5E)	
		*A-1632-731-A	A BOARD, COMPLETE (KV-29K5U)	
9		*A-1646-160-A	H1 BOARD, COMPLETE	
10		X-4200-307-3	COVER ASSY, REAR (KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
		X-4200-304-2	COVER ASSY, REAR (KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
11		4-203-713-11	COVER REAR (KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
		4-203-705-11	COVER, REAR (KV-29K5A/29K5B/29K5D/29K5E/29K5U)	

6-2. PICTURE TUBE

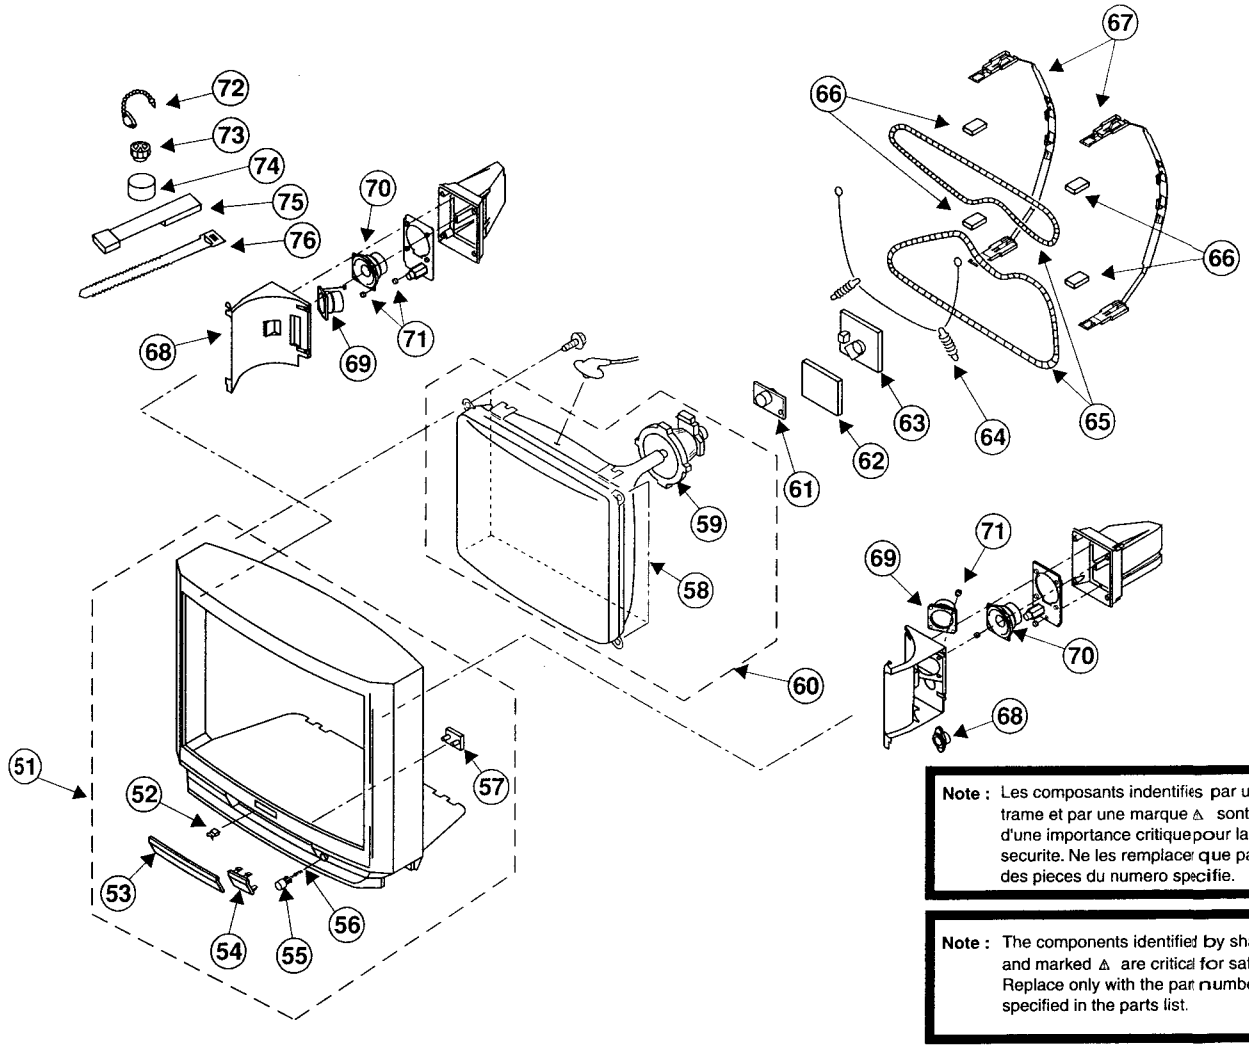

Note : Les composants indentifies par une trame et par une marque △ sonte d'une importance critiquepour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked △ are critical for safety. Replace only with the part numbers specified in the parts list.

REF. NO.	PART.NO	DESCRIPTION	REMARK
51	X-4200-306-5	BEZNET ASSY	52-57
		(KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
51	X-4200-305-7	BEZNET ASSY	
		(KV-29K5A/29K5B/29K5D/29K5E/25K5U)	
52	4-047-464-01	CATCHER PUSH	
53	4-203-693-11	DOOR, ORNAMENTAL (KV-29K5A)	
	4-203-693-21	DOOR, CONTROL (KV-25K5B/25K5E/25K5U/	
		29K5B/29K5E/29K5U)	
	4-203-693-31	DOOR, CONTROL (KV-25K5A/25K5D/29K5D)	
	4-203-693-31	DOOR, CONTROL (KV-25K5A/25K5D/29K5D)	
54	4-204-071-01	PLATE, ORNAMENTAL	
55	4-203-704-01	BUTTON POWER	
56	4-202-964-01	SPRING	
57	4-204-070-01	GUIDE, LIGHT	
58	△ 8-733-254-05	PICTURE TUBE (SD-257) (M60LCS60X)	
		(KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
	△ 8-733-856-05	PICTURE TUBE (SD-269) (M68LCT60X)	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
59	△ 8-451-404-21	DEFLECTION YOKE (Y25CXABA)	
		(KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
	△ 8-451-466-11	DEFLECTION YOKE (Y29CXC2B)	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
60	△ 8-733-254-76	CRT (KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
	△ 8-733-856-76	CRT (KV-29K5A/29K5B/29K5D/29K5E/29K5U)	

REF. NO.	PART.NO	DESCRIPTION	REMARK
61	△ 8-453-005-21	NECK ASSY PICTURE TUBE (NA27-M2)	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
62	*A-1644-090-A	VM BOARD, COMPLETE	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
63	*A-1638-112-A	C BOARD, COMPLETE	
64	4-369-318-31	SPRING, TENSION	
65	△ 1-416-073-11	COIL, DEMAGNETIZATION	
		(KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
	△ 1-406-867-11	COIL, DEMAGNETIZATION	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
66	4-203-390-01	CUSHION, DGC	
67	4-203-877-01	HOLDER, DGC BRACKET 25"	
		(KV-25K5A/25K5B/25K5D/25K5E/25K5U)	
	4-203-878-01	HOLDER, DGC BRACKET 29"	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
68	1-505-484-11	SPEAKER (2.6CM)	
69	1-505-674-11	SPEAKER MID RANGE (8CM)	
70	1-505-673-11	SPEAKER WOOFER (10CM)	
71	4-039-358-01	SCREW (4X16), (+) BV TAPPIN	
72	4-308-870-00	CLIP, LEAD WIRE	
73	1-452-094-00	MAGNET, ROTATABLE DISK; 15M Ø	
74	1-452-032-00	MAGNET, DISK; 10MM Ø	
75	X-4387-214-1	PERMALLOY ASSY, CORRECTION	
76	3-701-007-00	BAND, BINDING	

SECTION 7
ELECTRICAL PARTS LIST

When indicating parts by reference number, please include the board name.

CAPACITORS MF : mF, PF : mmF

COILS MMH : mH , uH

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- RESISTORS
- All resistors are in ohms.
- F : nonflammable.

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF. NO.	PART.NO	DESCRIPTION	REMARK
	*A-1632-740-A	A BOARD, COMPLETE (KV-25K5A)	
		**********	
	*A-1632-738-A	A BOARD, COMPLETE (KV-25K5B)	
		**********	
	*A-1632-739-A	A BOARD, COMPLETE (KV-25K5D)	
		**********	
	*A-1632-737-A	A BOARD, COMPLETE (KV-25K5E)	
		**********	
	*A-1632-736-A	A BOARD, COMPLETE (KV-25K5U)	
		**********	
	*A-1632-735-A	A BOARD, COMPLETE (KV-29K5A)	
		**********	
	*A-1632-734-A	A BOARD, COMPLETE (KV-29K5B)	
		**********	
	*A-1632-733-A	A BOARD, COMPLETE (KV-29K5D)	
		**********	
	*A-1632-732-A	A BOARD, COMPLETE (KV-29K5E)	
		**********	
	*A-1632-731-A	A BOARD, COMPLETE (KV-29K5U)	
		**********	
	4-382-854-11	SCREW (M3X10), P, SW (+)	
		< CAPACITOR >	
C004	1-163-038-00	CERAMIC CHIP 0.1MF 25V	
C005	1-163-105-00	CERAMIC CHIP 33PF 5% 50V	
C006	1-163-105-00	CERAMIC CHIP 33PF 5% 50V	
C007	1-126-935-11	ELECT 470MF 20% 16V	
C008	1-126-964-11	ELECT 10MF 20% 50V	
C009	1-126-965-11	ELECT 22MF 20% 50V	
C010	1-126-959-11	ELECT 0.47MF 20% 50V	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
C011	1-126-965-11	ELECT 22MF 20% 50V	
C012	1-126-959-11	ELECT 0.47MF 20% 50V	
C013	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C016	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C018	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C019	1-163-038-00	CERAMIC CHIP 0.1MF 25V	
C022	1-126-935-11	ELECT 470MF 20% 16V	
C024	1-104-665-11	ELECT 100MF 20% 25V	
C025	1-126-960-11	ELECT 1MF 20% 50V	
C028	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
		(KV-29K5A/29K5B/29K5D/29K5E/29K5U)	
C029	1-163-077-00	CERAMIC CHIP 0.1MF 10% 25V	
C030	1-104-665-11	ELECT 100MF 20% 25V	
C031	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C032	1-163-077-00	CERAMIC CHIP 0.1MF 10% 25V	
C033	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C035	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C036	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C037	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C038	1-126-964-11	ELECT 10MF 20% 50V	
C039	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C040	1-163-125-00	CERAMIC CHIP 220PF 5% 50V	
C041	1-163-205-00	CERAMIC CHIP 0.001MF 10% 50V	
C042	1-126-933-11	ELECT 100MF 20% 16V	
C043	1-126-935-11	ELECT 470MF 20% 16V	
C100	1-163-038-00	CERAMIC CHIP 0.1MF 25V	
		(KV-25K5B/29K5B)	
C103	1-104-665-11	ELECT 100MF 20% 25V	
C105	1-126-965-11	ELECT 22MF 20% 50V	
C108	1-163-465-11	CERAMIC CHIP 9PF 0.25PF 50V	
C109	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C110	1-163-038-00	CERAMIC CHIP 0.1MF 25V	
C111	1-216-296-00	SHORT 0 (KV-25K5A/25K5D/25K5E/25K5U/	
		29K5A/29K5D/29K5E/29K5U)	
	1-163-059-00	CERAMIC CHIP 0.01MF 50V	
		(KV-25K5B/29K5B)	
C112	1-163-031-11	CERAMIC CHIP 0.01MF 50V	
C115	1-164-489-11	CERAMIC CHIP 0.22MF 10% 16V	
C116	1-126-961-11	ELECT 2.2MF 20% 50V	
C117	1-126-961-11	ELECT 2.2MF 20% 50V	
C118	1-163-038-00	CERAMIC CHIP 0.1MF 25V	
C119	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
		(KV-25K5B/29K5B)	

A

REF. NO.	PART.NO	DESCRIPTION	REMARK
C121	1-163-031-11	CERAMIC CHIP 0.01MF	50V
			(KV-25K5B/29K5B)
C122	1-104-665-11	ELECT 100MF 20%	25V
			(KV-25K5B/29K5B)
C129	1-126-963-11	ELECT 4.7MF 20%	50V
C133	1-162-638-11	CERAMIC CHIP 1MF	16V
			(KV-25K5B/29K5B)
C134	1-128-551-11	ELECT 22MF 20%	25V
C135	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C137	1-163-017-91	CERAMIC CHIP 0.0047MF 10%	50V
C138	1-165-319-11	CERAMIC CHIP 0.1MF	50V
C139	1-163-031-11	CERAMIC CHIP 0.01MF	50V
C140	1-163-031-11	CERAMIC CHIP 0.01MF	50V
C143	1-104-664-11	ELECT 47MF 20%	25V
C201	1-104-666-11	ELECT 220MF 20%	25V
C203	1-126-942-61	ELECT 1000MF 20%	25V
C204	1-126-942-61	ELECT 1000MF 20%	25V
C206	1-126-960-11	ELECT 1MF 20%	50V
C207	1-126-972-11	ELECT 1000MF 20%	50V
C208	1-126-960-11	ELECT 1MF 20%	50V
C215	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C301	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C302	1-126-967-11	ELECT 47MF 20%	16V
C303	1-101-004-00	CERAMIC 0.01MF	50V
C304	1-126-964-11	ELECT 10MF 20%	50V
C305	1-163-005-11	CERAMIC CHIP 470PF 10%	50V
C307	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C308	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C309	1-126-963-11	ELECT 4.7MF 20%	50V
C312	1-163-099-00	CERAMIC CHIP 18PF 5%	50V
C313	1-163-099-00	CERAMIC CHIP 18PF 5%	50V
C314	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C316	1-163-259-91	CERAMIC CHIP 220PF 5%	50V
C317	1-136-169-00	FILM 0.22MF 5%	50V
C319	1-126-964-11	ELECT 10MF 20%	50V
C321	1-126-963-11	ELECT 4.7MF 20%	50V
C322	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C328	1-104-664-11	ELECT 47MF 20%	25V
C329	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C330	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C331	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C332	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C333	1-126-960-91	ELECT 1MF 20%	50V
C334	1-163-021-91	CERAMIC CHIP 0.0047MF 10%	50V
C335	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C336	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C337	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C338	1-126-967-11	ELECT 47MF 20%	50V
C339	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C350	1-163-017-91	CERAMIC CHIP 0.0047MF 10%	50V
C351	1-163-017-91	CERAMIC CHIP 0.0047MF 10%	50V
C401	1-163-141-00	CERAMIC CHIP 0.001MF 5%	50V
C402	1-126-960-11	ELECT 1MF 20%	50V
C403	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C405	1-163-141-00	CERAMIC CHIP 0.001MF 5%	50V
C406	1-126-960-11	ELECT 1MF 20%	50V
C407	1-126-964-11	ELECT 10MF 20%	50V
C408	1-126-964-11	ELECT 10MF 20%	50V
C410	1-126-964-11	ELECT 10MF 20%	50V
C413	1-163-141-00	CERAMIC CHIP 0.001MF 5%	50V
C414	1-163-141-00	CERAMIC CHIP 0.001MF 5%	50V
			(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-126-960-11	ELECT 1MF 20%	50V
			(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
C415	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C416	1-126-964-11	ELECT 10MF 20%	50V
C417	1-163-141-00	CERAMIC CHIP 0.001MF 5%	50V
C418	1-126-960-11	ELECT 1MF 20%	50V
C422	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C423	1-126-964-11	ELECT 10MF 20%	50V
C430	1-104-664-11	ELECT 47MF 20%	25V
C432	1-163-141-00	CERAMIC CHIP 0.001MF 5%	50V
C433	1-163-141-00	CERAMIC CHIP 0.001MF 5%	50V
C434	1-126-935-11	ELECT 470MF 20%	16V
C435	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C436	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C437	1-535-465-11	LEAD, JUMPER (5.0MM)	
C438	1-535-465-11	LEAD, JUMPER (5.0MM)	
C443	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C444	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C445	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
C501	1-126-968-11	ELECT 100MF 20%	50V
C502	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C503	1-126-968-11	ELECT 100MF 20%	50V
C504	1-106-220-00	MYLAR 0.1MF 10%	100V
C505	1-136-173-00	FILM 0.47MF 5%	50V
C506	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
C507	1-126-933-11	ELECT 100MF 20%	16V
C508	1-126-960-11	ELECT 1MF 20%	50V
C509	1-107-364-11	MYLAR 0.01MF 10%	200V
C510	1-163-133-00	CERAMIC CHIP 470PF 5%	50V
C512	1-162-114-00	CERAMIC 0.0047MF	2KV
C513	1-107-662-11	ELECT 22MF 20%	250V
C515	1-104-666-11	ELECT 220MF 20%	25V

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

A

REF. NO.	PART.NO	DESCRIPTION			REMARK
C517	1-104-666-11	ELECT	220MF	20%	25V
C518	1-106-375-12	MYLAR	0.022MF	99%	200V
C519	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C520	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C522	1-137-399-11	FILM	0.1MF	5%	50V
C531	1-126-964-11	ELECT	10MF	20%	50V
C532	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V
C533	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
					(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
C535	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C536	1-115-522-11	FILM	1MF	5%	200V
C537	1-137-417-11	MYLAR	0.0047MF	10%	200V
C538	1-164-004-71	CERAMIC CHIP	0.1MF	10%	25V
C539	1-126-326-51	ELECT	10MF	20%	250V
					(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-111-230-11	ELECT	1MF	20%	160V
					(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
C540	1-106-387-00	MYLAR	0.068MF	10%	200V
					(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-136-206-11	FILM	0.033MF	10%	400V
					(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
C541	1-106-383-00	MYLAR	0.047MF	10%	200V
C542	1-162-134-11	CERAMIC	470PF	10%	2KV
C543	1-162-134-11	CERAMIC	470PF	10%	2KV
C544	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C545	1-126-960-11	ELECT	1MF	20%	50V
C546	1-130-895-00	FILM	0.056MF	5%	400V
C547	1-117-813-11	FILM	0.75MF	5%	200V
C548	1-162-134-11	CERAMIC	470PF	10%	2KV
C550	1-107-638-11	ELECT	33MF	20%	160V
C552	1-102-212-00	CERAMIC	820PF	10%	500V
C553	1-137-417-11	MYLAR	0.0047MF	10%	200V
C555	1-216-296-00	SHORT	0		(KV-25K5A/25K5D/25K5E/25K5U)
	1-117-650-11	FILM	18000P	3%	1.2KV
					(KV-25K5B)
	1-117-648-11	FILM	15000PF	3%	1.2KV
					(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
C571	1-123-024-21	ELECT	33MF		160V
C572	1-104-665-11	ELECT	100MF	20%	25V
C579	1-535-465-11	LEAD, JUMPER (5.0MM)			
					(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
C580	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C582	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C584	1-126-963-11	ELECT	4.7MF	20%	50V
C601 ⚠	1-107-563-11	FILM	0.1MF	20%	300V
C602 ⚠	1-107-563-11	FILM	0.1MF	20%	300V
C603 ⚠	1-117-700-51	CERAMIC	0.0022MF	99%	250V
C604 ⚠	1-117-700-51	CERAMIC	0.0022MF	99%	250V
C605	1-104-652-11	ELECT	470MF	20%	10V
C606	1-125-555-11	ELECT(BLOCK)	330MF	20%	400V
C607	1-125-787-51	CERAMIC	680PF	10%	2KV
C609	1-107-915-11	ELECT	2200MF	20%	50V
C610	1-104-665-11	ELECT	100MF	20%	25V
C611	1-165-127-11	CERAMIC	470PF	10%	500V
C612 ⚠	1-161-964-51	CERAMIC	0.0047MF		250V
C613 ⚠	1-161-964-51	CERAMIC	0.0047MF		250V
C614 ⚠	1-161-964-51	CERAMIC	0.0047MF		250V
					(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
C615	1-130-202-00	FILM	0.022MF	10%	400V
C618	1-107-890-11	ELECT	2200MF	20%	25V
C621	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C622 ⚠	1-161-964-51	CERAMIC	0.0047MF		250V
C624	1-104-665-11	ELECT	100MF	20%	25V
C625	1-104-665-11	ELECT	100MF	20%	25V
C628	1-124-347-00	ELECT	100MF	20%	160V
C629	1-136-189-00	FILM	0.1MF	10%	250V
C630	1-165-127-11	CERAMIC	470PF	10%	500V
C633	1-104-332-11	CERAMIC	470PF	10%	2KV
C635	1-107-675-11	ELECT	1MF	20%	160V
C638	1-107-670-11	ELECT	10MF	20%	400V
C639	1-104-665-11	ELECT	100MF	20%	25V
C640	1-104-664-11	ELECT	47MF	20%	25V
C641	1-104-665-11	ELECT	100MF	20%	25V
C642	1-104-665-11	ELECT	100MF	20%	25V
C646	1-107-974-11	CERAMIC	47PF	5%	2KV
		< FILTER >			
CF101	1-404-134-00	TRAP, CERAMIC (5.5MHZ)			
CF105	1-760-154-11	TRAP, CERAMIC			(KV-25K5B/25K5U/29K5B/29K5U)
SWF101	1-767-874-11	FILTER, SURFACE WAVE			
					(KV-25K5A/25K5D/25K5E/25K5U/
					29K5A/29K5D/29K5E/29K5U)
	1-579-273-12	FILTER, SURFACE WAVE			(KV-29K5B/29K5B)
SWF102	1-767-873-11	FILTER, SURFACE WAVE			
SWF103	1-767-803-11	FILTER, SURFACE WAVE			(KV-25K5B/29K5B)
		< CONNECTOR >			
CN001	*1-564-508-11	PLUG, CONNECTOR 5P			
CN007	*1-564-510-11	PLUG, CONNECTOR 7P			
CN101	1-766-922-11	CONNECTOR, BOARD TO BOARD 18P			
CN201	*1-564-507-11	PLUG, CONNECTOR 4P			
CN208	*1-564-508-11	PLUG, CONNECTOR 5P			
CN406	1-564-511-11	PLUG, CONNECTOR 8P			

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

A

REF. NO.	PART.NO	DESCRIPTION	REMARK
CN501	*1-580-798-11	CONNECTOR PIN (DY) 6P	
CN502	*1-691-135-11	PIN, CONNECTOR (PC BOARD) 4P	
CN503	*1-564-507-11	PLUG, CONNECTOR 4P	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
CN504	*1-564-509-11	PLUG, CONNECTOR 6P	
CN505	*1-568-882-51	PIN, CONNECTOR 7P	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
CN506	1-695-915-11	TAB (CONTACT)	
CN509	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
CN602	⚠ 1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
CN603	⚠ 1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
CN606	⚠ *1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P	

< DIODE >

D001	8-719-109-89	DIODE RD5.6ESB2	
D002	8-719-109-89	DIODE RD5.6ESB2	
D004	8-719-109-89	DIODE RD5.6ESB2	
D007	8-719-109-89	DIODE RD5.6ESB2	
D008	8-719-991-33	DIODE 1SS133T-77	
D009	8-719-109-89	DIODE RD5.6ESB2	
D010	8-719-109-89	DIODE RD5.6ESB2	
D011	8-719-109-89	DIODE RD5.6ESB2	
D012	8-719-914-43	DIODE DAN202K	
D014	8-719-058-24	DIODE RB501V-40TE-17	
D015	8-719-914-43	DIODE DAN202K	
D017	8-719-109-89	DIODE RD5.6ESB2	
D018	8-719-991-33	DIODE 1SS133T-77	
D023	8-719-109-89	DIODE RD5.6ESB2	
D101	8-719-982-24	DIODE MTZJ-33A	
D104	8-719-914-43	DIODE DAN202K	(KV-25K5B/29K5B)
D201	8-719-929-15	DIODE HZS9.INBZ	
D202	8-719-914-43	DIODE DAN202K	
D204	8-719-109-89	DIODE RD5.6ESB2	
D205	8-719-109-89	DIODE RD5.6ESB2	
D206	8-719-109-89	DIODE RD5.6ESB2	
D306	8-719-109-89	DIODE RD5.6ESB2	
D307	8-719-109-89	DIODE RD5.6ESB2	
D308	8-719-109-72	DIODE RD3.9ESB2	
D309	8-719-991-33	DIODE 1SS133T-77	
D320	8-719-929-15	DIODE HZS9.INB2	
D405	8-719-109-97	DIODE RD6.8ES-B2	
D406	8-719-109-97	DIODE RD6.8ES-B2	
D407	8-719-109-97	DIODE RD6.8ES-B2	
D409	8-719-109-97	DIODE RD6.8ES-B2	
D414	8-719-109-97	DIODE RD6.8ES-B2	
D415	8-719-929-15	DIODE HZS9.INBZ	
D417	8-719-929-15	DIODE HZS9-INB2	
D422	8-719-109-97	DIODE RD6.8ES-B2	
D423	8-719-109-97	DIODE RD6.8ES-B2	
D427	8-719-109-97	DIODE RD6.8ES-B2	
D501	8-719-302-43	DIODE EL1Z	
D502	8-719-924-13	DIODE MTZJ-T-77-22B	
D511	8-719-028-72	DIODE RGP02-17EL-6433	
D512	8-719-302-43	DIODE EL1Z	
D513	8-719-979-85	DIODE EGP20G	
D514	8-719-979-85	DIODE EGP20G	
D534	8-719-302-43	DIODE EL1Z	
D535	8-719-908-03	DIODE GP08D	
D536	8-719-945-80	DIODE ERC06-15S	
D538	8-719-908-03	DIODE GP08D	
D539	8-719-900-26	DIODE ERD29-08J	
D541	1-535-465-11	LEAD, JUMPER (5.0MM)	
D571	8-719-911-19	DIODE 1SS119-25	
D573	8-719-921-40	DIODE MTZJ-4.7C	
D601	8-719-510-53	DIODE D4SB60L	
D602	8-719-046-74	DIODE AU-01Z-V1	
D603	8-719-312-61	DIODE EU-1Z	
D605	8-719-312-10	DIODE RU4AM-T3	
D608	8-719-067-88	DIODE RG1CLF-B1	
D610	8-719-067-78	DIODE RN3Z-LF014-302	
D613	8-719-911-19	DIODE 1SS119-25	
D614	8-719-058-38	DIODE FMN-G12S	
D619	8-719-043-76	DIODE AK04V0	
D621	8-719-068-00	DIODE ERC04-06SE	
D626	8-719-068-00	DIODE ERC04-06SE	
D627	8-719-510-26	DIODE D1NL20	
D628	8-719-059-23	DIODE P6KE200AG23	
D629	8-719-979-64	DIODE UF4005PKG23	
D631	8-719-110-31	DIODE RD12ES-B2	
D632	8-719-510-64	DIODE S2LA20F	
D633	8-719-109-89	DIODE RD5.6ESB2	

< FERRITE BEAD >

FB001	1-412-911-11	FERRITE	0UH
FB002	1-412-911-11	FERRITE	0UH
FB601	1-412-911-11	FERRITE	0UH
FB602	1-412-911-11	FERRITE	0UH
FB605	1-410-397-21	FERRITE	1.1UH
FB608	1-412-911-11	FERRITE	0UH
FB609	1-535-465-11	LEAD, JUMPER (5.0MM)	
FB610	1-410-397-21	FERRITE	1.1UH
FB611	1-410-397-21	FERRITE	1.1UH
FB612	1-535-465-11	LEAD, JUMPER (5.0MM)	

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

A

REF. NO.	PART.NO	DESCRIPTION	REMARK
		< IC >	
IC001	8-759-525-78	SAA5497PS/MIA/040	(KV-25K5A/25K5D/29K5A/29K5D)
	8-759-526-01	SAA5497PS/MIA/038	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
IC003	8-759-468-56	IC MN1381T	
IC004	8-759-432-33	IC ST24W08FM6TR	
IC005	8-759-516-41	IC CD4052BCM	
IC101	8-759-466-49	IC TDA9817/V1	(KV-25K5A/25K5D/25K5E/25K5U/29K5A/29K5D/29K5E/29K5U)
	8-759-466-47	IC TDA9818/V1	(KV-25K5B/29K5B)
IC201	8-759-442-74	IC TDA7495	
IC301	8-752-082-35	IC CXA2060AS	
IC501	8-759-192-71	IC STV9379	
IC531	8-759-450-95	IC LM393N	
IC603	8-749-920-61	IC SE135N	
IC604	8-759-524-82	IC TYA7805CTV	
IC605	8-759-524-83	IC TYA7809CTV	
IC606	8-749-013-75	IC STR-F6654	
IC608	8-759-524-82	IC TYA7805CTV	
IC609	8-759-468-89	IC TOP209P	
		< SOCKET >	
J401	1-766-296-11	CONNECTOR, DUAL SCART	
J404	1-770-989-11	JACK, PIN 2P	
		< COIL >	
L001	1-408-603-31	INDUCTOR 10UH	
L102	1-408-599-21	INDUCTOR 4.7UH	
L103	1-403-686-11	COIL	
L104	1-410-671-31	INDUCTOR 47UH	
L106	1-408-417-00	INDUCTOR 47UH	
L108	1-410-985-11	INDUCTOR CHIP 0.22UH	(KV-25K5B/29K5B)
L109	1-410-789-11	INDUCTOR 0.47UH	(KV-25K5B/29K5B)
L201	1-535 465 11	LEAD, JUMPER (5.0MM)	
L202	1-535-465-11	LEAD, JUMPER (5.0MM)	
L203	1-406-979-11	INDUCTOR 0UH	
L302	1-408-417-00	INDUCTOR 47UH	
L303	1-408-609-41	INDUCTOR 33UH	
L401	1-408-417-00	INDUCTOR 47UH	
L402	1-408-417-00	INDUCTOR 47UH	
L405	1-216-295-00	SHORT 0	
L406	1-216-295-00	SHORT 0	
L501	1-408-417-00	INDUCTOR 47UH	
L502	1-412-529-11	INDUCTOR 22UH	
L503	1-412-521-31	INDUCTOR 4.7UH	
L532	1-412-552-11	INDUCTOR 2.2MMH	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-412-553-11	INDUCTOR 3.3MMH	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
L533	1-406-989-21	INDUCTOR 0UH	
L535	1-459-111-00	INDUCTOR 0UH	
L537	1-409-756-11	COIL, HORIZONTAL LINEARITY	(KV-25K5A/25K5D/25K5E/25K5U)
	1-416-214-11	COIL, HORIZONTAL LINEARITY	(KV-25K5B)
	1-409-855-11	COIL, HORIZONTAL LINEARITY	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
L540	1-535 465 11	LEAD, JUMPER (5.0MM)	
L571	1-412-533-21	INDUCTOR 47UH	
L602	1-408-417-00	INDUCTOR 47UH	
		< PHOTO COUPLER >	
PH601	⚠ 8-749-010-64	PHOTO COUPLER PC123F2	
		< TRANSISTOR >	
Q004	8-729-216-22	TRANSISTOR 2SA1162-G	
Q005	1-801-806-11	TRANSISTOR DTC144EKA	
Q006	1-801-806-11	TRANSISTOR DTC144EKA	
Q007	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q008	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q009	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q010	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q011	1-801-806-11	TRANSISTOR DTC144EKA	
Q012	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q013	8-729-620-06	TRANSISTOR 2SC3052-EF	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
Q014	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q101	8-729-216-22	TRANSISTOR 2SA1162-G	
Q107	8-729-022-54	TRANSISTOR 2SC3779C,D-AA	(KV-25K5B/29K5B)
Q109	1-801-806-11	TRANSISTOR DTC144EK	(KV-25K5B/29K5B)
Q110	1-801-806-11	TRANSISTOR DTC144EK	(KV-25K5B/29K5B)
Q111	8-729-216-22	TRANSISTOR 2SA1162-G	(KV-25K5B/29K5B)
Q112	8-801-806-11	TRANSISTOR DTC144EK	(KV-25K5B/29K5B)
Q202	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q401	1-729-920-72	TRANSISTOR 2SA1037K	
Q405	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q408	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q501	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q532	8-729-038-83	TRANSISTOR 2SK2251-01-F19	
Q533	8-729-040-62	TRANSISTOR 2SD2539(LBSONY)	
Q535	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q571	8-729-105-08	TRANSISTOR 2SA1330-O6	
Q574	8-729-120-28	TRANSISTOR 2SC1623-L5L6	

REF. NO.	PART.NO	DESCRIPTION			REMARK
Q575	1-801-806-11	TRANSISTOR DTC144EKA			
Q576	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q601	8-729-216-22	TRANSISTOR 2SA1162-G			
		< RESISTOR >			
JR023	1-216-296-00	SHORT	0		
JR031	1-216-295-00	SHORT	0		
JR033	1-216-296-00	SHORT	0		
JR403	1-216-073-00	RES,CHIP	10K	5%	1/10W
JR409	1-216-295-00	SHORT	0		
JR411	1-216-295-00	SHORT	0		
JR412	1-216-295-00	SHORT	0		
JR610	1-216-296-00	SHORT	0		
JR613	1-216-296-00	SHORT	0		
JW128	1-249-437-11	CARBON	47K	5%	1/4W (KV-25K5A/25K5B/25K5D/25K5E/29K5A/29K5B/29K5D/29K5E)
JW220	8-719-109-89	DIODE	RDS.6ESB2		
R001	1-216-025-00	RES,CHIP	100	5%	1/10W
R002	1-216-025-00	RES,CHIP	100	5%	1/10W
R003	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R004	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R005	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R007	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R009	1-216-025-00	RES,CHIP	100	5%	1/10W
R010	1-216-025-00	RES,CHIP	100	5%	1/10W
R011	1-216-025-00	RES,CHIP	100	5%	1/10W
R012	1-247-807-31	CARBON	100	5%	1/4W
R013	1-216-214-00	RES,CHIP	4.7K	5%	1/8W
R014	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R015	1-216-049-00	RES,CHIP	1K	5%	1/10W
R016	1-216-073-00	RES,CHIP	10K	5%	1/10W
R019	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R023	1-216-295-00	SHORT	0		
R029	1-216-073-00	RES,CHIP	10K	5%	1/10W
R030	1-216-081-00	RES,CHIP	22K	5%	1/10W (KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R032	1-216-089-00	RES,CHIP	47K	5%	1/10W
R034	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R035	1-216-049-00	RES,CHIP	1K	5%	1/10W
R036	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R038	1-216-073-00	RES,CHIP	10K	5%	1/10W
R039	1-216-089-91	RES,CHIP	47K	5%	1/10W
R050	1-216-041-00	RES,CHIP	470	5%	1/10W
R051	1-216-049-00	RES,CHIP	1K	5%	1/10W
R053	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R054	1-216-041-00	RES,CHIP	470	5%	1/10W
R055	1-216-081-00	RES,CHIP	22K	5%	1/10W
R056	1-216-105-00	RES,CHIP	220K	5%	1/10W
R057	1-216-075-00	RES,CHIP	12K	5%	1/10W
R058	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R059	1-216-089-00	RES,CHIP	47K	5%	1/10W
R060	1-216-174-00	RES,CHIP	100	5%	1/8W
R061	1-216-174-00	RES,CHIP	100	5%	1/8W
R062	1-216-033-00	RES,CHIP	220	5%	1/10W
R063	1-216-065-00	RES,CHIP	4.7K	5%	1/10W (KV-25K5B/29K5B)
R064	1-216-065-00	RES,CHIP	4.7K	5%	1/10W (KV-25K5B/29K5B)
R065	1-216-025-00	RES,CHIP	100	5%	1/10W
R066	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R067	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R069	1-216-049-00	RES,CHIP	1K	5%	1/10W
R070	1-216-081-00	RES,CHIP	22K	5%	1/10W
R071	1-216-214-00	RES,CHIP	4.7K	5%	1/8W
R072	1-216-097-00	RES,CHIP	100K	5%	1/10W
R073	1-216-097-00	RES,CHIP	100K	5%	1/10W
R075	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R077	1-216-083-00	RES,CHIP	27K	5%	1/10W
R078	1-216-065-00	RES,CHIP	4.7K	5%	1/10W (KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R080	1-216-073-00	RES,CHIP	10K	5%	1/10W
R081	1-216-073-00	RES,CHIP	10K	5%	1/10W
R082	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R083	1-216-031-00	RES,CHIP	180	5%	1/10W
R084	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R085	1-216-031-00	RES,CHIP	180	5%	1/10W
R086	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R087	1-216-180-00	RES,CHIP	180	5%	1/8W
R088	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R089	1-216-081-00	RES,CHIP	22K	5%	1/10W (KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R090	1-216-057-00	RES,CHIP	2.2K	5%	1/10W (KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R091	1-216-081-00	RES,CHIP	22K	5%	1/10W (KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R092	1-216-073-00	RES,CHIP	10K	5%	1/10W (KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R093	1-216-230-00	RES,CHIP	22K	5%	1/8W
R094	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R095	1-216-025-00	RES,CHIP	100	5%	1/10W
R096	1-247-807-31	CARBON	100	5%	1/4W
R097	1-247-807-31	CARBON	100	5%	1/4W
R098	1-247-807-31	CARBON	100	5%	1/4W

A

REF. NO.	PART.NO	DESCRIPTION			REMARK
R099	1-247-807-31	CARBON	100	5%	1/4W
R101	1-216-049-00	RES,CHIP	1K	5%	1/10W
R106	1-215-900-11	METAL OXIDE	22K	5%	2W F
R110	1-216-206-91	RES, CHIP	2.2K	5%	1/10W (KV-25K5B/29K5B)
R111	1-216-057-00	RES,CHIP	2.2K	5%	1/10W (KV-25K5B/29K5B)
R112	1-216-057-00	RES,CHIP	2.2K	5%	1/10W (KV-25K5B/29K5B)
R116	1-249-437-11	CARBON	47K	5%	1/4W
R120	1-216-037-00	RES,CHIP	330	5%	1/10W
R121	1-216-025-00	RES,CHIP	100	5%	1/10W
R122	1-216-025-00	RES,CHIP	100	5%	1/10W
R127	1-216-031-00	RES,CHIP	180	5%	1/10W (KV-25K5B/29K5B)
R128	1-216-065-00	RES,CHIP	4.7K	5%	1/10W (KV-25K5B/29K5B)
R129	1-216-063-91	RES,CHIP	3.9K	5%	1/10W (KV-25K5B/29K5B)
R133	1-216-295-00	SHORT	0 (KV-25K5A/25K5D/25K5E/25K5U/29K5A/29K5D/29K5E/29K5U)		
R142	1-216-295-00	SHORT	0		
R143	1-216-025-00	RES,CHIP	100	5%	1/10W
R144	1-216-079-00	RES,CHIP	18K	5%	1/10W
R145	1-216-212-00	RES,CHIP	3.9K	5%	1/8W
R147	1-216-017-91	RES,CHIP	47	5%	1/10W (KV-25K5B/29K5B)
R148	1-216-174-00	RES,CHIP	100	5%	1/8W (KV-25K5B/29K5B)
R149	1-216-049-00	RES,CHIP	1K	5%	1/10W (KV-25K5B/29K5B)
R151	1-216-049-00	RES,CHIP	1K	5%	1/10W
R152	1-216-025-00	RES,CHIP	100	5%	1/10W (KV-25K5B/29K5B)
R153	1-216-180-00	RES,CHIP	180	5%	1/8W (KV-25K5B/29K5B)
R154	1-216-238-91	RES,CHIP	47K	5%	1/8W
R155	1-216-089-00	RES,CHIP	47K	5%	1/10W
R156	1-216-073-00	RES,CHIP	10K	5%	1/10W (KV-25K5B/29K5B)
R157	1-216-063-91	RES,CHIP	3.9K	5%	1/10W (KV-25K5B/29K5B)
R158	1-216-069-00	RES,CHIP	6.8K	5%	1/10W (KV-25K5B/29K5B)
R204	1-247-863-91	CARBON	22K	5%	1/4W
R206	1-216-085-00	RES,CHIP	33K	5%	1/10W
R207	1-216-295-00	SHORT	0		
R209	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R211	1-215-873-00	METAL OXIDE	4.7K	5%	1W F
R213	1-216-089-00	RES,CHIP	47K	5%	1/10W
R301	1-216-025-00	RES,CHIP	100	5%	1/10W
R302	1-216-081-00	RES,CHIP	22K	5%	1/10W
R303	1-216-073-00	RES,CHIP	10K	5%	1/10W
R304	1-216-073-00	RES,CHIP	10K	5%	1/10W
R306	1-216-206-00	RES,CHIP	2.2K	5%	1/8W
R309	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R310	1-216-022-00	RES,CHIP	75	5%	1/10W
R311	1-216-022-00	RES,CHIP	75	5%	1/10W
R313	1-216-025-00	RES,CHIP	100	5%	1/10W
R314	1-216-025-00	RES,CHIP	100	5%	1/10W
R315	1-216-075-91	RES,CHIP	12K	5%	1/10W
R316	1-216-025-00	RES,CHIP	100	5%	1/10W
R317	1-216-049-00	RES,CHIP	1K	5%	1/10W
R318	1-216-025-00	RES,CHIP	100	5%	1/10W
R319	1-216-025-00	RES,CHIP	100	5%	1/10W
R320	1-216-025-00	RES,CHIP	100	5%	1/10W
R321	1-216-025-00	RES,CHIP	100	5%	1/10W
R323	1-216-025-00	RES,CHIP	100	5%	1/10W
R324	1-412-002-21	INDUCTOR	4.7UH		
R325	1-412-002-21	INDUCTOR	4.7UH		
R326	1-216-129-00	RES,CHIP	2.2M	5%	1/10W
R327	1-216-295-00	SHORT	0		
R331	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R332	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R333	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R334	1-216-025-00	RES,CHIP	100	5%	1/10W
R335	1-216-025-00	RES,CHIP	100	5%	1/10W
R337	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R338	1-216-049-00	RES,CHIP	1K	5%	1/10W
R401	1-216-113-00	RES,CHIP	470K	5%	1/10W
R402	1-216-295-71	CONDUCTER CHIP			
R403	1-216-041-00	RES,CHIP	470	5%	1/10W
R404	1-216-113-00	RES,CHIP	470K	5%	1/10W
R405	1-216-295-00	SHORT	0		
R406	1-216-113-00	RES,CHIP	470K	5%	1/10W
R408	1-216-022-00	RES,CHIP	75	5%	1/10W
R409	1-216-025-00	RES,CHIP	100	5%	1/10W
R410	1-216-025-00	RES,CHIP	100	5%	1/10W
R411	1-216-022-00	RES,CHIP	75	5%	1/10W
R412	1-216-025-00	RES,CHIP	100	5%	1/10W
R413	1-216-295-00	SHORT	0		
R414	1-216-022-00	RES,CHIP	75	5%	1/10W
R415	1-216-022-00	RES,CHIP	75	5%	1/10W

A

REF. NO.	PART.NO	DESCRIPTION	REMARK
R417	1-247-804-11	CARBON 75 5% 1/4W	(KV-25K5A/25K5B/25K5D/25K5E/29K5A/29K5B/29K5D/29K5E)
	1-247-698-11	CARBON 68 5% 1/4W	(KV-25K5U/29K5U)
R418	1-260-095-11	CARBON 470 5% 1/2W	(KV-25K5A/25K5B/25K5D/25K5E)
	1-249-414-11	CARBON 560 5% 1/2W	(KV-25K5U/29K5U)
R419	1-216-022-00	RES,CHIP 75 5% 1/10W	
R420	1-216-041-00	RES,CHIP 470 5% 1/10W	
R421	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R422	1-216-295-00	SHORT 0	
R425	1-216-077-00	RES,CHIP 15K 5% 1/10W	
R426	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R427	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R429	1-216-041-00	RES,CHIP 470 5% 1/10W	
R430	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R431	1-216-295-00	SHORT 0	
R432	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R435	1-216-022-00	RES,CHIP 75 5% 1/10W	
R436	1-216-041-00	RES,CHIP 470 5% 1/10W	
R439	1-216-041-00	RES,CHIP 470 5% 1/10W	
R440	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R441	1-216-295-00	SHORT 0	
R442	1-216-077-00	RES,CHIP 15K 5% 1/10W	
R443	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R450	1-216-041-00	RES,CHIP 470 5% 1/10W	
R454	1-216-041-00	RES,CHIP 470 5% 1/10W	
R457	1-216-025-00	RES,CHIP 100 5% 1/10W	
R459	1-247-807-31	CARBON 100 5% 1/4W	
R460	1-249-403-11	CARBON 68 5% 1/4W	
R501	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R502	1-216-097-00	RES,CHIP 100K 5% 1/10W	
R503	1-215-888-00	METAL OXIDE 220 5% 2W F	
R504	1-249-385-11	CARBON 2.2 5% 1/4W F	
R505	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
R506	1-216-061-00	RES,CHIP 3.3K 5% 1/10W	
R507	1-216-349-00	METAL OXIDE 1 5% 1W F	
R508	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
R509	1-216-061-00	RES,CHIP 3.3K 5% 1/10W	
R510	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R511	1-215-869-11	METAL OXIDE 1K 5% 1W F	
R512	1-249-377-11	CARBON 0.47 5% 1/4W F	
R513	1-216-097-00	RES,CHIP 100K 5% 1/10W	
R514	1-249-377-11	CARBON 0.47 5% 1/4W F	
R515	1-249-377-11	CARBON 0.47 5% 1/4W F	
R516	1-249-493-11	CARBON 56K 5% 1/2W	
R517	1-249-434-11	CARBON 27K 5% 1/4W	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-249-429-11	CARBON 10K 5% 1/4W	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R518	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
R520	1-215-884-11	METAL OXIDE 47 5% 2W F	
R521	1-216-117-00	RES,CHIP 680K 5% 1/10W	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-208-845-11	RES,CHIP 1M 5% 1/10W	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R522	1-216-097-00	RES,CHIP 100K 5% 1/10W	
R523	1-208-845-11	RES,CHIP 1M 5% 1/10W	(KV-25K5A/25K5D/25K5E/25K5U/29K5A/29K5B/29K5D/29K5E/29K5U)
	1-216-117-00	RES,CHIP 680K 5% 1/10W (KV-25K5B)	
R524	1-216-083-00	RES,CHIP 27K 5% 1/10W	(KV-25K5A/25K5D/25K5E/25K5U/29K5A/29K5B/29K5D/29K5E/29K5U)
	1-216-085-00	RES,CHIP 33K 5% 1/10W (KV-25K5B)	
R525	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R526	1-216-089-00	RES,CHIP 47K 5% 1/10W	
R527	1-216-077-00	RES,CHIP 15K 5% 1/10W	
R528	1-216-246-00	RES,CHIP 100K 5% 1/8W	
R529	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R530	1-216-085-00	RES,CHIP 33K 5% 1/10W	
R531	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R532	1-216-063-91	RES,CHIP 3.9K 5% 1/10W	
R533	1-216-073-00	RES,CHIP 10K 5% 1/10W	(KV-25K5A/25K5D/25K5E/25K5U/29K5A/29K5B/29K5D/29K5E/29K5U)
	1-216-081-00	RES,CHIP 22K 5% 1/10W (KV-25K5B)	
R534	1-216-107-00	RES,CHIP 220K 5% 1/10W	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-216-113-91	RES,CHIP 470K 5% 1/10W	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R535	1-216-109-00	RES,CHIP 330K 5% 1/10W	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-216-101-00	RES,CHIP 150K 5% 1/10W	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R539	1-216-049-00	RES,CHIP 1K 5% 1/10W	
R540	1-216-449-11	METAL OXIDE 56 5% 1W	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-215-861-00	METAL OXIDE 47 5% 1W	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R541	1-216-097-00	RES,CHIP 100K 5% 1/10W	
R542	1-216-089-00	RES,CHIP 47K 5% 1/10W	

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

A C

REF. NO.	PART.NO	DESCRIPTION	REMARK
R543	1-216-089-00	RES,CHIP 47K 5% 1/10W	
R546	1-249-401-11	METAL OXIDE 47 5% 2W F	
			(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-215-893-11	METAL OXIDE 1.5K 5% 2W F	
			(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R547	1-535-143-71	LEAD JUMPER (7.5MM)	
			(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-215-893-11	METAL OXIDE 1.5K 5% 2W F	
			(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
R548	1-216-397-11	METAL OXIDE 4.7 5% 3W F	
R549	1-216-341-11	METAL OXIDE 0.22 5% 1W F	
R551	1-215-873-21	METAL OXIDE 4.7K 5% 1W F	
R552	1-216-061-00	RES,CHIP 3.3K 5% 1/10W	
R553	1-249-381-11	CARBON 1 5% 1/4W F	
R571	1-249-417-11	CARBON 1K 5% 1/4W F	
R572	1-216-369-00	METAL OXIDE 1 5% 2W F	
R573	1-216-097-00	RES,CHIP 100K 5% 1/10W	
R574	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
R575	1-216-097-00	RES,CHIP 100K 5% 1/10W	
R576	1-249-399-11	CARBON 33 5% 1/4W	
R581	1-216-089-00	RES,CHIP 47K 5% 1/10W	
R582	1-216-089-00	RES,CHIP 47K 5% 1/10W	
R583	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R588	1-216-053-00	RES,CHIP 1.5K 5% 1/10W	
R589	1-216-097-00	RES,CHIP 100K 5% 1/10W	
R590	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R591	1-215-892-11	METAL OXIDE 1K 5% 2W F	
R593	1-249-439-11	CARBON 68K 5% 1/4W	
R594	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R602	1-202-961-11	CEMENTED 1.8 5% 10W	
R603	1-202-933-61	FUSIBLE 0.1 10% 1/2W F	
R607 ⚠	1-202-961-11	CEMENTED 1.8 5% 10W	
R608	1-215-927-00	METAL OXIDE 47K 5% 3W F	
R611	1-249-415-11	CARBON 680 5% 1/4W	
R613 ⚠	1-240-030-91	METAL 4.7M 5% 1/2W	
R614 ⚠	1-240-030-91	METAL 4.7M 5% 1/2W	
R615	1-249-422-11	CARBON 2.7K 5% 1/4W	
R616	1-216-393-00	METAL OXIDE 2.2 5% 3W F	
R617	1-249-405-11	CARBON 100 5% 1/4W F	
R619	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
R622	1-249-401-11	CARBON 47 5% 1/4W	
R627	1-249-389-11	CARBON 4.7 5% 1/4W F	
R628	1-247-791-91	CARBON 22 5% 1/4W	
R652	1-216-393-00	METAL OXIDE 2.2 5% 3W F	
R653	1-216-393-00	METAL OXIDE 2.2 5% 3W F	
R658	1-215-929-11	METAL OXIDE 100K 5% 3W F	
R659	1-216-383-21	METAL OXIDE 0.33 5% 3W F	
R660	1-216-384-21	METAL OXIDE 0.39 5% 3W F	
R661	1-247-843-11	CARBON 3.3K 5% 1/4W	
R662	1-215-929-11	METAL OXIDE 100K 5% 3W F	
R664	1-249-417-11	CARBON 1K 5% 1/4W	
R665	1-215-877-11	METAL OXIDE 22K 5% 1W F	
R667	1-215-927-00	METAL OXIDE 47K 5% 3W F	
RV101	1-241-765-11	RES, ADJ, CARBON 22K	(KV-25K5B/29K5B)
		< RELAY >	
RY601 ⚠	1-755-245-11	RELAY	
		< SWITCH >	
SW532	1-572-707-11	SWITCH, LEVER	
		< TRANSFORMER >	
T511 ⚠	1-453-264-11	TRANSFORMER ASSY, FLYBACK (NX-1680/U2B4)	
			(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	1-453-265-11	TRANSFORMER ASSY, FLYBACK (NX-1681/U2B4)	
			(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
T531	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE	
T532	1-431-228-11	TRANSFORMER, POWER MODULATION	
T601 ⚠	1-427-962-11	TRANSFORMER, LINE FILTER	
T602	1-431-732-11	TRANSFORMER, CONVERTER (SRT)	
T603 ⚠	1-431-777-11	TRANSFORMER, CONVERTER	
		< THERMISTOR >	
THP601 ⚠	1-810-961-11	THERMISTOR, POSITIVE	
		< TUNER >	
TU101	1-693-418-11	TUNER (TELE9-001A)	
			(KV-25K5A/25K5B/25K5D/25K5E/ 29K5A/29K5B/29K5D/29K5E)
	8-598-464-00	TUNER (FSS BTP-AU611)	(KV-25K5U/29K5U)
		< CRYSTAL >	
X001	1-578-774-11	VIBRATOR, CRYSTAL	
X302	1-567-505-11	OSCILLATOR, CRYSTAL	
X303	1-567-504-11	OSCILLATOR, CRYSTAL	
**********			
	*A-1638-112-A	C BOARD, COMPLETE	
		**********	
		< CAPACITOR >	
C701	1-102-114-00	CERAMIC 470PF 10% 50V	

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

REF. NO.	PART.NO	DESCRIPTION			REMARK
C702	1-102-115-00	CERAMIC	560PF	10%	50V
C703	1-102-116-00	CERAMIC	680PF	10%	50V
C708	1-162-114-00	CERAMIC	0.0047MF		2KV
C710	1-107-652-11	ELECT	10MF	20%	250V
C712	1-102-116-00	CERAMIC	680PF	10%	50V
C714	1-126-967-11	ELECT	47MF	20%	16V
C717	1-102-114-00	CERAMIC	470PF	10%	50V
C718	1-102-114-00	CERAMIC	470PF	10%	50V
C719	1-102-114-00	CERAMIC	470PF	10%	50V
C722	1-101-880-00	CERAMIC	47PF	5%	50V
C723	1-101-880-00	CERAMIC	47PF	5%	50V
C724	1-101-880-00	CERAMIC	47PF	5%	50V
		< CONNECTOR >			
CN701	1-784-633-11	PIN, CONNECTOR 4P			
CN702	1-695-915-11	TAB (CONTACT)			
CN703	*1-564-509-11	PLUG, CONNECTOR 6P			
		< DIODE >			
D702	8-719-991-33	DIODE 1SS133T-77			
D703	1-535-465-11	DIODE 1SS133T-77			
D704	1-535-465-11	DIODE 1SS133T-77			
D705	1-535-465-11	DIODE 1SS133T-77			
D706	8-719-991-33	DIODE 1SS133T-77			
D707	8-719-991-33	DIODE 1SS133T-77			
D708	8-719-991-33	DIODE 1SS133T-77			
D709	8-719-991-33	DIODE 1SS133T-77			
D710	8-719-991-33	DIODE 1SS133T-77			
D711	1-216-549-51	LEAD, RES, FILM 1		5%	1W
D714	8-719-991-33	DIODE 1SS133T-77			
D715	8-719-991-33	DIODE 1SS133T-77			
D716	8-719-991-33	DIODE 1SS133T-77			
D717	8-719-991-33	DIODE 1SS133T-77			
D718	8-719-991-33	DIODE 1SS133T-77			
D719	8-719-991-33	DIODE 1SS133T-77			
		< CRT SOCKET >			
J701	⚠ 1-526-990-21	SOCKET, CRT			
		< COIL >			
L704	1-408-609-41	INDUCTOR	33UH		
		< TRANSISTOR >			
Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q703	8-729-906-70	TRANSISTOR BF871-127			
Q704	8-729-200-17	TRANSISTOR BF421L-AMMO			
Q705	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q706	8-729-906-70	TRANSISTOR BF871-127			
Q707	8-729-200-17	TRANSISTOR BF421L-AMMO			
Q708	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q709	8-729-906-70	TRANSISTOR BF871-127			
Q710	8-729-200-17	TRANSISTOR BF421L-AMMO			
		< RESISTOR >			
R701	1-247-895-91	CARBON	470K	5%	1/4W
R704	1-216-486-00	METAL OXIDE	8.2K	5%	3W F
R705	1-260-103-11	CARBON	2.2K	5%	1/2W
R706	1-247-815-91	CARBON	220	5%	1/4W
R707	1-247-815-91	CARBON	220	5%	1/4W
R708	1-247-791-91	CARBON	22	5%	1/4W
R709	1-202-844-00	SOLID	330K	10%	1/2W
R711	1-247-843-11	CARBON	3.3K	5%	1/4W
R712	1-260-103-11	CARBON	2.2K	5%	1/2W
R713	1-247-875-91	CARBON	68K	5%	1/4W
R714	1-216-486-00	METAL OXIDE	8.2K	5%	3W F
R715	1-249-417-11	CARBON	1K	5%	1/4W
R716	1-247-815-91	CARBON	220	5%	1/4W
R717	1-247-815-91	CARBON	220	5%	1/4W
R718	1-202-814-11	SOLID	33K	10%	1/2W
R719	1-247-791-91	CARBON	22	5%	1/4W
R720	1-247-843-11	CARBON	3.3K	5%	1/4W
R722	1-202-848-00	SOLID	680K	10%	1/2W
R723	1-249-417-11	CARBON	1K	5%	1/4W
R724	1-260-131-11	CARBON	470K	5%	1/2W
R726	1-260-103-11	CARBON	2.2K	5%	1/2W
R727	1-247-815-91	CARBON	220	5%	1/4W
R728	1-216-351-00	METAL OXIDE	1.5	5%	1W F
R729	1-247-815-91	CARBON	220	5%	1/4W
R730	1-247-791-91	CARBON	22	5%	1/4W
R731	1-247-843-11	CARBON	3.3K	5%	1/4W
R733	1-247-823-91	CARBON	470	5%	1/4W
R734	1-247-807-31	CARBON	100	5%	1/4W
R735	1-247-823-91	CARBON	470	5%	1/4W
R736	1-216-486-00	METAL OXIDE	8.2K	5%	3W F
R737	1-247-891-91	CARBON	330K	5%	1/4W
R739	1-249-417-11	CARBON	1K	5%	1/4W
R740	1-247-823-91	CARBON	470	5%	1/4W
R741	1-202-549-00	SOLID	100	20%	1/2W
R744	1-249-421-11	CARBON	2.2K	5%	1/4W
R745	1-249-421-11	CARBON	2.2K	5%	1/4W
R746	1-249-421-11	CARBON	2.2K	5%	1/4W

C VM

REF. NO.	PART.NO	DESCRIPTION			REMARK
		< VARIABLE RESISTOR >			
RV701	1-230-641-11	RES, ADJ, METAL GLAZE 2.2M			
RV702	1-241-656-21	RES, ADJ, METAL FILM 110M			
**********					
	*A-1644-090-A	VM BOARD, COMPLETE (KV-29K5 ONLY)			
		**********			
		< CAPACITOR >			
C1701	1-126-933-11	ELECT	100MF	20%	16V
C1702	1-128-551-11	ELECT	22MF	20%	25V
C1703	1-126-933-11	ELECT	100MF	20%	16V
C1704	1-107-357-11	FILM	0.47MF	5%	100V
C1705	1-107-638-11	ELECT	33MF	20%	160V
C1706	1-104-999-11	FILM	0.1MF	5%	200V
C1707	1-136-207-11	FILM	0.047MF	10%	250V
C1708	1-137-364-11	FILM	0.001MF	5%	50V
C1709	1-137-364-11	FILM	0.001MF	5%	50V
C1710	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C1720	1-107-667-11	ELECT	2.2MF	20%	160V
C1721	1-136-207-11	FILM	0.047MF	10%	250V
C1722	1-126-934-11	ELECT	220MF	20%	16V
C1723	1-161-830-00	CERAMIC	0.0047MF		500V
C1725	1-126-967-11	ELECT	47MF	20%	16V
C1726	1-126-934-11	ELECT	220MF	20%	16V
C1803	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V
C1804	1-126-964-11	ELECT	10MF	20%	50V
C1805	1-137-366-11	FILM	0.0022MF	5%	50V
C1841	1-136-155-00	FILM	0.015MF	5%	50V
C1844	1-130-959-00	FILM	0.047MF	10%	400V
C1845	1-136-175-00	FILM	0.68MF	5%	50V
C1901	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1902	1-137-374-11	FILM	0.047MF	5%	50V
C1903	1-126-964-11	ELECT	10MF	20%	50V
C1904	1-137-366-11	FILM	0.0022MF	5%	50V
C1905	1-137-374-11	FILM	0.047MF	5%	50V
C1906	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1911	1-136-189-00	FILM	0.1MF	10%	250V
C1912	1-129-702-00	FILM	0.001MF	5%	630V
C1913	1-129-703-00	FILM	0.0012MF	5%	630V
C1914	1-102-157-00	CERAMIC	560PF	10%	500V
C1915	1-137-102-11	FILM	0.022MF	10%	250V
C1951	1-126-964-11	ELECT	10MF	20%	50V
C1952	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1953	1-136-165-00	FILM	0.1MF	5%	50V
C1954	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1955	1-136-165-00	FILM	0.1MF	5%	50V
C1956	1-126-964-11	ELECT	10MF	20%	50V
C1957	1-126-964-11	ELECT	10MF	20%	50V
C1958	1-136-173-00	FILM	0.47MF	5%	50V
C1959	1-107-714-11	ELECT	10MF	20%	50V
C1960	1-107-636-11	ELECT	10MF	20%	160V
		< CONNECTOR >			
CN1705	*1-564-510-11	PLUG, CONNECTOR 7P			
CN1718	1-774-418-11	CONNECTOR, BOARD TO BOARD 8P			
CN1801	*1-564-506-11	PLUG, CONNECTOR 3P			
CN1803	1-564-507-71	PIN, CONNECTOR 4P			
CN1809	1-508-784-12	PIN, CONNECTOR 5MM PITCH 1P			
		< DIODE >			
D1701	8-719-991-33	DIODE 1SS133T-77			
D1702	8-719-110-88	DIODE RD39ES-B2			
D1703	8-719-110-88	DIODE RD39ES-B2			
D1801	8-719-110-17	DIODE RD10ESB2			
D1802	8-719-110-17	DIODE RD10ESB2			
D1803	8-719-110-17	DIODE RD10ESB2			
D1840	8-719-302-43	DIODE EL1Z			
D1841	8-719-991-33	DIODE 1SS133T-77			
D1901	8-719-991-33	DIODE 1SS133T-77			
D1902	8-719-991-33	DIODE 1SS133T-77			
D1903	8-719-991-33	DIODE 1SS133T-77			
D1904	8-719-991-33	DIODE 1SS133T-77			
D1905	8-719-923-60	DIODE MTZJ-T-77-9.1A			
D1906	8-719-970-87	DIODE ERA38-06			
D1907	8-719-970-87	DIODE ERA38-06			
D1908	8-719-300-33	DIODE RU-3AM			
D1909	8-719-991-33	DIODE 1SS133T-77			
D1910	8-719-991-33	DIODE 1SS133T-77			
		< IC >			
IC1801	8-759-603-37	IC M5216P			
IC1901	8-759-450-95	IC LM393N			
IC1902	8-759-008-70	IC LM358N			
		< COIL >			
L1701	1-408-603-31	INDUCTOR	10UH		
L1702	1-408-597-31	INDUCTOR	3.3UH		
L1703	1-408-603-31	INDUCTOR	10UH		
L1704	1-408-417-00	INDUCTOR	47UH		
L1841	1-406-674-11	INDUCTOR	0UH		
L1843	1-406-989-21	INDUCTOR	0UH		
L1901	1-406-677-11	INDUCTOR	0UH		

REF. NO.	PART.NO	DESCRIPTION			REMARK
		< TRANSISTOR >			
Q1701	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q1702	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q1703	8-729-017-05	TRANSISTOR 2SA1837			
Q1704	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q1706	8-729-017-06	TRANSISTOR 2SC4793			
Q1708	8-729-216-22	TRANSISTOR 2SA1162-G			
Q1709	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q1710	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q1840	8-729-120-28	TRANSISTOR 2SC2412K-T-146-QR			
Q1841	8-729-931-45	TRANSISTOR IRF614-LF			
Q1901	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q1902	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q1903	8-729-043-95	TRANSISTOR 2SC3840(3)			
Q1904	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q1905	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q1906	8-729-119-80	TRANSISTOR 2SC2688-LK			
Q1907	8-729-119-80	TRANSISTOR 2SC2688-LK			
		< RESISTOR >			
R1701	1-216-049-00	RES,CHIP	1K	5%	1/10W
R1702	1-216-049-00	RES,CHIP	1K	5%	1/10W
R1703	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1704	1-216-045-00	RES,CHIP	680	5%	1/10W
R1705	1-247-815-91	CARBON	220	5%	1/4W
R1706	1-247-815-91	CARBON	220	5%	1/4W
R1708	1-216-039-00	RES,CHIP	390	5%	1/10W
R1712	1-260-311-11	CARBON	39	5%	1/2W
R1713	1-249-384-11	CARBON	1.8	5%	1/4W F
R1714	1-249-414-11	CARBON	560	5%	1/4W F
R1715	1-249-432-11	CARBON	18K	5%	1/4W
R1716	1-249-417-11	CARBON	1K	5%	1/4W F
R1717	1-215-913-11	METAL OXIDE	220	5%	3W F
R1718	1-249-432-11	CARBON	18K	5%	1/4W
R1719	1-249-384-11	CARBON	1.8	5%	1/4W F
R1720	1-249-400-11	CARBON	39	5%	1/4W F
R1721	1-249-414-11	CARBON	560	5%	1/4W
R1722	1-216-017-91	RES,CHIP	47	5%	1/10W
R1724	1-216-017-91	RES,CHIP	47	5%	1/10W
R1725	1-215-887-00	METAL OXIDE	150	5%	2W F
R1728	1-216-041-00	RES,CHIP	470	5%	1/10W
R1729	1-216-041-00	RES,CHIP	470	5%	1/10W
R1730	1-216-049-00	RES,CHIP	1K	5%	1/10W
R1731	1-249-411-11	CARBON	330	5%	1/4W
R1751	1-216-049-71	RES,CHIP	1K	5%	1/10W
R1752	1-216-049-71	RES,CHIP	1K	5%	1/10W
R1753	1-216-049-71	RES,CHIP	1K	5%	1/10W
R1805	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1806	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1807	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1808	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1809	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1810	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1841	1-216-097-00	RES,CHIP	100K	5%	1/10W
R1842	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1843	1-260-087-11	CARBON	100	5%	1/2W
R1844	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
R1846	1-260-087-11	CARBON	100	5%	1/2W
R1847	1-215-886-11	METAL OXIDE	100	5%	2W F
R1848	1-215-875-11	METAL OXIDE	10K	5%	1W F
R1901	1-249-441-11	CARBON	100K	5%	1/4W
R1902	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1903	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1904	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1905	1-216-097-00	RES,CHIP	100K	5%	1/10W
R1906	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1907	1-216-097-00	RES,CHIP	100K	5%	1/10W
R1908	1-216-033-00	RES,CHIP	220	5%	1/10W
R1909	1-215-493-00	METAL	1M	1%	1/4W
R1910	1-216-295-00	SHORT	0		
R1911	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1912	1-216-121-91	RES,CHIP	1M	5%	1/10W
R1913	1-216-049-00	RES,CHIP	1K	5%	1/10W
R1914	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1915	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1916	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R1917	1-216-691-11	METAL CHIP	47K	0.50%	1/10W
R1921	1-215-896-51	METAL OXIDE	4.7K	5%	2W F
R1922	1-215-875-11	METAL OXIDE	10K	5%	1W F
R1923	1-216-097-00	RES,CHIP	100K	5%	1/10W
R1924	1-216-097-00	RES,CHIP	100K	5%	1/10W
R1925	1-216-097-00	RES,CHIP	100K	5%	1/10W
R1951	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1952	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R1953	1-216-081-00	RES,CHIP	22K	5%	1/10W
R1954	1-216-097-00	RES,CHIP	100K	5%	1/10W
R1955	1-216-089-00	RES,CHIP	47K	5%	1/10W
R1956	1-216-113-00	RES,CHIP	470K	5%	1/10W
R1957	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1958	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R1959	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R1960	1-216-113-00	RES,CHIP	470K	5%	1/10W
R1961	1-216-097-00	RES,CHIP	100K	5%	1/10W

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

VM **H1** **S1**

REF. NO.	PART.NO	DESCRIPTION			REMARK
R1962	1-216-101-00	RES,CHIP	150K	5%	1/10W
R1963	1-216-081-00	RES,CHIP	22K	5%	1/10W
R1964	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1965	1-216-081-00	RES,CHIP	22K	5%	1/10W
R1966	1-216-085-00	RES,CHIP	33K	5%	1/10W
R1967	1-215-876-00	METAL OXIDE	15K	5%	1W F
R1968	1-249-416-11	CARBON	820	5%	1/4W
R1969	1-215-870-11	METAL OXIDE	1.5K	5%	1W F
		< TRANSFORMER >			
T1901	1-424-584-11	TRANSFORMER, DYNAMIC FOCUS			
**********					
	*A-1646-160-A	H1 BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C902	1-137-372-11	FILM	0.022MF	5%	50V
C903	1-137-372-11	FILM	0.022MF	5%	50V
C904	1-104-665-11	ELECT	100MF	20%	25V
C905	1-126-964-11	ELECT	10MF	20%	50V
C907	1-126-960-11	ELECT	1MF	20%	50V
C908	1-126-960-11	ELECT	1MF	20%	50V
C911	1-102-074-00	CERAMIC	0.001MF	10%	50V
C912	1-102-074-00	CERAMIC	0.001MF	10%	50V
		< CONNECTOR >			
CN603	⚠ *1-580-844-11	PIN, CONNECTOR (POWER)			
CN604	⚠ *1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P			
CN900	1-779-947-11	TERMINAL BLOCK S			
CN906	*1-564-511-11	PLUG, CONNECTOR 8P			
CN907	*1-564-510-11	PLUG, CONNECTOR 7P			
CN908	*1-564-508-11	PLUG, CONNECTOR 5P			
		< DIODE >			
D901	8-719-302-45	DIODE SEL1210S-D			
	4-203-258-01	HOLDER LED (D901)			
D902	8-719-929-15	DIODE HZS9.INBZ			
D903	8-719-929-15	DIODE HZS9.INBZ			
D904	8-719-109-97	DIODE RD6.8ES-B2			
D905	8-719-109-97	DIODE RD6.8ES-B2			
D906	8-719-923-60	DIODE MTZJ-T-77-9.1A			
D907	8-719-923-60	DIODE MTZJ-T-77-9.1A			
D908	8-719-923-60	DIODE MTZJ-T-77-9.1A			
		< FUSE >			
F601	⚠ 1-576-231-21	FUSE (M.B.C.) 4AMP 250V			
	⚠ 1-535-725-11	FUSE HOLDER (F601)			
		< IC >			
IC900	8-742-014-11	HYB IC SBX1981-51			
		< SOCKET >			
J900	1-764-606-11	JACK			
		< COIL >			
L900	1-412-533-21	INDUCTOR	47UH		
L901	1-412-533-21	INDUCTOR	47UH		
L902	1-408-603-31	INDUCTOR	10UH		
L903	1-408-603-31	INDUCTOR	10UH		
		< RESISTOR >			
R900	1-247-807-31	CARBON	100	5%	1/4W
R901	1-249-426-11	CARBON	5.6K	5%	1/4W
R902	1-249-437-11	CARBON	47K	5%	1/4W
R903	1-260-091-11	CARBON	220	5%	1/2W
R904	1-260-091-11	CARBON	220	5%	1/2W
R908	1-249-401-11	CARBON	47	5%	1/4W
R909	1-247-895-91	CARBON	470K	5%	1/4W
R910	1-247-895-91	CARBON	470K	5%	1/4W
R911	1-535-465-11	LEAD, JUMPER (5.0MM)			
R912	1-249-422-11	CARBON	2.7K	5%	1/4W
R913	1-249-429-11	CARBON	10K	5%	1/4W
R914	1-247-863-91	CARBON	22K	5%	1/4W
		< SWITCH >			
S601	⚠ 1-571-433-21	SWITCH, PUSH (AC POWER)			
S900	1-692-979-21	SWITCH, TACTILE			
S901	1-692-979-21	SWITCH, TACTILE			
S902	1-692-979-21	SWITCH, TACTILE			
**********					
	*A-1652-055-A	S1 BOARD,COMPLETE (KV-25K5A/25K5D/			
		********** 29K5A/29K5D)			
	*A-1652-059-A	S1 BOARD,COMPLETE (KV-25K5B/25K5B)			
		**********			
	*A-1652-054-A	S1 BOARD,COMPLETE (KV-25K5E/25K5U/			
		********** 29K5E/29K5U)			
		< CAPACITOR >			
C1103	1-164-232-11	CERAMIC CHIP 0.01MF		10%	50V

REF. NO.	PART.NO	DESCRIPTION	REMARK
C1106	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C1107	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C1108	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C1109	1-104-664-11	ELECT 47MF 20% 25V	
C1112	1-163-001-11	CERAMIC CHIP 220PF 10% 50V	
C1113	1-104-664-11	ELECT 47MF 20% 25V	
C1114	1-163-001-11	CERAMIC CHIP 220PF 10% 50V	
C1115	1-104-664-11	ELECT 47MF 20% 25V	
C1118	1-164-005-11	CERAMIC CHIP 0.47MF 25V	(KV-25K5A/25K5D/25K5E/25K5U/29K5A/29K5D/29K5E/29K5U)
	1-162-637-11	CERAMIC CHIP 0.47MF 16V	(KV-25K5B/29K5B)
C1120	1-164-005-11	CERAMIC CHIP 0.47MF 25V	
C1122	1-104-664-11	ELECT 47MF 20% 25V	
C1123	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1124	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C1127	1-163-235-11	CERAMIC CHIP 22PF 5% 50V	(KV-25K5A/25K5D/29K5A/29K5D)
	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
C1128	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	
C1129	1-163-989-11	CERAMIC CHIP 0.033MF 10% 25V	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
C1130	1-110-501-11	CERAMIC CHIP 0.33MF 10% 16V	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
C1131	1-164-005-91	CERAMIC CHIP 0.47MF 25V	(KV-25K5A/25K5B/25K5D/29K5A/29K5B/29K5D)
C1132	1-104-664-11	ELECT 47MF 20% 25V	
C1133	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1135	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	(KV-25K5B/29K5B)
C1137	1-104-664-11	ELECT 47MF 20% 25V	(KV-25K5B/29K5B)
C1138	1-163-109-00	CERAMIC CHIP 47PF 5% 50V	(KV-25K5B/29K5B)
C1143	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
C1144	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
C1145	1-163-077-00	CERAMIC CHIP 0.1MF 10% 25V	
C1146	1-164-005-11	CERAMIC CHIP 0.47MF 25V	
C1147	1-164-005-11	CERAMIC CHIP 0.47MF 25V	
C1148	1-164-005-11	CERAMIC CHIP 0.47MF 25V	
C1149	1-126-960-11	ELECT 1MF 20% 50V	
C1150	1-126-960-11	ELECT 1MF 20% 50V	
C1151	1-104-664-11	ELECT 47MF 20% 25V	
C1152	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	

REF. NO.	PART.NO	DESCRIPTION	REMARK
		< FILTER >	
CF1101	1-409-327-00	TRAP, CERAMIC (6.5MHZ)	(KV-25K5B/29K5B)
		< CONNECTOR >	
CN1101	1-766-925-11	CONNECTOR, BOARD TO BOARD 18P	
		< DIODE >	
D1101	1-216-295-00	SHORT 0	(KV-25K5A/25K5D/29K5A/29K5D)
	8-719-066-72	DIODE BB135	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
		< FERRITE BEAD >	
FB1101	1-410-396-41	FERRITE 0.45UH	
FB1102	1-410-396-41	FERRITE 0.45UH	
FB1103	1-410-396-41	FERRITE 0.45UH	
FB1104	1-410-396-41	FERRITE 0.45UH	
FB1105	1-410-396-41	FERRITE 0.45UH	
FB1110	1-412-002-31	INDUCTOR CHIP 4.7UH	
FB1111	1-412-004-31	INDUCTOR CHIP 6.8UH	(KV-25K5A/25K5D/25K5E/25K5U/29K5A/29K5D/29K5E/29K5U)
	1-412-002-31	INDUCTOR CHIP 4.7UH	(KV-25K5B/29K5B)
FB1112	1-412-002-31	INDUCTOR CHIP 4.7UH	
FB1113	1-412-002-31	INDUCTOR CHIP 4.7UH	(KV-25K5B/29K5B)
		< IC >	
IC1101	8-759-522-62	IC TDA9870	(KV-25KA/25K5D/29K5A/29K5D)
	8-759-466-48	IC TDA9875P	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
IC1102	8-759-998-98	IC LM358D	(KV-25K5A/25K5D/29K5A/29K5D)
	8-759-100-96	IC UPC4558G2	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
IC1103	8-759-394-57	IC PST593C-MMP-4P	
		< COIL >	
L1101	1-408-596-31	INDUCTOR 2.7UH	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
L1113	1-408-600-31	INDUCTOR 5.6UH	(KV-25K5B/29K5B)
L1114	1-410-671-31	INDUCTOR 47UH	
L1115	1-408-599-31	INDUCTOR 4.7UH	
L1116	1-408-599-31	INDUCTOR 4.7UH	
L1117	1-410-671-31	INDUCTOR 47UH	(KV-25K5B/29K5B)
		< TRANSISTOR >	
Q1112	8-729-620-06	TRANSISTOR 2SC3052-EF	(KV-25K5B/29K5B)

S1

REF. NO.	PART.NO	DESCRIPTION	REMARK
Q1113	8-729-620-06	TRANSISTOR 2SC3052-EF	(KV-25K5B/29K5B)
Q1114	8-729-216-22	TRANSISTOR 2SA1162-G	(KV-25K5B/29K5B)
Q1115	8-729-620-06	TRANSISTOR 2SC3052-EF	(KV-25K5B/29K5B)
		< RESISTOR >	
JR1105	1-216-295-00	SHORT 0	
JR1112	1-216-295-71	CONDUCTOR CHIP	
JR1113	1-216-295-71	CONDUCTOR CHIP	
R1101	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R1102	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R1103	1-216-035-00	RES,CHIP 270 5% 1/10W	
R1105	1-216-035-00	RES,CHIP 270 5% 1/10W	
R1108	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	(KV-25K5A/25K5B/25K5D/29K5A/29K5B/29K5D)
R1110	1-216-025-00	RES,CHIP 100 5% 1/10W	
R1111	1-216-025-00	RES,CHIP 100 5% 1/10W	
R1113	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R1116	1-216-295-00	SHORT 0	(KV25K5A/25K5D/29K5A/29K5D)
	1-216-689-11	METAL CHIP 39K. 50% 1/10W	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
R1117	1-216-073-00	RES,CHIP 10K 5% 1/10W	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
R1118	1-216-682-11	METAL CHIP 20K 0.50% 1/10W	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
R1121	1-216-065-71	RES,CHIP 4.7K 5% 1/10W	
R1122	1-216-065-71	RES,CHIP 4.7K 5% 1/10W	
R1123	1-216-065-71	RES,CHIP 4.7K 5% 1/10W	
R1124	1-216-073-71	RES,CHIP 10K 5% 1/10W	
R1125	1-216-065-71	RES,CHIP 4.7K 5% 1/10W	
R1126	1-216-073-71	RES,CHIP 10K 5% 1/10W	
R1130	1-216-073-71	RES,CHIP 10K 5% 1/10W	(KV-25K5A/25K5D/29K5A/29K5D)
R1134	1-216-073-71	RES,CHIP 10K 5% 1/10W	(KV-25K5A/25K5D/29K5A/29K5D)
R1152	1-216-035-00	RES,CHIP 270 5% 1/10W	(KV-25K5B/29K5B)
R1153	1-216-025-00	RES,CHIP 100 5% 1/10W	(KV-25K5B/29K5B)
R1154	1-216-067-00	RES,CHIP 5.6K 5% 1/10W	(KV-25K5B/29K5B)
R1160	1-216-230-00	RES,CHIP 22K 5% 1/8W	(KV-25K5B/29K5B)
R1161	1-216-190-00	RES,CHIP 470 5% 1/8W	(KV-25K5B/29K5B)
R1162	1-216-061-00	RES,CHIP 3.3K 5% 1/10W	(KV-25K5B/29K5B)
R1163	1-216-230-00	RES,CHIP 22K 5% 1/8W	(KV-25K5B/29K5B)
R1164	1-216-073-00	RES,CHIP 10K 5% 1/10W	(KV-25K5B/25K5E/25K5U/29K5B/29K5E/29K5U)
R1165	1-216-295-00	SHORT 0	(KV-25K5A/25K5D/29K5A/29K5D)
R1167	1-216-025-00	RES,CHIP 100 5% 1/10W	(KV-25K5B/29K5B)
R1168	1-216-033-00	RES,CHIP 220 5% 1/10W	(KV-25K5B/29K5B)
R1169	1-216-049-00	RES,CHIP 1K 5% 1/10W	(KV-25K5B/29K5B)
R1170	1-216-001-00	RES,CHIP 10 5% 1/10W	(KV-25K5B/29K5B)
R1171	1-216-045-00	RES,CHIP 680 5% 1/10W	(KV-25K5B/29K5B)
R1172	1-216-190-00	RES,CHIP 470 5% 1/8W	(KV-25K5B/29K5B)
R1173	1-216-049-00	RES,CHIP 1K 5% 1/10W	(KV-25K5B/29K5B)
R1174	1-216-085-00	RES,CHIP 33K 5% 1/10W	
R1175	1-216-085-00	RES,CHIP 33K 5% 1/10W	
R1176	1-216-085-00	RES,CHIP 33K 5% 1/10W	
R1177	1-216-085-00	RES,CHIP 33K 5% 1/10W	
R1178	1-216-073-71	RES,CHIP 10K 5% 1/10W	
		< CRYSTAL >	
X1101	1-567-970-21	VIBRATOR, CRYSTAL	(KV-25K5A/25K5B/25K5D/29K5A/29K5B/29K5D/29K5E/29K5U)
	1-767-813-21	VIBRATOR, CRYSTAL	(KV-25K5E/25K5U)

****

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

REF. NO.	PART.NO	DESCRIPTION	REMARK
		MISCELLANEOUS	
		**********	
⚠	1-416-073-11	COIL, DEMAGNETIZATION	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
⚠	1-406-807-11	COIL, DEMAGNETIZATION	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
	1-452-032-00	MAGNET, DISC; 10MM Ø	
	1-452-094-00	MAGNET, ROTATABLE DISC; 15MM Ø	
⚠	8-453-005-21	NECK ASSY (NA29-42)	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
⚠	1-453-264-11	TRANSFORMER ASSY, FLYBACK (NX-1680/02B4)	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
⚠	1-453-265-11	TRANSFORMER ASSY, FLYBACK (NX-1681/02B4)	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
	1-505-484-11	SPEAKER (2.6CM)	
	1-505-674-11	SPEAKER MID RANGE (8CM)	
	1-505-673-11	SPEAKER WOOFER (10CM)	
⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
⚠	1-765-286-11	CORD, POWER	(KV-25K5A/25K5B/25K5D/25K5E/ 29K5A/29K5B/29K5D/29K5E)
⚠	1-776-204-11	CORD, POWER (FILTER)	(KV-25K5U/29K5U)
	1-693-418-11	TUNER (TELE9-001A)	(KV-25K5A/25K5B/25K5D/ 25K5E/29K5A/29K5B/29K5D/29K5E)
	8-598-464-00	TUNER (FSS-BTP-AU611)	(KV-25K5U/29K5U)
⚠	8-733-254-05	PICTURE TUBE (SD-254) (M60LCS60X)	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
⚠	8-733-856-05	PICTURE TUBE (SD-269) (M68LCT60X)	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
⚠	8-451-404-23	DEFLECTION YOKE (Y25GXABA)	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
⚠	8-451-466-11	DEFLECTION YOKE (Y29GXC2B)	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
⚠	8-733-254-76	ITC	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
⚠	8-733-856-75	ITC	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
		**********	
		ACCESSORIES AND PACKAGING MATERIALS	
		**********	
	4-395-957-01	BAG, PROTECTION	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	4-029-168-01	BAG, PROTECTION	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
	4-203-677-01	INDIVIDUAL CARTON	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	4-203-670-01	INDIVIDUAL CARTON	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
	4-203-678-01	CUSHION (UPPER) (ASSY)	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	4-203-671-01	CUSHION (UPPER) (ASSY)	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
	4-203-681-01	CUSHION (LOWER) (ASSY)	(KV-25K5A/25K5B/25K5D/25K5E/25K5U)
	4-203-681-01	CUSHION (LOWER) (ASSY)	(KV-29K5A/29K5B/29K5D/29K5E/29K5U)
	4-204-064-41	MANUAL, INSTRUCTION (ITALIAN)	(KV-25K5A/29K5A)
	4-204-064-51	MANUAL, INSTRUCTION (FRENCH/GERMAN/ITALIAN/DUTCH)	(KV-25K5B/29K5B)
	4-204-092-11	MANUAL, INSTRUCTION (GERMAN/GREEK/DUTCH/ENGLISH/TURKISH)	(KV-25K5D/29K5D)
	4-204-064-71	MANUAL, INSTRUCTION (SPANISH)	(KV-25K5E/29K5E)
	4-204-064-81	MANUAL, INSTRUCTION (FINNISH/NORWEGIAN/PORTUGUESE/DANISH/ SWEDISH)	(KV-25K5E/29K5E)
	4-204-064-61	MANUAL, INSTRUCTION (ENGLISH)	(KV-25K5U/29K5U
		REMOTE COMMANDER	
		**********	
	1-475-765-11	COMMANDER STANDARD TYPE (RM-883)	

****